 




# ZEBRONICS

ALWAYS AHEAD

Since 1997

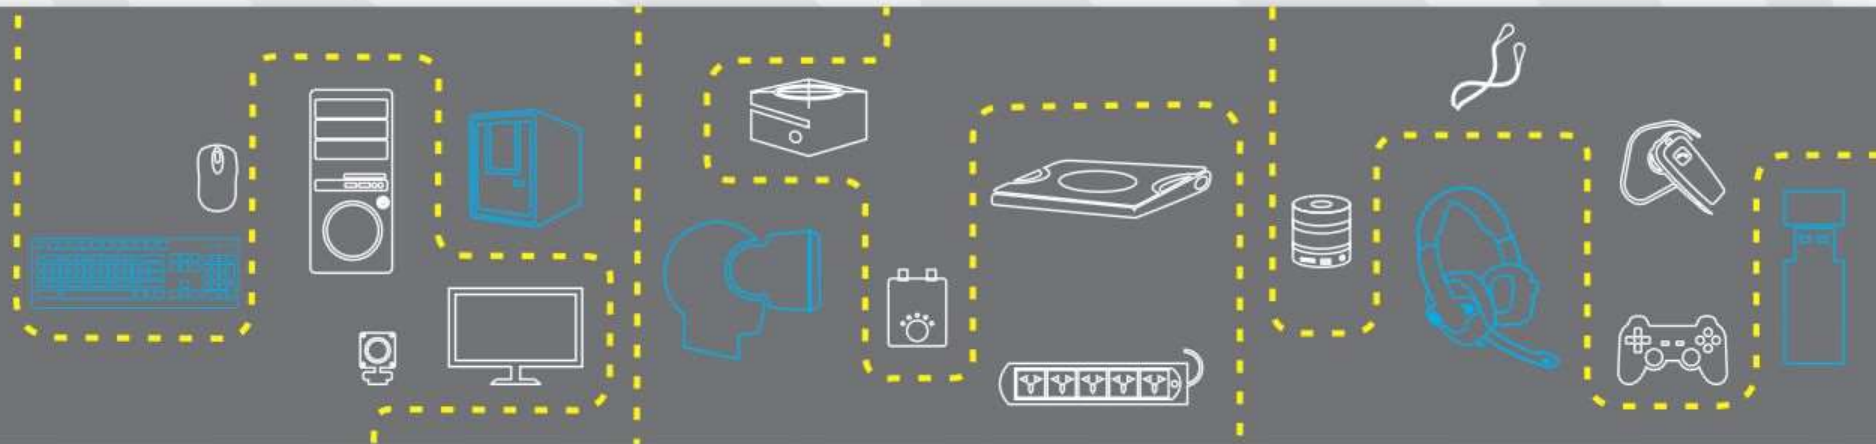

IT & Gaming Peripherals • Sound Systems • Surveillance • Mobile & Lifestyle Accessories

CELEBRATING  
**21<sup>st</sup>** YEAR  
excellence • quality • reliability

 **WINNER**  
**75** INDUSTRY  
**AWARDS**



ZEB-MONIC  
5.1 Multimedia Speaker


- 5.1 Speaker
- Satellites with unique design
- 140W RMS
- 8" Sub Woofer Drive
- Deep Bass & Rich Treble
- LED Display
- Remote Control
- Texture Finish
- Wall Mountable Satellites




## Connectivity

- BT
- FM Radio
- AUX
- AC-3 (5.1 Input)
- USB
- SD Card




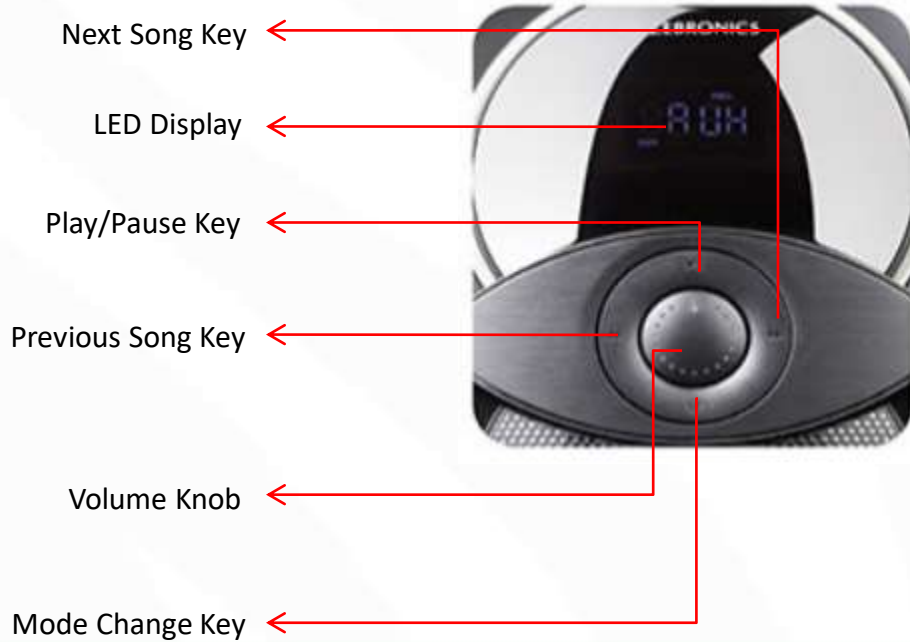

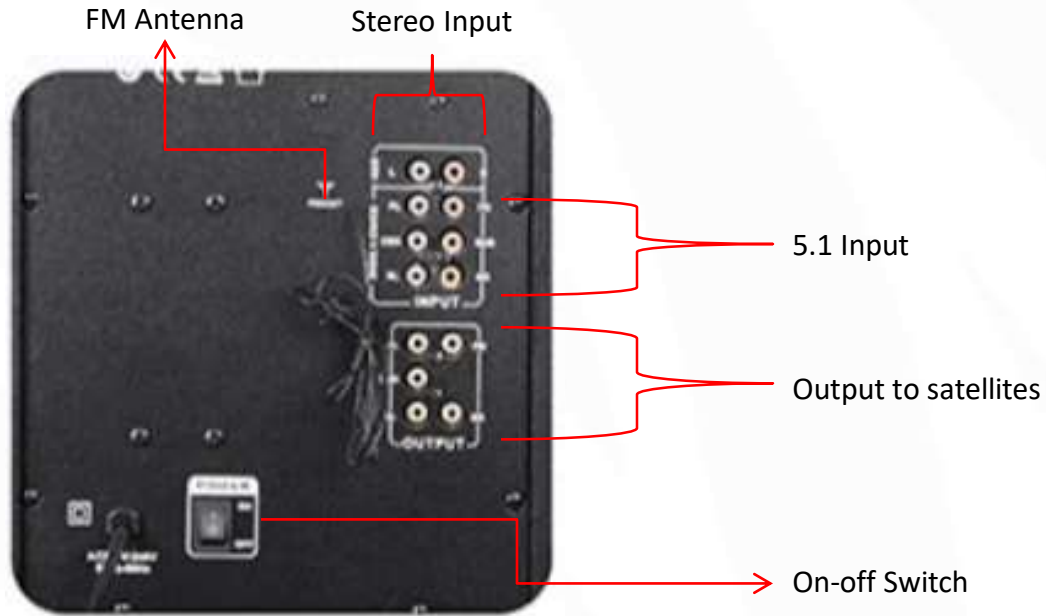

## BT Connectivity

- Turn on the speaker.
- Make sure the speaker is in BT Mode.
- Search for nearby BT devices in your mobile.
- Tap on BT Name “ZEB-MONIC” to connect.

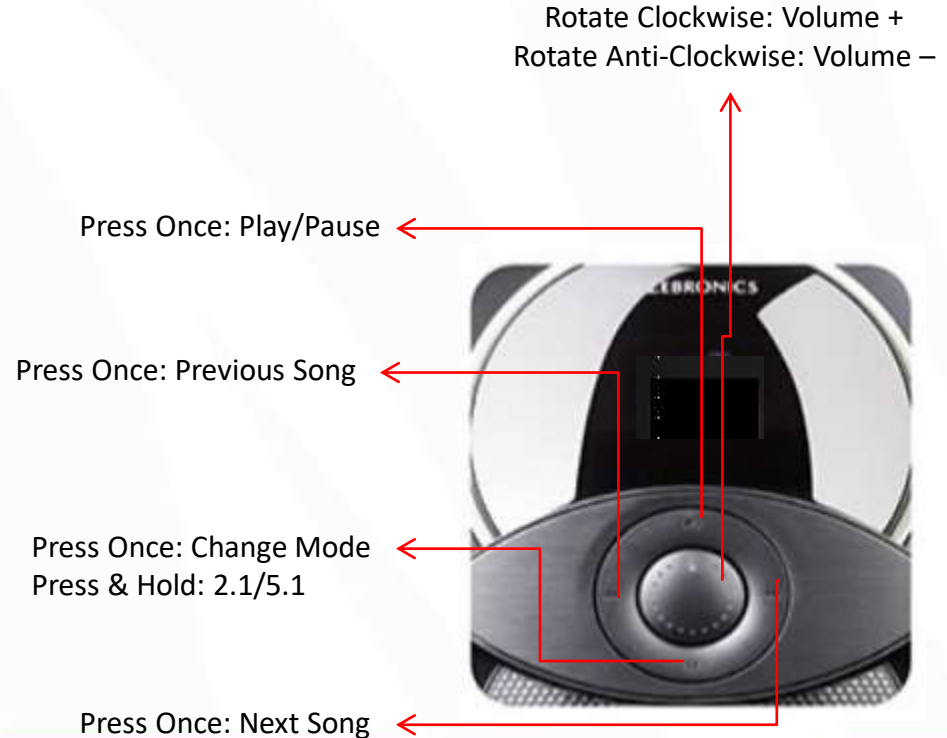

## FM Radio

- Switch the Speaker to FM Mode by pressing the Mode button.
- Press & Hold the Play/Pause button once to scan the available FM channels.
- Once the scanning is done, the speaker will start playing from first saved channel.



Press Once: Mute/Unmute  
Press & Hold: Auto Scan

Rotate Clockwise: Volume +  
Rotate Anti-Clockwise: Volume -

Press Once: Next FM Channel

Press Once: Change Mode  
Press & Hold: 2.1/5.1

Press Once: Previous FM Channel

### AUX Mode

- Once the speaker is in AUX Mode, connect the AUX cable to the speaker & connect the other ends of the cable to a audio source (Eg. Computer, mobile).
- Now the songs played by the audio source can be heard through the speaker.



Press Once: Mute/Unmute

Rotate Clockwise: Volume +  
Rotate Anti-Clockwise: Volume -

Press Once: Change Mode  
Press & Hold: 2.1/5.1

### DVD Mode

- Once the speaker is in DVD Mode, connect the one end of the 5.1 cables to the speaker & connect the other ends of the cables to the 5.1 output of a audio source (Eg. DVD Player, BluRay Player).
- Now the songs played by the audio source can be heard through the speaker.



Press Once: Mute/Unmute

Rotate Clockwise: Volume +  
Rotate Anti-Clockwise: Volume -

Press Once: Change Mode  
Press & Hold: 2.1/5.1

### USB/SD Card Mode

- When the speaker is on, insert the USB/SD card to the speaker.
- The speaker will detect the USB/Micro SD card automatically & play the songs from the USB/SD card.



Press Once: Play/Pause

Rotate Clockwise: Volume +  
Rotate Anti-Clockwise: Volume -

Press Once: Next Song

Press Once: Change Mode  
Press & Hold: 2.1/5.1

Press Once: Previous Song



- Output Power (RMS): Subwoofer: 70 Watts x 1  
Satellite: 14 Watts x 5  
Total: 140 Watts
- Driver Size: Subwoofer: 20.32 cm (8") x 1  
Satellite: 7.62 cm (3") x 5
- BT Version: 2.1 + EDR
- Max Supported USB/Micro SD memory size: 32GB
- Product Dimension (WxDxH): Subwoofer: 231 x 382 x 384mm  
Satellite: 137 x 100 x 186mm
- Net. Weight: Subwoofer: 9.43kg  
Satellite: 400g x 5  
Total: 11.43kg

- Subwoofer: 1 unit
- Satellite: 5 units
- Remote: 1 unit
- User manual: 1 unit
- Input cable (RCA - RCA ): 2 units
- Input cable (RCA - 3.5mm): 1 unit

Thank You



[www.zebronics.com](http://www.zebronics.com)