 




ZEBRONICS

ALWAYS AHEAD

Since 1997

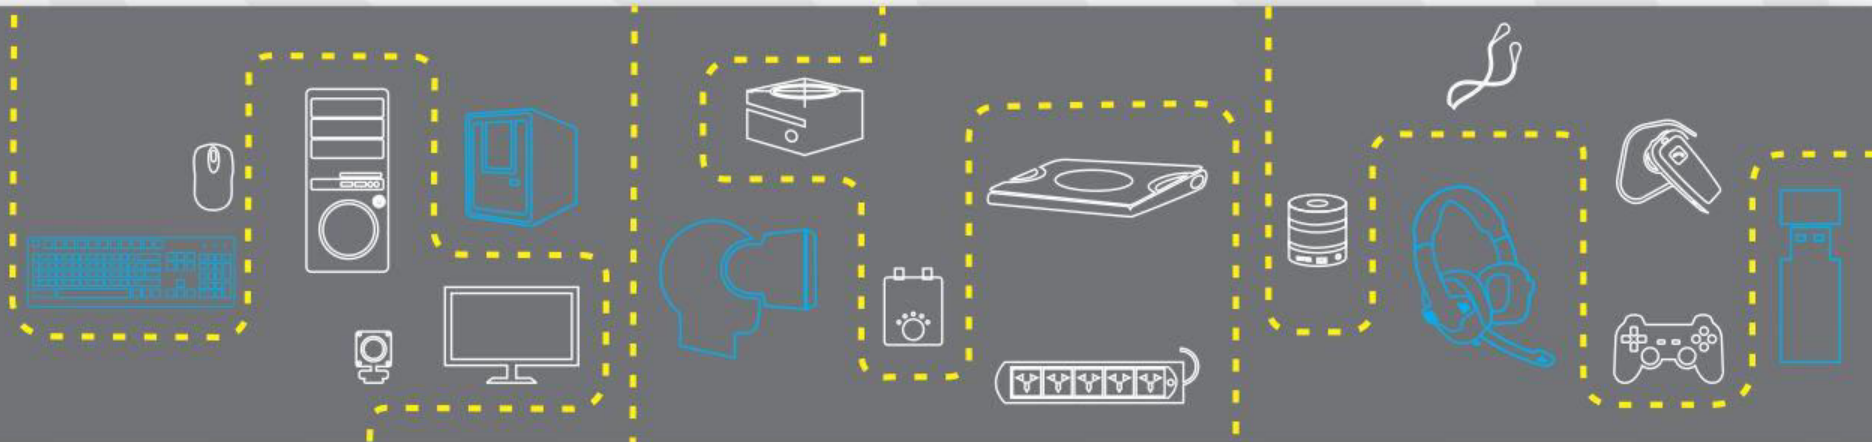

IT & Gaming Peripherals • Sound Systems • Surveillance • Mobile & Lifestyle Accessories

CELEBRATING
21st YEAR
excellence • quality • reliability

 **WINNER 75** INDUSTRY AWARDS



ZEB-MOVING MONSTER X10 Trolley DJ Speaker

MRP ₹ 9999/-

- Trolley Design
- Built-in Rechargeable Battery
- 8hrs* Playback Time
- Wooden Enclosure
- DJ Mixer
- Dual BT
- Dual USB
- 2 Way Speaker: 10" Full Range Drive & 1" Tweeter
- 5 Band Equalizer
- LED Display
- RGB Lights
- Remote Control

Mode A

- BT
- USB
- Micro SD Card
- FM
- AUX

 
Mode B

- BT
- USB



Keys & Ports


ZEB-MOVING MONSTER X10

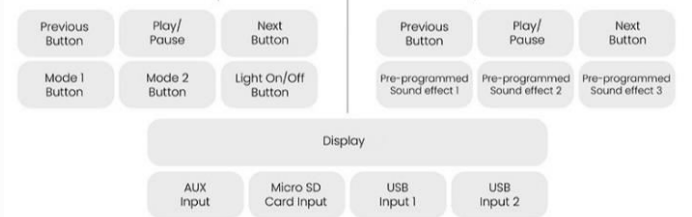



BT Connectivity

 - Turn on the speaker.
- Make sure that the Mode A or Mode B is in BT Modes (The product has dual BT).
- Search for nearby BT devices in your mobile.
- Tap on BT Name “ZEB-MOVING MONSTER X10A or ZEB-MOVING MONSTER X10B” to connect.

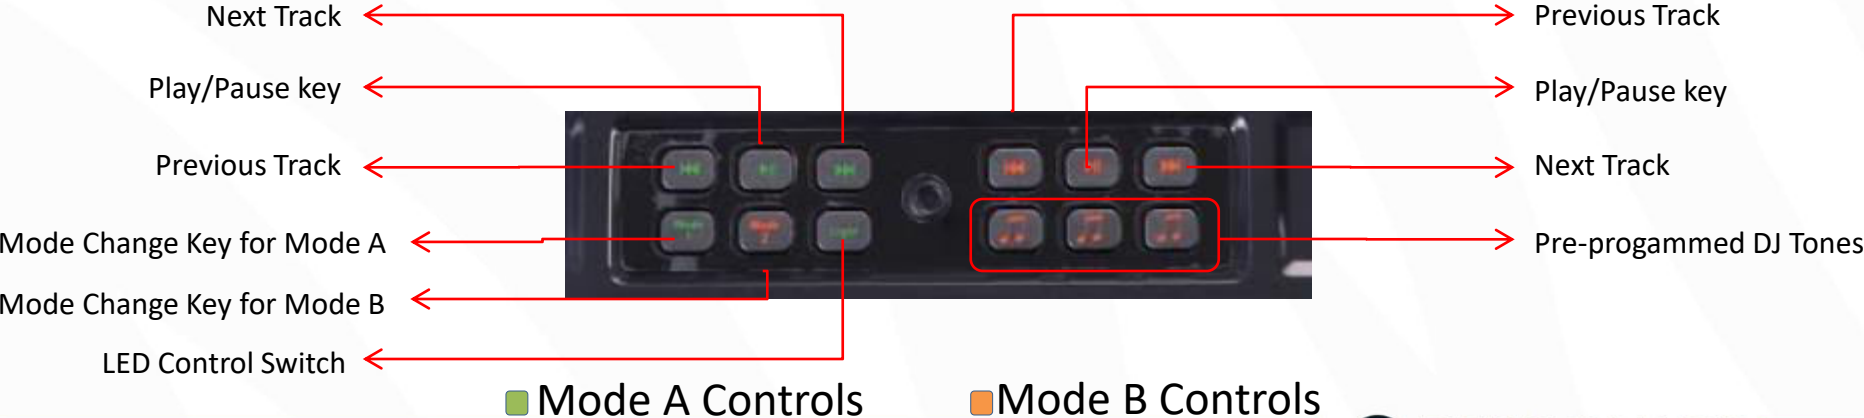

BT Connectivity



5 Band Equalizer

 
On-Off Switch

DJ Mixer Control
Rotate anti-clockwise: Mode A
Rotate clockwise: Mode B

Volume Control
Rotate anti-clockwise: Vol-
Rotate clockwise: Vol+

USB Mode

- When the speaker is on, insert a pendrive to the USB 1 or USB 2 of the speaker.
- The speaker will detect the pendrive automatically & play the songs from the it.

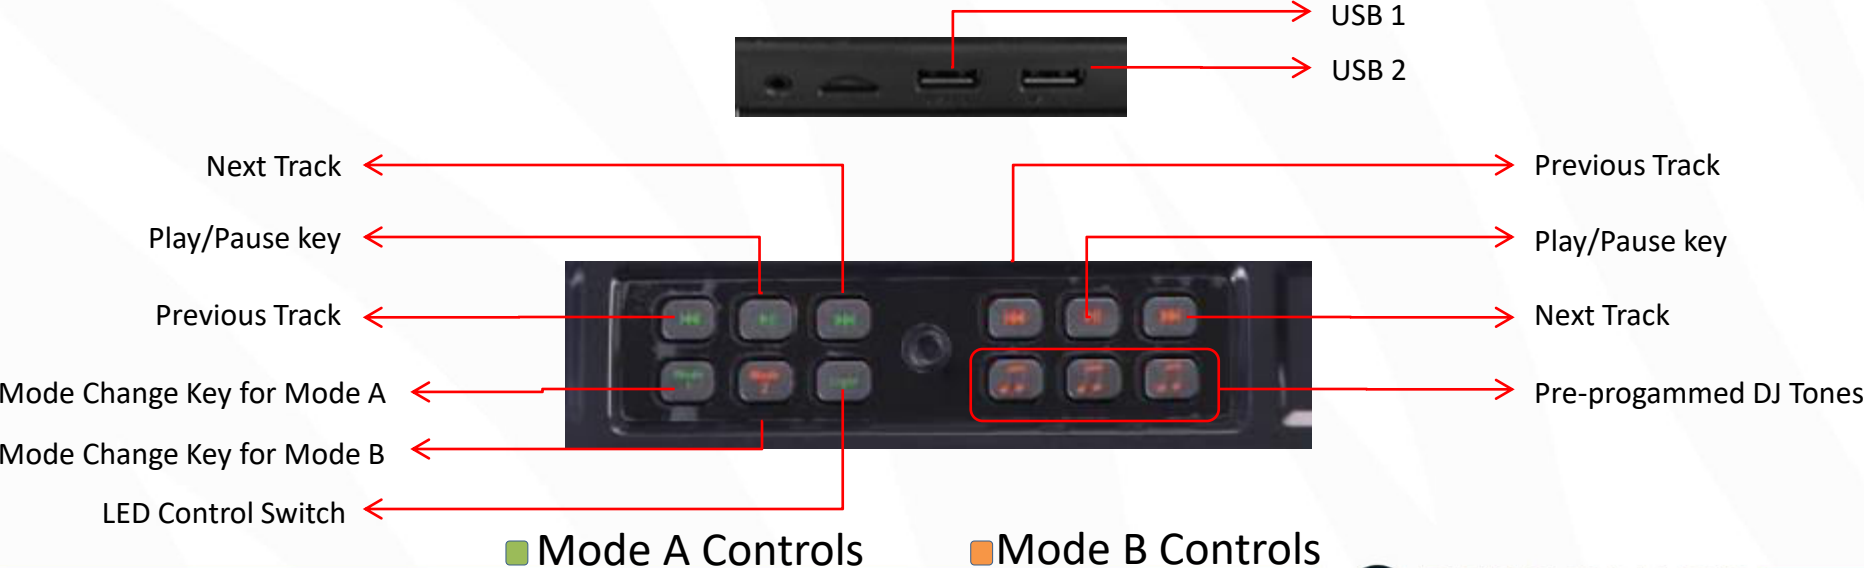

USB Mode



5 Band Equalizer

 
On-Off Switch

DJ Mixer Control
Rotate anti-clockwise: Mode A
Rotate clockwise: Mode B

Volume Control
Rotate anti-clockwise: Vol-
Rotate clockwise: Vol+

Micro SD Card Mode

- When the speaker is on, insert the Micro SD Card to the speaker
- The speaker will detect the Micro SD Card automatically & play the songs from it.

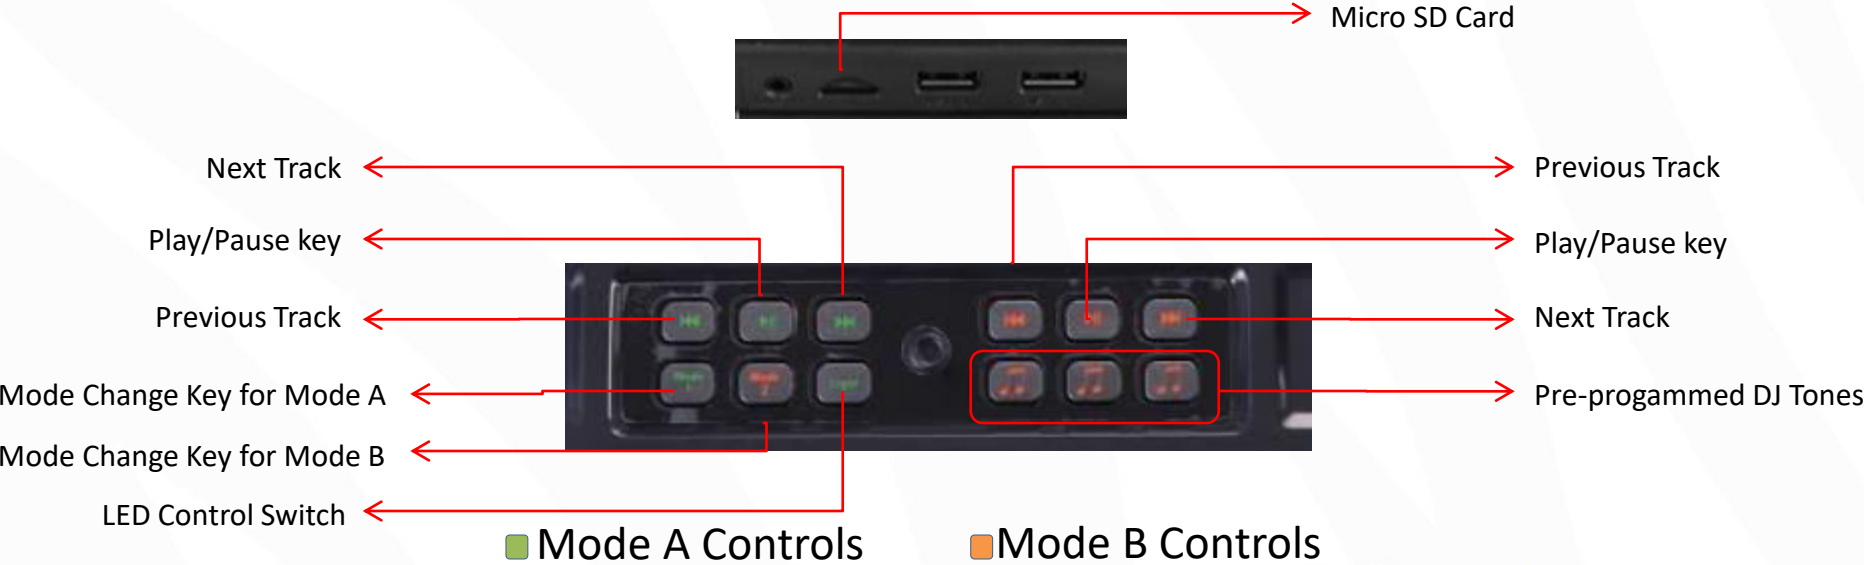

Micro SD Card Mode



5 Band Equalizer

On-Off Switch

 
DJ Mixer Control
Rotate anti-clockwise: Mode A
Rotate clockwise: Mode B

Volume Control
Rotate anti-clockwise: Vol-
Rotate clockwise: Vol+

FM Radio

- Switch the speaker to FM Mode by press Mode 1 Key.
- Press & Hold the Play/Pause key to auto scan the available FM Channel.
- Once the scanning is done, the speaker will start playing the first saved FM Channel.

Note: For better FM Reception, please use the provide FM antenna

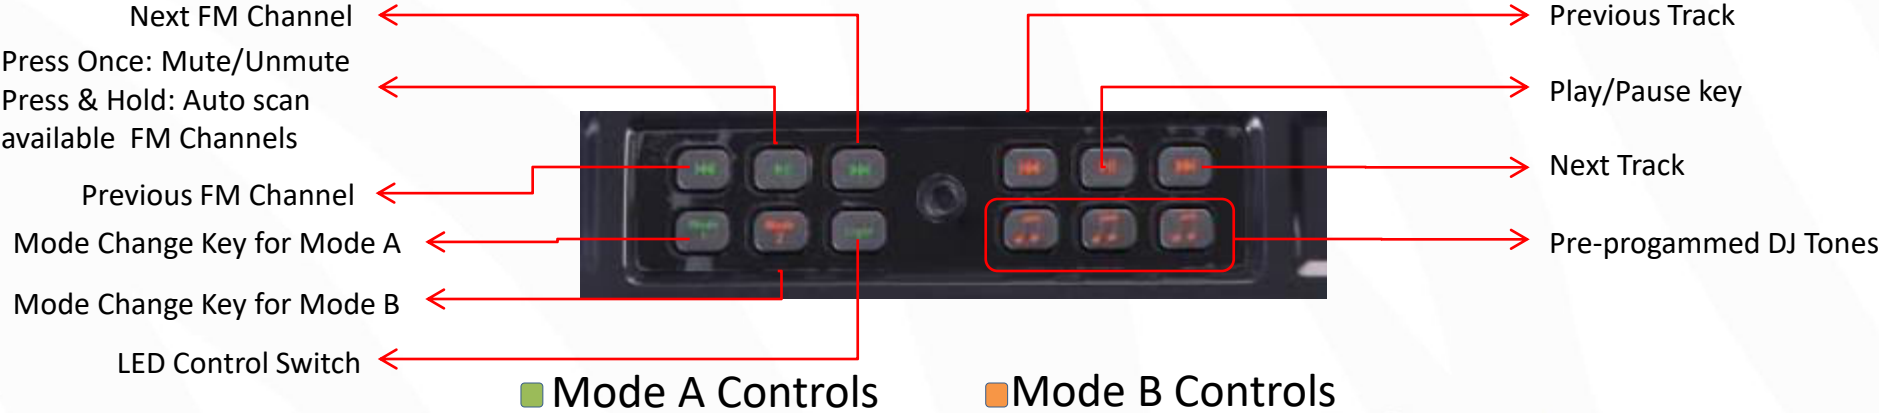

FM Radio



5 Band Equalizer

 
On-Off Switch

DJ Mixer Control
Rotate anti-clockwise: Mode A
Rotate clockwise: Mode B

Volume Control
Rotate anti-clockwise: Vol-
Rotate clockwise: Vol+

AUX Mode

- Once the speaker is in AUX Mode (In Mode A), connect the AUX cable to the speaker & connect the other end to a audio source (Eg. Computer, mobile).
- Now the songs played by the audio source can be heard through the speaker.

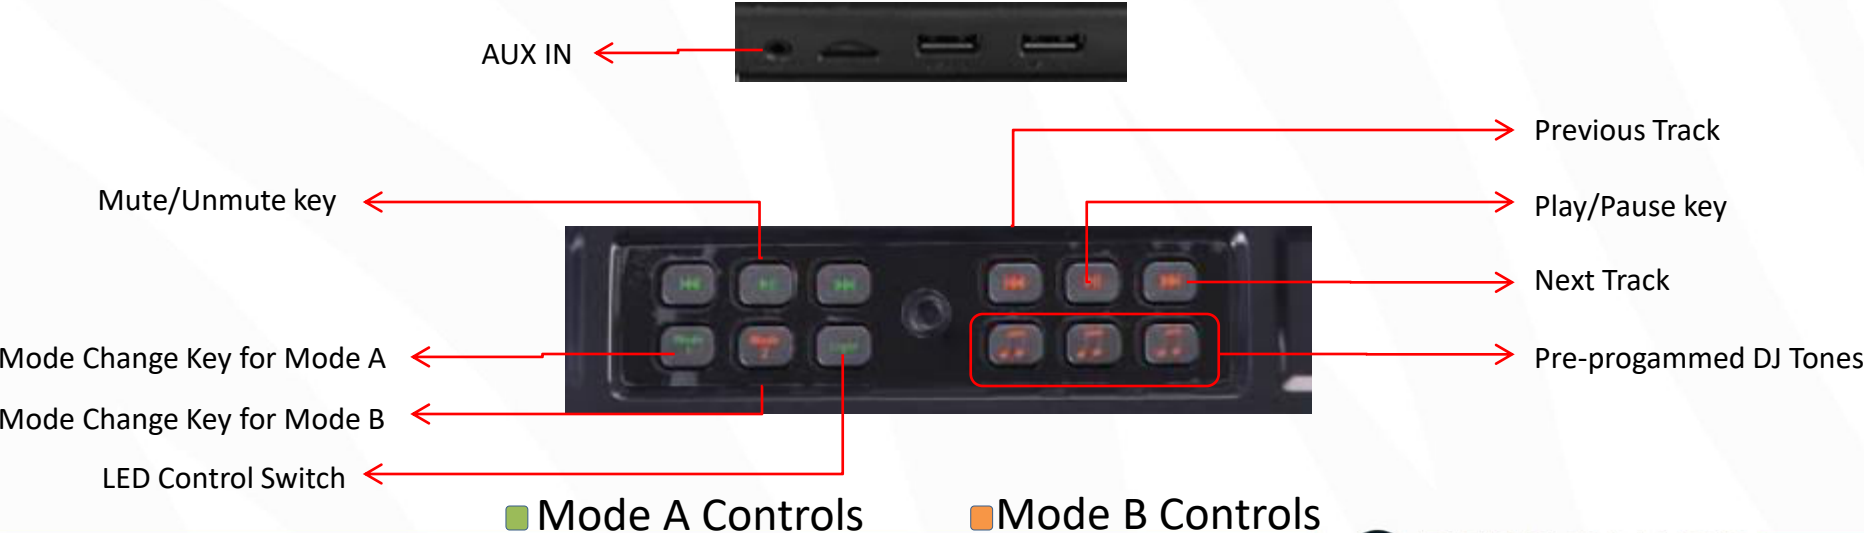

Wireless Mic

- Insert two AA batteries to the Mic.
- Turn on the Mic & the Mic would start to function.

Wired Mic

- Insert the wired mic jack to the Microphone input of the Speaker
- Turn on the Mic & the Mic would start to function.

- Driver Size
Full range: 25.4cm(10")
Tweeter: 2.54cm(1")
- File Format Support(USB/mSD): MP3, WMA, WAV
- Line Input: 3.5mm
- Max Supported USB/mSD Memory Size: 32GB
- BT Name: ZEB-MOVING MONSTER X10A/ZEB-MOVING MONSTER X10B
- BT Version: 2.1+EDR
- Product Dimension (W x D x H): 321 x 303 x 584 mm
- Net. Weight: 6.9kg

- Speaker: 1 unit
- Remote: 1 unit
- Wireless Mic: 1 unit
- User manual: 1 unit
- Input cable: 1 unit
- Power adapter: 1 unit

Thank You



www.zebronics.com