

Cleaning Kit



ZEBRON

ZEBRC

www.zebronics.com

Dear Customer,

Thank you for purchasing **ZEB-CK500** Cleaning Kit. Please read this user manual carefully before operation & save this user manual for further reference.

Note:

• Avoid the usage of this product at the high temperature and high humidity environment.

• Avoid the self-disassembly of the products or it results in voiding the product's Warranty.

• Please charge the product with DC 5V power adapter

To know more about Terms and conditions for warranty policy, please visit

https://zebronics.com/pages/warranty-policy

Features

- Desktop Vacuum Cleaner
- All in 1 Cleaner Kit
- Dust Blower
- Refillable Spray
- Spray & Wipe
- Tubular Storage
- Precise Cleaning
- For Smartphones / Tablets / Cameras /

Laptops / Keyboards / Earphones etc.,

- Cleaners & Brushes
- 6 in 1 Extender
- Microfiber Screen Cleaner on Lid
- Press to Open Design
- Soft Lens Cleaning Pad

Specifications

: 15000 rpm (Max.)
: 6.15 x 6.1 cm
: <35 dB
: 2 Levels
: 1.5W
: DC 5V, 0.5A (Max.)
: 20 cm³
: 5ml
: ABS Body
: 6.1 x 13 cm
(Dia x H)
: 190g

Package Contents

:1U
:2U
:1U
:1U

Product Representation



- 1. Product Storage Box
- 2. Workbench Vacuum Cleaner
- 3. Microfiber Screen Cleaner on Lid
- 4. Air Blower
- 5. Air Blower Extension Short Rod
- 6. Accessory Extension Rod
- 7. Refillable Spray Bottle
- 8. Flat Hard Bristle Brush
- 9. Flat soft Bristle Brush
- 10. Keyboard Switch Puller
- 11. Sim Ejector Tool
- 12. Keyboard Keycap Puller

- 13. Small Elbow Brush
- 14. Earphone Compartment Cleaner
- 15. Nib Cleaner
- 16. Short Head Ear Tips Cleaner
- 17. Soft Bristle Brush
- 18. Earphones Compartment Brush
- 19. Soft Lens Cleaning Pad
- 20. Air Blower Extension
- Long Rod
- 21. Vacuum Cleaner Extension Long Rod
- 22. Vacuum Cleaner Extension Short Rod

Vacuum Cleaner Description



Charging Instructions :

Kindly Charge the unit before using it . and use Type C cable with required power DC 5V, 0.5A.

Usage Instructions:

• **Power On :** Press the power button once. The vacuum cleaner will start operating at the first speed level.

• Increase to Second Speed : Press the power button a second time. The vacuum cleaner will shift to the higher, second speed level.

• **Power Off :** Press the power button a third time. The vacuum cleaner will turn off.

Cleaning the Bin

• To detach the vacuum bin, rotate towards the direction as shown in image 1.



• After removing the bin, clean it thoroughly.



• To reattach, align the bin with its slot and rotate towards the opposite direction as shown in image 2 until the lock clicks in.

ISO 9001:2015 certified company www.zebronics.com