

# ZEBRONICS

Hair Straightener

**ZEB HS100**



## User Manual

[www.zebronics.com](http://www.zebronics.com)

Dear Customer,  
Please refer to the user manual of **ZEB-HS100** - Hair Straightener for using the product optimally.

**Warning:**

- Keep this appliance out of the reach of children.
- Do not use the hair straightener near bathtubs, basins, sinks where it is prone to get in contact with water or with wet hands to avoid electric shock.
- Always switch off and unplug the device immediately after use. Do not leave it unattended when switched on.
- The plates get extremely hot (nearly 210°C). Avoid touching the plates or any hot parts to prevent burns. Allow the straightener to cool completely before storing.
- Do not place the hair straightener on or near flammable materials (towels, curtains, paper) when switched on or still hot.
- Do not operate the appliance if the cord or plug is damaged, the unit has been dropped, or it is malfunctioning. Stop use immediately under these conditions.
- Clean the plates with a soft, damp cloth only when the device is completely cool.
- Do not use chemicals or immerse the hair straightener in water.
- Keep away from children and do not use near water.

- Avoid wrapping the cord around the appliance to prevent damage.
- Do not attempt to clean or repair the appliance yourself. Please take it to the Zebronics Service Centers.

<https://zebronics.com/pages/warranty-policy>

### **Features:**

- Swift-Heat Technology  
(Heat Up to 100° in 30 sec)
- 360° Swivel and Tangle Free Cord
- Ergonomic Design
- Wider Plate for Convenient use
- Easy locking plates
- Eco-friendly/Low Energy Consumption
- Minimal Hair Damage
- Reduces Frizz & Enhances Shine
- Suitable for All Hair Types
- LED Indicator

### **Specifications:**

Input Voltage AC : AC 110-240V 50/60Hz  
Operating Wattage : 40W  
Heat-up Time to  
Max Temp(minutes) : 2-3 minutes  
Temperature  
Accuracy & Tolerance :  $\pm 15^{\circ}\text{C}$   
Temperature Settings :  $210^{\circ}\text{C}$   
Power cord length : 1.8 meter

## Product dimension

(W x D x H) : 32 x 6.3 x 6.4 cm  
(Unfolded)  
32 x 6.3 x 2.8 cm  
(Folded)

Net. Weight : 302 g

Country of origin : PRC

## Package Content

Hair Straightener : 1U

QR Code Guide : 1U

## Product Description :



## **Usage Instructions**

To use the product safely and effectively, follow these step-by-step instructions :

### **1. Preparation :**

- Ensure your hair is clean, completely dry, and free of tangles before starting.
- Brush your hair thoroughly.
- Divide your hair into sections depending on thickness.

### **2. Power On and Heating :**

- Plug the straightener into an electric socket.
- Switch the straightener on using the ON/OFF switch. The power indicator light will illuminate, and the device will begin heating.
- Allow the straightener to heat up.

### **3. Straightening Process :**

- Take one section of hair and place it between the straightening plates.
- Press the handle and close the plates firmly and slowly glide the straightener down the hair in a smooth motion. Please do not hold for more than 2 to 5 seconds per section.
- Repeat on all sections until the desired region of the hair is straightened.

### **4. After Use :**

- Switch off the appliance and unplug it from the socket.
- Allow the straightener to cool down completely before storing.
- Use the locking mechanism for safe storage.

