

ZEBRONICS

Smart LED Projector

PixaPlay[®] 67



User Manual

www.zebronics.com

Dear Customer,

Thank you for purchasing the **ZEB-Pixaplay 67** Smart LED Projector. Please read the user manual carefully before usage& save it for future reference.

Note:

- *To provide a stable power supply, kindly use the cable provided with the product and connect to **AC 100-240V, 50/60 Hz** powersource.*
- *Avoid the self-disassembly of the product as it results in the failure of Warranty.*
- *Avoid looking directly at the projector lens while it is active.*
- *Make sure that the projector's air vents are not blocked while in use. The device must be kept in a well ventilated surrounding for proper functioning.*
- *It is recommended to power OFF the projector after a continuous usage of 6 hours.*
- *Place the projector away from water or other liquids. Avoid water accumulation and ensure good ventilation.*
- *In case of enquiry regarding the projector, email us at enquiry@zebronics.com or contact us at 044 40000004*

Features

- Home Theater Projectors for Movies, TV & Gaming etc..
- Built in Speaker
- Wide Compatibility
- Auto Focus Technology
- Auto Keystone Adaptation*
- Remote Control (BT + IR)
- Miracast
- IOS Screen mirroring
- Dual band Connectivity (2.4GHz & 5GHz)
- FHD1080p (Native)
- APP Support
- Cradler Stand for 200° Tilt adjustment
- 4K support

Specification

Screen size	:101cm -381 cm
Native Resolution	:1920 x1080 FHD
Max. Supported Resolution	: 4K
Android version	:13
RAM	:2 GB
Core Processor	:Quad Core Processor

 
 
Storage (ROM)	:16 GB
Wi-Fi Connectivity	: Dual band Connectivity (2.4GHz & 5GHz)
Bluetooth Version	:v5.2
Lifespan	:50,000h
Brightness	:8000 lumens
Contrast ratio	:2500:1
Projection Distance	:1.2m - 4.5m
Port Interface	: HDMI x1, USB x1, AUX OUT x1, AV x1, RJ45 x1
Video file format	: FLV , MP4 , MKV, MOV, MPG , VOB
Input Voltage	:AC 100-240V, 50/60Hz
Product Dimension	: 24 x 18.5 x 20.7 cm (W x D x H)
Package Dimension	: 25.4 x 25 x 15.8 cm (W x D x H)
Net. weight	:2.0 kg
Country of Origin	: P R C

Package Contents:

Projector	:1 U
Remote Control	:1 U
Power Cord	:1 U

- Cotton Swab Pack : 1 U
- HDMI Cable : 1 U
- QR Code Guide : 1 U

Product Description

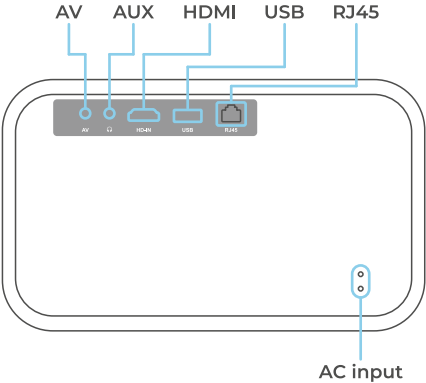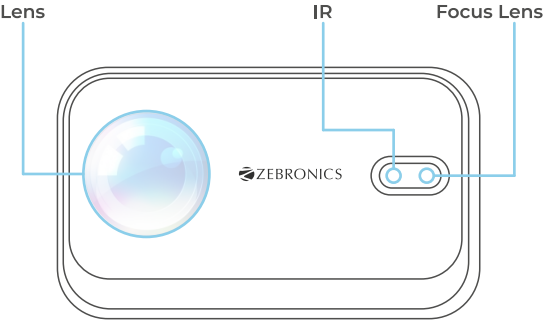

AV: Connect the 3.5mm AV in.


AUX: Connect the 3.5mm audio device for audio output

HDMI IN: Display the picture of laptop and TV box through HDMI-IN.

USB: Open and access files from the connected USB device in the file manager and media center.


Rj45: 100M Ethernet.

 Remote Control

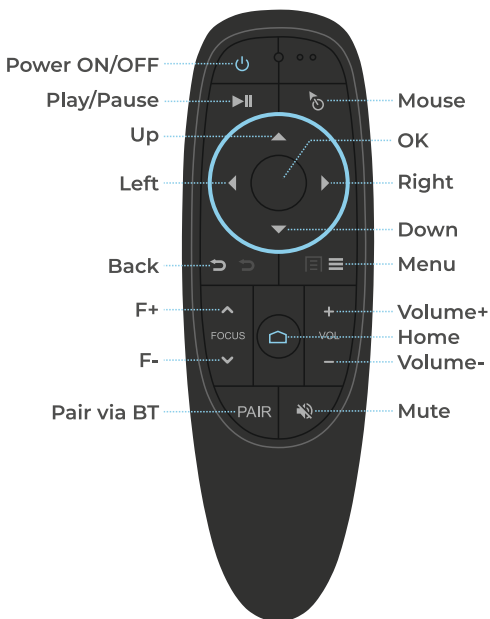

Setting up the Projector

 
- 1 Plug the power cord into the projector's AC power input. Insert the other end of the power cord into a standard wall power socket. Ensure the wall socket is turned on to supply power.
- 2 Please place the projector on a flat surface to ensure projection. Now turn the projector on by pressing the power button either on the panel or on the remote.
- 3 The projector should be aligned straight to the screen/the place of projection.

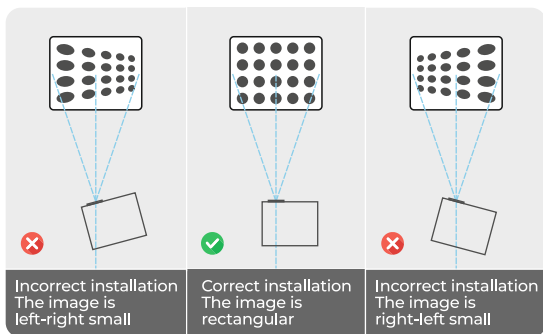

Projection Distance & Size

The recommended projector screen size is 101 - 381 cm. For an improved viewing experience, it is recommended to use the


projector in a room that provided as much darkness as possible.

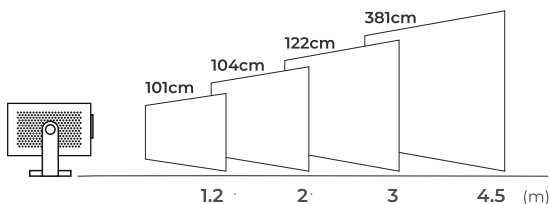

Keystone Adjustment


- Select "Settings" and go to "Keystone Correction."
- To make a manual adjustment, turn off the "Auto" option.
- Once the "Auto" option is off, you can adjust the keystone correction manually.
- To enable automatic keystone correction, turn on the "Auto" option.

Auto Keystone

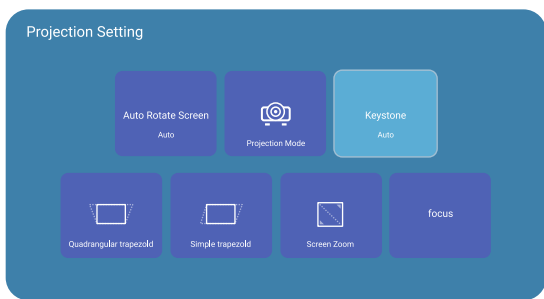


Manual keystone

 Select and enter Quadrangular trapezoid, use the “OK” key of the remote control to switch the points to be adjusted, and then use the “direction key” to adjust different points. The “menu” key can reset the display effect, and the “return” key can return to the upper screen and save the adjustment effect.

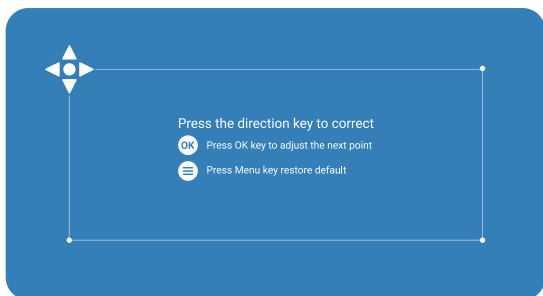


Projection Mode:

Select and enter “Projection Mode”, there are four options: “Rotate Front”, “Rotate Ceiling”, “Rotate Rear” and “Rotate Rear Ceiling”.

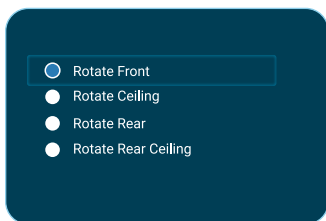

Android Home

- 1. Once the Projector is turned on, the projector will lead you to the home screen.
- 2. The Home Screen displays apps, settings, menu, Network, source, file browser.

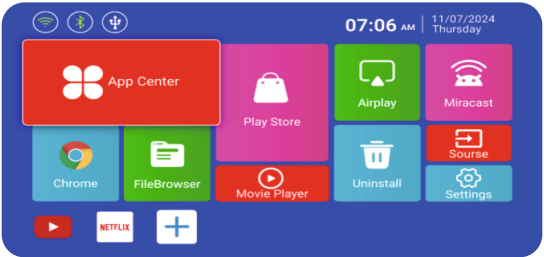


Settings

Switch to home page, open the settings main menu. This menu contains sub menu like...


USB Interface

 Plug the USB to the port present at the rear side of the projector. Now navigate to the USB tab present in the home page.

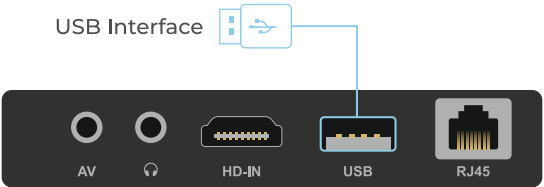

HDMI Interface

Once the HDMI is connected to the projector, you will need to select the specific signal source as input. After connecting, the content played on the source will be streamed on the projector.

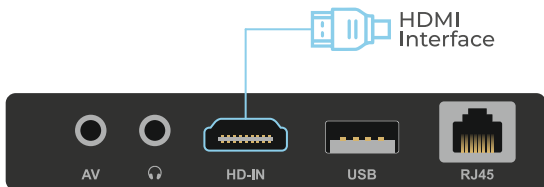

Bluetooth Settings

1. Go to Settings > Bluetooth Settings.
2. Turn the Bluetooth connection on and search for nearby bluetooth devices.
3. Choose the desired bluetooth device to pair and connect.

File Manager

You can view external storage devices such as USB drives in the file manager.



Network Settings

Enter **Settings > Networking setting**, in the Wi-Fi settings interface, connect to a network using one of the following methods:

- Select the target Wi-Fi network from the available network list. If the network is encrypted, you'll need to enter the password.
- Pull down the page, select **“Add new network”**, and follow the on-screen prompts to enter the network name and access password to complete the Wi-Fi connection.



ISO 9001:2015 Certified Company
www.zebronics.com

