



ZEBRONICS
ALWAYS AHEAD

Thermal
Laminator
A3L1



User Manual

www.zebronics.com

Thank you for purchasing the **ZEB-A3L1** Thermal Laminator. Please read the user manual carefully before usage & save it for future reference.

Note:

- *Keep it away from the pet & children while in use.*
- *Avoid the self-disassembly of the product as it results in the failure of Warranty.*
- *Keep the machine away from heat & water source.*
- *Remove the staples before inserting it into the machine*

Features

For business and home use

Hot & cold mode

Compatible size upto A3

Laminates 330mm/min

Anti-Jam System

Bubble free & Smooth lamination

2 Rollers

Sturdy & Durable

Excellent gumming quality

Silent & effective drive

LED Indicators

Shock proof

Quick warmup

Specifications

Model : ZEB-A3L1

Power Consumption : 350W (Max.)

Laminating Width : 330mm (Max.)



Lamination Thickness : 0.4mm (Max.)

Paper Thickness	: 0.1mm
Pouch Thickness	: 75-125 microns (Min. - Max.)
Lamination Type	: Thermal Pouch
Max. Laminating Speed	: 330mm/min
Heating System	: Quartz Tube
No. of Rollers	: 2nos.
Roller Diameter	: 14mm
Warm-up time	: 2min
Usage time after warmup	: 10min
Supported paper Sizes	: A3/A4/A5/A6
Cable Length	: 1m
Product Dimension	: 450 x 65 x 90mm
Product Weight	: 1kg

Package Content

Laminator	: 1 U
QR Code Guide	: 1 U

Product Description

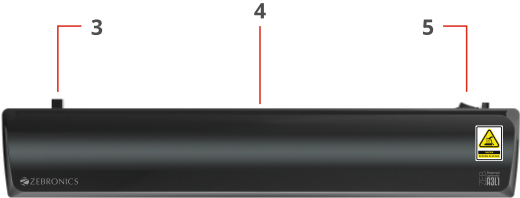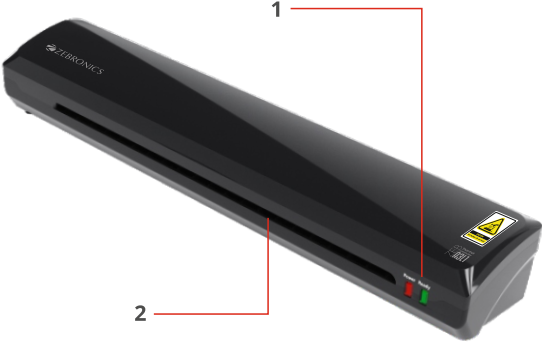

- 1. LED Indicators
- 2. Sheet Entrance
- 3. Jam Release
- 4. Sheet Exit
- 5. Power Switch

How to use:

1. Place it on a flat surface.
2. Kindly make sure there is enough space & do not keep anything beside the laminator.
3. After securing it properly, plug it into the power socket & power it ON.
4. You will be indicated with a RED LED, meaning it is getting heated up.
5. After it is getting heated, it will indicate with GREEN LED, meaning ready to laminate, similar process is followed for the cold lamination process.
6. Now securely place the document into the pouch & pass it through the machine.
7. Before inserting it into the machine, kindly make sure that the sealed edge is sent into the machine to avoid collapse.
8. While exiting the process, kindly make sure to remove if any document is inside the machine. For the best quality & to prevent from jamming remove the pouch immediately.

Jam Release Function:

When the inserted laminating pouch is struck / jammed, press the jam release button and remove the pouch gently from the laminating machine.

Troubleshooting:

PROBLEM/TROUBLE	POSSIBLE CAUSE	SOLUTION
No control panel illumination	Machine not switched on	Switch on machine at rear next to plug inlet and at the wall socket
Pouch does not completely seal the item	Item maybe too thick to laminate	Check pass through thickness is correctly selected and pass through again
	Temperature maybe incorrect	Check pouch thickness is correctly selected and pass through again
Pouch has waves or bubbles	Temperature setting maybe incorrect	Check pouch thickness is correctly selected and pass through again
Pouch is lost in the machine	Pouch is jammed	Press reverse button the laminating pouch film will return. Turn off and unplug the machine, waiting for machine to cooling, open the machine clean it.
Jamming	Pouch is jammed	
	Pouch was used 'open end' first	
	Pouch was not centered on entry	
	Pouch was not straight upon entry	
Empty pouch was used		
Pouch is damaged after machine	Damaged rollers or adhesive on rollers	Pass cleaning sheets through the machine to test and clean rollers

Maintenance:

1. Always after usage make sure to unplug and keep it in a normal environment to make it cool.
2. When the machine is not in use for a long time then cover it with a cloth or cover.
3. Do not laminate anything more than 0.6mm thickness for a best seal.