



Thermal Laminator **ZEB-A3L3**



User Manual

www.zebronics.com

Dear Customer,

Thank you for purchasing **ZEB-A3L3** Thermal Laminator. Please read the user manual carefully before usage & save it for future reference.

Note:

- *Keep it away from the pet & children while in use.*
- *Avoid the self-disassembly of the product as it results in the failure of Warranty.*
- *Keep the machine away from heat & water source.*
- *Remove the staples before inserting it into the machine.*

<https://zebronics.com/pages/warranty-policy>

Features:

- For business and home use
- Hot & Cold Lamination with LED indicators
- Temp settings for various film thickness
- NTC Overheat Protection
- Bubble free & smooth lamination
- Anti Jam Lever
- Two way lamination with 2 rollers
- Shock proof
- Excellent gumming quality

- Silent & effective drive
- Quick Warm-Up
- Auto Shut Off*

*After 30 mins of inactivity

Specification

Model Name	: ZEB-A3L3
Max. Power Consumption	: 600W
Max. Laminating Width	: 330mm
Max. Lamination Thickness	: 1mm
Max. Paper Thickness	: 1mm
Min-Max. Pouch Thickness	: 80-250 microns
Lamination Type	: Thermal Pouch
Max. Laminating Speed	: 300mm/min
Heating System	: Quartz Tube
Min-Max Temperature	: 80-170°C
Controller	
No. of Rollers	: 2nos.
Roller Diameter	: 18mm
Warm-up time	: 1min
Supported paper Sizes	: A3/A4/A5/A6
Cable Length	: 1m
Product Dimension	: 52 x 8 x 9.5 cm
Weight	: 2.6 kg


Package contents:

Laminator	: 1 U
QR Code Guide	: 1 U
Lamination Pouch 80	: 3 U
Micron A4 Size	

Product Description:




1

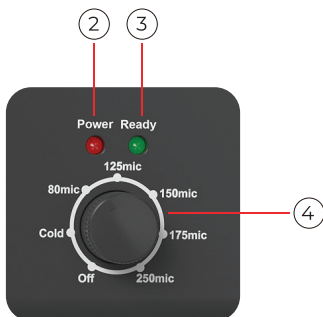

2

3

4

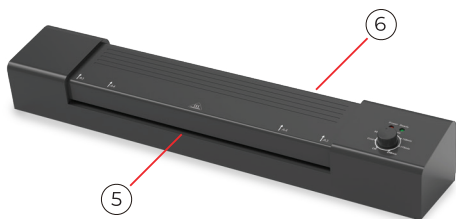

1. Power On/Off Switch
2. Power Indicator
3. Ready Indicator
4. Temperature controller
5. Sheet Entrance
6. Sheet Exit
7. Jam release Switch

How to Use

1. Place the laminator on a flat and stable surface.
2. Ensure there is sufficient free space around the laminator. Do not place any objects beside or behind the machine.
3. Connect the power cord to a suitable power socket and switch on the power supply.
4. Turn the laminator's ON/OFF switch to the ON position. The Power Indicator LED will glow, indicating that the laminator is powered on.
5. Set the desired temperature using the Temperature Controller. Available preset temperatures are:
 - Cold
 - 80°C
 - 125°C
 - 150°C
 - 175°C
 - 250°C

6. After selecting the temperature, the Ready Indicator LED will blink, indicating that the laminator is heating up.
7. When the Ready Indicator LED glows steadily, the laminator has reached the selected temperature and is ready for use.
8. Now securely place the document into the pouch & pass it through the machine.
9. Before inserting it into the machine, kindly make sure that the sealed edge is sent into the machine to avoid collapse.
10. While existing, kindly make sure to remove if any document is inside the machine. For the best quality & to prevent from jamming remove the pouch immediately.

Cold Mode:

- Ensure the laminator is cool before using Cold Mode. If you have just completed hot lamination, allow the machine to cool down completely.
- Once the laminator has cooled, select Cold Mode.
- Wait until the ready indicator glows steadily, indicating that the laminator is ready for cold lamination.

- Now securely place the document into the pouch & pass it through the machine.
- Before inserting it into the machine, kindly make sure that the sealed edge is sent into the machine to avoid collapse.
- While existing, kindly make sure to remove if any document is inside the machine. For the best quality & to prevent from jamming remove the pouch immediately.

Jam Release Function:

When the inserted laminating pouch is jammed, slide the jam release switch and remove the pouch gently from the rollers.

Troubleshooting

Problem/Trouble	Possible Cause	Solution
No control panel illumination	Machine not switched on	Switch on machine at rear next to plug inlet and at the wall socket.
Pouch does not completely seal the item	Pouch does not completely seal the item	Check pass-through thickness is correctly selected and pass through again.
	Temperature may be incorrect	Check pouch thickness is correctly selected and pass through again.
Pouch has waves or bubbles	Temperature setting may be incorrect	Check pouch thickness is correctly selected and pass through again.
Pouch is lost in the machine	Pouch is jammed	Press the reverse button and the laminating pouch film will return.
Jamming	Pouch was used open end first	Press the reverse button and the laminating pouch film will return.
	Pouch was not centered on entry	
	Pouch was not straight upon entry	Turn off and unplug the machine. Wait for it to cool, then open the machine and clean it.
	Empty pouch was used	
Pouch is damaged after machine	Damaged rollers or adhesive on rollers	Pass cleaning sheets through the machine to test and clean the rollers.

Maintenance

1. Always after usage make sure to unplug the machine and keep it in a normal environment to allow it to cool.
2. When the machine is not in use for a long time, cover it with a cloth or protective cover.
3. Do not laminate anything thicker than 0.6 mm for the best seal.

Tips for Best Laminating Results:

For optimal laminating performance, follow these recommendations:

- Wait until the warm-up indicator shows that the laminator is ready.
- Ensure the laminating pouch is clean and free from dust, dirt, or wrinkles before use.
- Place the document in the center of the pouch and feed it straight into the laminator to prevent misalignment.
- Use a better-quality laminating pouch.

