

 ZEBRONICS

TRIMMER
ZEB **HT100**



User Manual

www.zebronics.com

Thank you for purchasing **ZEB-HT100** Trimmer. Please read the user manual carefully before usage & save it for future reference.

Note:

- Use this product only for its intended use.
- Do not dismantle the trimmer in order to avoid electrical shock & other accidents and this may lead to devoid of warranty.
- Kindly fully charge the device before every use.
- Keep the product and cords away from high temperature and high humidity places.
- Avoid using and charging the product with wet hands.
- Do not throw the product into fire.

Features:

Upto 45 min Cordless Use

Rounded Tip Blade

Stainless Steel Blades

2 Guides Combs (1mm-10mm, 11mm-20mm)

Charging LED Indicator

Ergonomic design

Built-In Rechargeable Battery

Type-C Charging

20 Gear Adjustments

Specification :

Input Voltage	: DC 5V
Usage type	: Cordless
Trimmer Body Material	: Plastic
Trimming Range	: 1mm - 20mm
No. of Guide Combs	
Attachments	: 2nos (1mm-10mm, 11mm-20mm)
Blade material	: Stainless steel
Charging time	: 8h
Run time	: Upto 45mins
Power consumption	: 2W
Product dimension (W x D x H)	: 168 x 38 x 48 mm
Net Weight	: 118g

Product Description :



1. Trimmer Blade Cap

2. Trimmer Blade

3. Size Adjustment

 
4. LED

5. Power On/Off

6. Type-C Charging Port



Oil



Cleaning
Brush



Charging
Cable



2 Guides combs
(1mm - 10mm &
11mm - 20mm)

Usage Instructions:

1. Fully charge the trimmer before every usage for better performance.
2. Adjust the clips as per the levels of trimming needed.
3. Slide the power switch to On / Off the trimmer.
4. To remove the trimmer cap from the blade, slide it out.

Trimmer Cap Adjustment:

1. You'll receive two blade caps with sizes (1-10mm & 10-20mm)
2. From the first cap you can adjust size from 1-10mm
3. From the second cap you can adjust size from 10-20mm

Cleaning the Trimmer after Usage:

1. Kindly remove the trimmer cap from the trimmer blade.
2. Use the brush to remove the hairs from the blades of the trimmer blade.
3. Also, clean the trimmer blade of the base with the brush to clean the hair particles.
4. Avoid the usage of the water or other cleaning liquid / solvents for cleaning the trimmer head.

Charging Instruction:

The trimmer can be charged with the charging cable that comes with the product. Connect the USB connector of the charging cable to the USB port of a DC5V charger and the other end to the trimmer.

