

 ZEBRONICS

Trimmer  
**ZEB HT202**



**User Manual**

[www.zebronics.com](http://www.zebronics.com)

Thank you for purchasing **ZEB-HT202** Trimmer. Please read the user manual carefully before usage & save it for future reference.

**Note:**

- ◆ Use this product only for its intended use.
- ◆ Do not dismantle the trimmer in order to avoid electrical shock & other accidents and this may lead to devoid of warranty.
- ◆ Keep the product and cords away from high temperature and high humidity places.
- ◆ Avoid using and charging the product with wet hands.
- ◆ Do not throw the product into fire.

 
**Features:**

- ◆ Upto 180mins Cordless use
- ◆ Stainless steelblades
- ◆ 3+1 Guides combs (1.5 - 4.5mm)
- ◆ 2 Speed Mode
- ◆ LED Display
- ◆ With travel lock
- ◆ Built in Rechargeable battery
- ◆ Type-C for charging

**Specification :**

Input Voltage	: DC 5V
Usage Type	: Corded & Cordless
Trimmer	
Body Material	: ABS
Trimming Range	: 0.5mm - 4.5mm
No of Clips	
Attachments	: 4nos (1.5mm, 3mm, 4.5mm, Blade cover)
Blade Material	: Stainless steel
Charging Time	: Upto 120mins
Run Time	: Upto 180mins
Power Consumption	: 5W
Product Dimension (W x D x H)	: 4.14 x 3.52 x 14.37cm
Net Weight	: 148g

## Product Description :

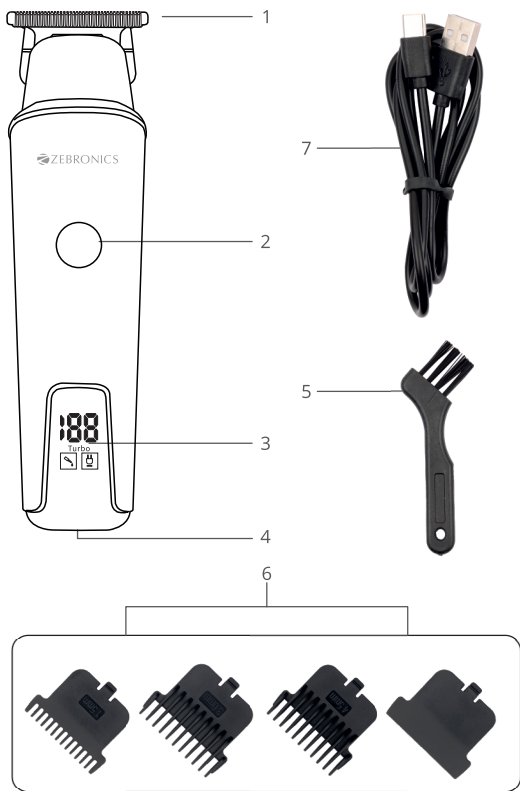


1. Trimmer Head
2. Power Button
3. LED Indicator
4. Charging Port



5. Cleaning Brush
6. Guide Combs + Blade Cover
7. Charging Cable

## Usage Instructions:

 1. Fully charge the trimmer before every usage for better performance.
2. Please Add or remove the guide combs as per the levels of trimming needed.
3. Press the power button to switch the trimmer On/Off.

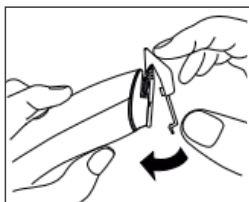



**Attaching The Clips**

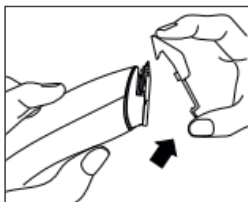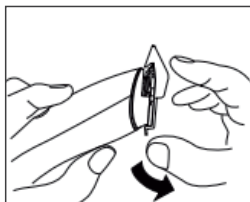  

**Removing The Clips**

## Cleaning the Trimmer After Usage:

  1. Use the brush to clean the hair from the trimmer head.
2. Avoid the usage of water and other cleaning liquid or solvents for cleaning the trimmer.

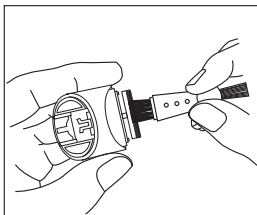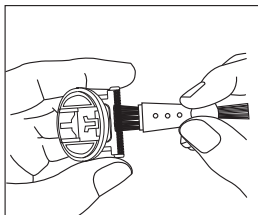

### **Charging Instruction:**

The trimmer can be charged with the charging cable that is provided with the product. Connect the USB connector of the charging cable to the USB port of the DC5V charging adapter and the type-C end of the charging cable should be connected to the type-C charging port of the trimmer. The LED indicator blinking indicated the charging of the product. Upon full charge, the LED indicator glows constantly.

### **Travel Lock:**

Travel lock feature limits the trimmer from getting accidentally ON for the single press of the power button.

To enable Travel lock - please follow the instructions below

\* Press and hold the Power button - the display will count 1,2,3.

\* Now the travel lock is enabled and the display will show the lock symbol whenever the power button is pressed

To switch back from travel lock -

\* Press and hold the power button - the display will count 3,2,1.

\* The trimmer will be restored to working mode.

