

 ZEBRONICS

Body Trimmer

ZEB **HT300B**



UNLEASH THE
BOLD

User Manual

www.zebronics.com

Dear Customer,

Thank you for purchasing the **ZEB-HT300B Trimmer**. Please read the user manual carefully before usage & save it for future reference.

Note:

- *Use this product only for its intended use.*
- *Do not dismantle the trimmer in order to avoid electrical shock & other accidents and this may lead to devoid of warranty.*
- *Keep the product and cords away from high temperature and high humidity places.*
- *Avoid using and charging the product with wet hands.*
- *Do not throw the product into fire.*

Features:

- Upto 90mins Cordless use
- Multistage Guide comb
- LED Spotlight for Precision
- IPX6 Rating
- Corded & Cordless usage
- Washable Blades & Attachments
- Self Sharpening Stainless Steel Blades
- LED Display
- Type-C Charging
- Built in Rechargeable battery
- Compact & Travel Friendly
- With Charging Dock
- 120 mins USB Rapid Charge

Specifications:

Input Voltage	: DC 5V
Usage type	: Corded & Cordless
Trimmer Body Material	: ABS Plastic
Trimming Range	: 0.5mm - 9mm
No of Clips Attachments	: 1 nos.(0.5-9mm)
Blade material	: Stainless Steel + white ceramic mesh
Charging time	: Upto 120mins
Run time	: Upto 90mins
Power consumption	: 5W
Product Dimension (W x D x H)	: 14.8 x 3.5 x 3.2 cm
Net Weight	: 114g

Package Content:

- Trimmer : 1 U
- Charging Cable : 1 U
- Charging Dock : 1 U
- Charging Brush : 1 U
- Guides comb : 1 U
- Oil : 1 U
- QR Code Guide : 1 U

 
 
 
 
Product Representation :

 
 
 
 


1. Trimmer Head
2. MFB Button
3. LED Display
4. Multistage Guide Comb
5. Type-C Charging Dock
6. Cleaning Brush
7. Type-C Charging Cable

Usage Instructions:



1. Fully charge the trimmer before every usage for better performance.
2. Add or remove the guide combs as per the levels of trimming needed.
3. Press the power button to switch the trimmer On/Off.

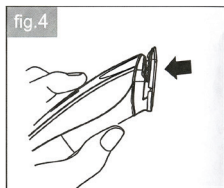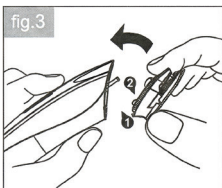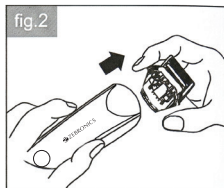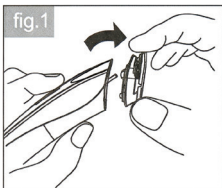

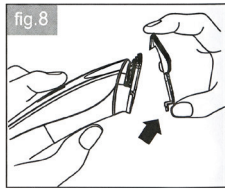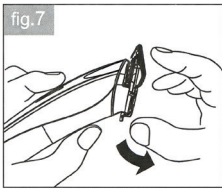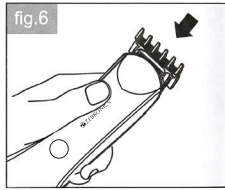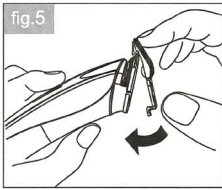

Cleaning the Trimmer after Usage:

  1. Kindly remove the trimmer head from the socket.
2. Use the brush to remove the hairs from the blades of the trimmer head.
3. Also, clean the head socket of the base with the brush to clean the hair particles.
4. Avoid the usage of the water or other cleaning liquid / solvents for cleaning the trimmer.

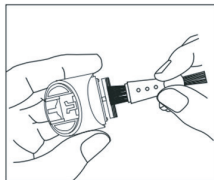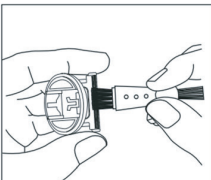

Charging Instruction:

The trimmer can be charged with the charging cable that comes with the product. Connect the USB connector of the charging cable to the USB port of a DC5V charger and the other end to the trimmer. The LED display shows the battery percentage.

Charging Instruction via Charging Dock:

Plug the trimmer into the Type-C Charging Dock and Connect the Type-C Charging Dock with the provided cable.



Now, connect the USB connector of the charging cable to the USB port of a DC 5V charger and the other end to the trimmer. The LED display shows the battery percentage



ISO 9001:2015 Certified Company
www.zebronics.com

