

Wireless Headphone PARADISE



User Manual

www.zebronics.com

Dear Customer,

Thank you for purchasing **ZEB-PARADISE NEO** (**ZEB-WHP 11**) Wireless headphone. Please read this user manual carefully before operation & save this user manual for further reference

Note:

- Avoid the use of this product at the high temperature and high humidity environment.
- Avoid self-disassemble of product or it will result in the failure of warranty.
- Please charge the product with power adapter output rated voltages DC 5V. Avoid using the headphone while charging

To know more about Terms and conditions for warranty policy, please visit

https://zebronics.com/pages/warranty-policy

Caution:

Listening at high volumes can cause hearing impairment. Please limit your usage time at high volumes.

Features:

40mm Drivers
Up to 50h* Backup
Rapid Charging (10min charge for 7h* use)
Gaming Mode (Low Latency)
3 EQ Modes
Environmental Noise Cancellation (ENC)

Dual Pairing

Call Function

BT v5.4 | AUX

Voice Assistant Support

Soft earcushions

Lightweight & Comfortable

Type-C Charging

Built-in Rechargeable Battery

Specification:

Model : 7FB-WHP 11

BT version : 5.4

Wireless range : 10 Meters

(Without obstacles)

* at 50%. Volume

Driver Size : 40mm

Speaker Impedance : 32Ω

Frequency Response : 20Hz - 20kHz Driver Sensitivity : 99dB+3dB

Charging time : 1.5h Playback time :50h* Talk time : 40h*

Microphone Impedance: 2.2KΩ Microphone Sensitivity: -38±3dB


Net. Weight : 161g

Package Contents:

Headphone :1 U Charging cable :1 U Aux cable :1 U

QR code guide :1 U

Product Representation

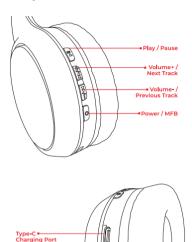

General Instruction : Button Controls :

3.5mm = Aux Port

- Long press "MFB or Power button" to On/Off
- Single press "+" button: Increase Volume
- Single press "-" button: Decrease Volume
- Single press "MFB or Power button" to Answer/Hang up the phone call
- Long press "+" button for Next Track
- Long press "-" button for Previous Track

- Long press "Play/Pause" until you hear a single beep to activate Voice Assistant function
- Double press the "MFB" to switch between the Gaming/Music mode
- Double press the "Play/Pause" to switch the EO mode.

Bluetooth Mode:

- The headphone enters BT mode as soon as it is powered ON. (Refer LED indication and make sure aux is not connected already)
- Now search for nearby BT devices in your audio source device.
- Tap on the BT name "ZEB-PARADISE NEO" to pair.

Dual Pairing Mode:

- Pair the headphone with one device and do not unpair, now turn off the BT on the first device and pair the headphone with the second device.
- Now you can turn on the first device and the headphone will automatically pair with the first device (if your device is compatible) else tap on **ZEB-PARADISE NEO** in the BT settings on your first device.

AUX Mode:

- Connect one end of the 3.5mm aux cable to the headphone and connect the other end to any compatible audio source device. (Example: Mobile, Tablet, Laptop, Desktop Computer, etc)
- Media controls can be done via the audio source device. (Make sure to power on the headphone to use BT mode after removing the aux cable)

Gaming Mode (Low Latency):

• Double press the MFB button to enable gaming mode and repeat the process to enter into music mode.

Voice Assistant Support:

• When the headphone is connected with a smart phone, long press the Play/Pause button for 2 seconds to activate the phones voice assistantfunction.

LED Indication:

- · Charging- Constant Red LED glows
- Full Charge Red LED goes OFF
- Bluetooth Discover Mode Blue and Red LED blinks rapidly
- Bluetooth Connected Constant Blue LED Blinks.

ISO 9001:2015 Certified Company www.zebronics.com