

 ZEBRONICS

Wireless Earbuds

ZEB METEOROID



User Manual

www.zebronics.com

Dear Customer,

Thank you for purchasing **ZEB-METEOROID** (*Wireless Ear Buds*). Please read this user manual carefully before operation & save this user manual for further reference.

Note:

- *Avoid the use of this product at the high-temperature and high humidity environment.*
- *Avoid self-disassemble of product or it will result in the failure of warranty.*
- *To know more about terms and conditions for warranty policy, please visit*

<https://zebrionics.com/pages/warranty-policy>

Caution:

Listening at high volumes can cause hearing impairment. Please limit your usage time at high volumes.

Features :

BT v5.4

Low Latency Mode

Environmental Noise Cancellation (ENC)

Up to 80h* Backup

Splash Proof

Neodymium 6mm Drivers

Voice Assistant

Touch Control
Call Function
Type-C Charging

Specifications

Model	: ZEB-PODS zi 4
BT version	: 5.4
Supported BT profile	: HSP / SPP / A2DP / AVRCP
Drive size	: 6mm
Speaker impedance	: 16Ω
Playback time	: 80h*
Charging time	
Earphone	: 1.5 h
Case	: 4h
Talk Time	: 6h*
Standby Time	: 140h
Case Dimension (W x D x H)	: 6.4 x 2.9 x 6.4 cm
Net. weight	: 58g

 
Package Contents

Earbuds	: 2 U
Charging case	: 1 U
Ear tips	: 4 U
Charging cable	: 1 U
QR code guide	: 1 U

**at 50% Volume*

Product Representation

Case



Earbud



Usage Instruction:

BT Pairing Instructions:

Step 1: Once the ear buds are out of the case they enter BT pairing mode.

Step 2: The ear buds will pair with each other within 2 seconds once both are out of the case.

Step 3: Open the phone's BT settings and click pair upon tapping on the name "**ZEB-METEOROID**"

Touch Control Functions :

- To power on the ear buds long press the touch control on both the ear buds until you hear the power on notification tone.
- To power off the ear buds long press the touch control on either of the ear buds until you hear the power off notification tone.
- Touch and hold for 2 seconds on the right ear bud to enable low latency Gaming mode or Music mode.
- Touch and hold on the left ear bud to activate the voice assistance function of your source device.

During Music Playback :

- Single touch on the left/right earbuds to Play or Pause the playback.
- Double touch on the left/right ear buds to skip to the Prev./Next track.
- Triple touch on the left/right ear buds to increase/decrease the volume.

During Calls :

- Single touch either side of the ear buds to answer incoming call or end ongoing call.
- Touch and hold for 2 seconds on either side of the ear buds to decline incoming call.

Charging instruction :

Charging the Case :

- Plug the provided Type-C charging cable to the case and connect the other end of the cable to the DC 5V power source.
- The corresponding LED indicator will blink on the case while the case is charging.
- LED Indicator will glow constant upon full charge.

Charging the Earbuds :

- The ear buds will automatically charge in the respective slots once placed in the charging case.
- The LED indicator glows stable on the buds and case while the ear buds are charging and the light goes off upon full charge.