



Wireless Earbuds
ZEB **MONK** *Pro*



User Manual

www.zebronics.com

Dear Customer,

Thank you for purchasing **ZEB-MONK PRO** Wireless Earbuds. Please read this user manual carefully before operation & save this user manual for further reference.

Note:

- *Avoid the use of this product at the high temperature and high humidity environment.*
- *Avoid self-disassembly of product or it will result in the failure of warranty.*
- *Please charge the product with DC 5V power adapter.*
- *There isn't no specific way to turn ON & OFF ENC. It automatically enables during calls.*
- *To know more about Terms and conditions for warranty policy, please visit*

<https://zebronics.com/pages/warranty-policy>

Caution:

Listening at high volume can cause hearing impairment. Please limit your usage time at high volume.

Features:

- BT v6.0
- Hybrid Active Noise Cancellation (50dB)
- Upto 27h* Backup
- Rapid Charging (10min charge for 60min* use)
- 13mm Neodymium Magnet Drivers

- Gaming mode (Low latency)
- Environmental Noise Cancellation (ENC)
- Transparency Mode
- 3 EQ Modes
- Built-in Quad MIC
- Call Function
- Voice Assistant support
- Touch Controls
- Type-C Charging
- Neodymium magnets

**at 50% Volume(ANC OFF)*

Specifications:


Model No.	: ZEB-PODS IV
BT Version	: v6.0
Supported BT Profile	: HSP / HFP / A2DP / AVRCP
Drive Size	: 13mm
Speaker Impedance	: 32Ω
Playback Time	: 3.8h*
Charging Time	
Earphone	: 1h
Case	: 1.5 h
Talk Time	: 3h*
Standby Time	: 50h
Case Dimension	
(W x D x H)	: 6.2 x 2.8 x 5.1 cm
Net. Weight	: 42g

**at 50% Volume(ANC OFF)*

Package Content:

Earbuds	: 2 U
Charging case	: 1 U
Ear tips	: 4 U
Charging cable	: 1 U
QR Code Guide	: 1 U

Product Representation:

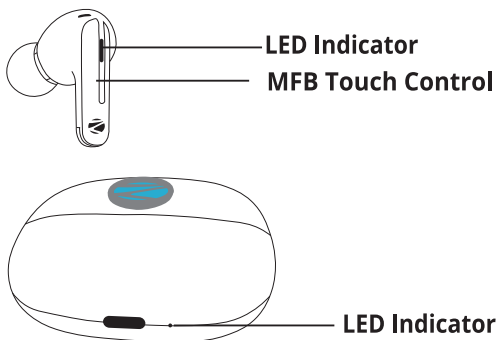

Music Playback:

- Single Tap the MFB once on either side to Play/Pause the track.
- Double tap on the Left side to Skip to the Previous song.
- Double tap on the Right side to Skip to the Next song.
- Triple tap the MFB button on the left/right side of the earbud to decrease/increase volume.

During Calls / While Receiving a Call:

- Single tap the MFB on either side of the earbuds to Answer / End the call.
- Press & hold the MFB on either side of the earbuds to Reject the call.

Activating the Voice Assistant:

Press and hold the MFB button for 2–3 seconds on the left side to wake up the Voice Assistant from your smartphone.

Activating Gaming Mode:

- Triple tap the MFB on the Left side to trigger Gaming Mode.
- Triple tap again on the Left side to revert to Music Mode.

Turning OFF/ON (Manual Method):

- Press and hold the MFB on both earbuds for 5 seconds to turn OFF TWS.
- Do the same to turn ON TWS again.

ANC Mode (Active Noise Cancellation):

Press and hold the Right earbud for 3 seconds to switch between modes:

- **MODE 1** ▶▶ Transparency Mode
- **MODE 2** ▶▶ ANC ON
- **MODE 3** ▶▶ ANC OFF

Usage Instructions:

BT Pairing Instructions:

Step 1: The earbuds will turn ON once taken out from the case.

Step 2: The earbuds will pair with each other within 5 seconds.

Step 3: Open your phone's BT settings and select **"ZEB-MONK PRO"** to pair.

Charging Instructions:

Charging the Case:

Connect the Type-C cable to the charging port of the charging case and connect the other end of the cable to the DC 5V adapter.

The charging case Red LED blinks and once it's fully charged, Red LED will glow, indicating that the charging case is full.

Charging the Earbuds:

Put the earbuds in the respective charging slot of the charging case. Once placed in the charging case, the earbuds will charge automatically.

EQ Modes:

*By default, the EQ mode will be Equalizer Mode. Triple tap the right earbud to change it into SoundMonster mode.

*Triple tap the right earbud again to change it into Vocal Enhance mode. Triple tap once more to switch back to default EQ mode.

