

 ZEBRONICS

Wireless Earbuds
ZEB **MONK+**



User Manual

www.zebronics.com

Dear Customer,

Thank you for purchasing **ZEB-MONK +** (Wireless Earbuds). Please read this user manual carefully before operation & save this user manual for further reference.

Note:

- *Avoid the usage of this product at the high temperature and high humidity environment.*
- *Avoid the self-disassembly of the products or it results in voiding the product's Warranty.*

To know more about Terms and conditions for warranty policy, please visit

<https://zebronics.com/pages/warranty-policy>

Caution:

Listening at high volumes can cause hearing impairment. Please limit your usage time at high volumes.

Features

BT v5.4

Active Noise Cancellation (ANC)

Gaming mode (Low latency)

Flash connect

Up to 25h* Backup

Splash proof

Dynamic 10mm Drivers

Voice assistant

Touch control

Type-C charging
Call function

Specifications

 
 
 
Model : ZEB-PODS 412
BT Version : 5.4
Supported
BT Profile : HSP / SPP / A2DP / AVRCP
Drive size : 10mm
Speaker
impedance : 32Ω
Playback time : 25h*
Charging time
 Earphone : 1.5 h
 Case : 1.5h
Talk time : 4 h*
Standby time : 80 h
Case dimension : 6.4 x 2.6 x 4.8 cm
 (W x D x H)
Net. Weight : 37g

**at 50% Volume*

Package contents

Earbuds : 2 U
Charging Case : 1 U
Ear tips : 4 U
Charging Cable : 1 U
QR Code Guide : 1 U

Product Representation

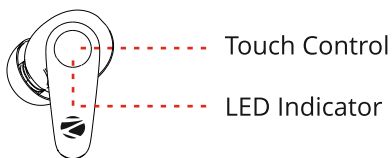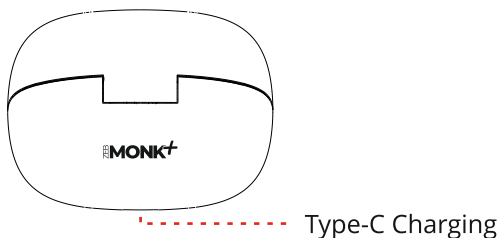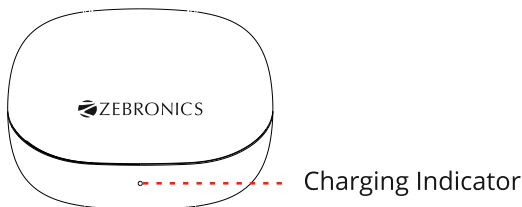

Usage Instruction:

BT Pairing Instructions:

- Once the case is open the ear buds enter into BT pairing mode.
- Open the phone's BT settings and click pair upon tapping on the name **"ZEB-MONK +"**
- From now once the case is open the Flash Connect activates and the ear buds will pair automatically if the device is compatible.

Ear Buds Functions:

- Long press the touch control for 2 seconds on the left ear bud to activate the voice assistance function of your source device.
- Long press the touch control for 2 seconds on the right ear bud to enable low latency Gaming mode or Music mode.
- Tap thrice on the touch control to enable/disable ANC (Active Noise Cancellation)
- To power Off the ear buds long press the touch control on either of the ear buds for 5 seconds.
- To power On the ear buds long press the touch control on either of the ear buds for 3 seconds.

During Music Playback:

- Single tap the touch control on the Left/Right ear bud to Play or Pause the playback.
- Double tap the touch control on the Left/Right ear bud to skip to the Prev./Next audio track.

During Calls:

- Single tap the touch control on either side of the ear buds to answer or hang up the ongoing call.
- Press & hold the touch control on either of the ear buds for 2 seconds to reject incoming call.

Charging instruction:

Charging the Case:

- Plug the Type-C connector into the Type-C charging port of the ear bud's charging case and connect the other end of the cable to the DC 5V power source.
- The corresponding LED indicator will Blink on the case, while the case is charging. LED Indicator will glow constant upon full charge.

Charging the Earbuds:

The ear buds will automatically charge in the respective slots once placed in the charging case. There will be a constant LED indication on the buds as well as the case while charging and the light goes off upon full charge.