 


 ZEBRONICS

ZEB 2.0 DJ Speaker
MIGHTYPLUS

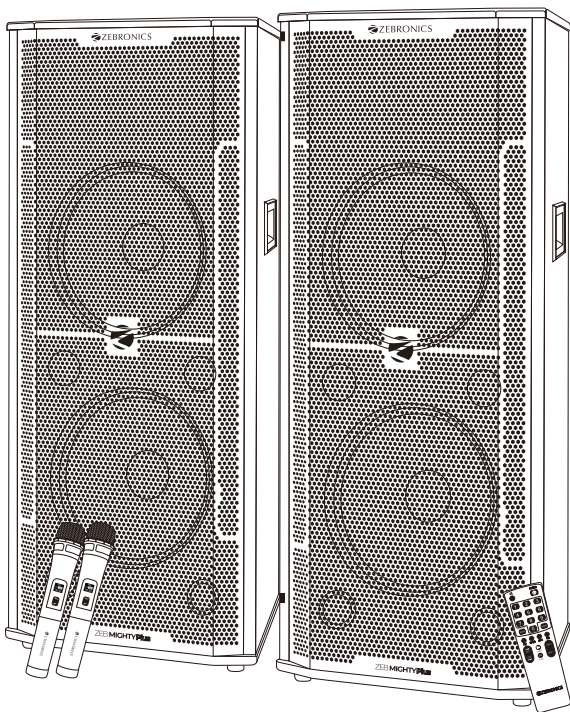

User Manual

www.zebronics.com

Thank you for purchasing Zebronics Speaker. Please read this user manual carefully before operation & save it for future reference.

Note:

- Avoid the use of this speaker at the high temperature and in high humid environment.
- Avoid self-dismantling of speaker. If you do so the warranty will be void.

Features:

- Wireless BT v5.0 / USB / SD / FM / AUX / Mic Input x 2 / Guitar IN
- Recording function
- LED display
- 30.48cm x 4 full range speaker
- 2 way speaker
- Remote control
- Dual UHF wireless mic
- Volume, bass & treble controls
- Karaoke
- 7 band equalizer
- Mic volume, bass & treble controls
- Echo/ Delay /Guitar volume controls

Specification:

Output power (RMS) : 300W (150W+150W)

Driver size

Full range : 30.48cm x 4

Tweeter : 2.54cm x 2

Impedance

Full range : 8Ω

Tweeter : 6Ω

Frequency response : 50Hz-20kHz

S/N Ratio : ≥80dB

Separation : ≥45dB

File format support : MP3, WMA, FLAC

Line input : RCA to 3.5mm

Max. supported USB/SD

Memory size : 32GB

FM frequency range : 88 MHz - 108 Mhz

BT name : ZEB-MIGHTY PLUS

BT version : v5.0

Product dimension : 44 x 40 x 103.5 cm

(W x D x H)

Net. Weight

(With amplifier) : 28.8kg

(W/o amplifier) : 26.2kg

Package Contents:

DJ Speaker : 2 U

Remote : 1 U

 
Wireless Mic : 2 U

Input Cable : 1 U


Speaker Interconnect Cable : 1 U

QR Code Guide : 1 U


Control Description

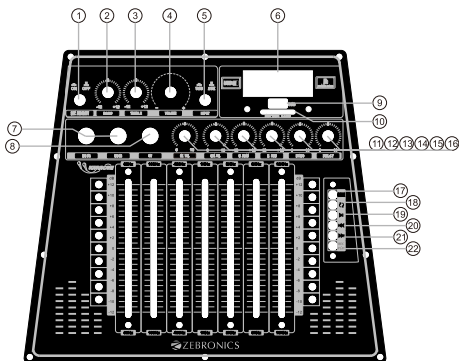

 1. Microphone Priority(Long pressing)
2. Bass volume control
3. Treble volume control
4. Master volume control
5. USB/AUX switch
6. LED display
7. Microphone input port 1&2
8. Guitar input port
9. USB input
10. SD card input
11. Guitar volume control
12. Microphone volume control
13. Microphone bass volume control
14. Microphone treble volume control
15. Echo volume control
16. Delay volume control
17. Input Mode
18. Repeat button
19. Play/Pause & FM Scan
20. Previous/Channel-
21. Next/Channel+
22. Record and play button
23. AUX input
24. Power switch
25. Speaker out
26. AC input

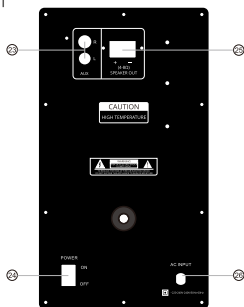

Remote Control

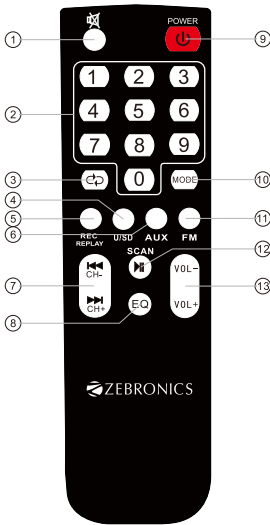 

- 1.Mute control Button
- 2.0-9 Number Control button to selecting MP3 song
- 3.Repeat control button
- 4.USB/SD Control button
- 5.Mic Recording &Replay Control button
- 6.Aux Control button
- 7.Previous (Channel -)&Next (Channel +)
- 8.EQ control Button
- 9.Power control button
- 10.Mode control Button
- 11.FM Control button
- 12.Play/Pause & FM Scan
- 13.Volume-&Volume+

General Instructions

BT connectivity

- Switch the source to BT mode
- Turn on BT on your mobile and scan for nearby BT devices.
- Tap on **“ZEB-MIGHTY PLUS”** to connect.

USB/SD Mode

- Insert the USB/SD card into the slot provided on the speaker
- The speaker will automatically detect the USB/SD card and the supported audio content will be played from it.

***Note:** This mode isn't selectable on the speaker or remote control unless a USB/SD flash card is connected*

FM Radio

- Switch the speaker to FM mode
- Long press the Play/Pause button to scan the available FM channels.
- Once the scanning is done, the first scanned channel will start playing
- The audio from the source can be heard through the speaker.

AUX-In

- The speaker can be connected to an audio source using a RCA to 3.5mm cable.
- Connect one end of the cable to the AUX-In port on the speaker and the other end an audio source.

- The audio from the source can be heard through the speaker.

Recording Function

- First plug-in a USB/SD flash card which will act as a storage device into the slot provided on the speaker.
- Press the **REC.** button on the remote to start the recording.
- Press the **REC.** button again to stop the recording.
- Press the **REC.PLAY** button to play the recorded file.

