



ZEBRONICS
ALWAYS AHEAD

2.1 Speaker

ZEB **BT2250RUF**



User Manual

www.zebronics.com

Thank you for purchasing the **ZEB-BT2250RUF** 2.1 Speaker. Please read the user manual carefully before usage & save it for future reference.

Note:

- Avoid the usage of this speaker at the high temperature and high humidity environment.
- Avoid the self-disassembly of the product as it results in the failure of Warranty.

Features

2.1 Channel Speaker

Wireless BT/USB/FM/AUX

Volume, Bass & Treble adjustment

LED Display

Remote control

10.16cm Subwoofer

Wall Mountable

Multicolour LED

Specifications

Output power (RMS)

Subwoofer : 20W

Satellite : 10W x 2

Total : 40W

Driver size

Subwoofer : 10.16 cm x 1

Satellite : 7.62 cm x 2

Impedance


Subwoofer : 4Ω

Subwoofer	: 4Ω
Frequency response	: 20Hz - 20kHz
S/N Ratio	: ≥80dB
Separation	: ≥45dB
File format support (USB)	: MP3
Line input	: 2ch RCA
Max. supported memory size (USB)	: 32GB
FM frequency range	: 88 MHz-108 MHz
BT name	: ZEBRONICS
BT version	: 5.0
Product dimension (W x D x H)	
Subwoofer	: 150 x 280 x 210 mm
Satellite	: 95 x 75 x 205 mm
Net. weight	
Subwoofer	: 2.7 kg
Satellite	: 306 g x 2
Total	: 3.3 kg

Package Content


Subwoofer	: 1 U
Satellite	: 2 U
Remote	: 1 U
Input Cable	: 1 U
QR Code Guide	: 1 U

Control Panel Description

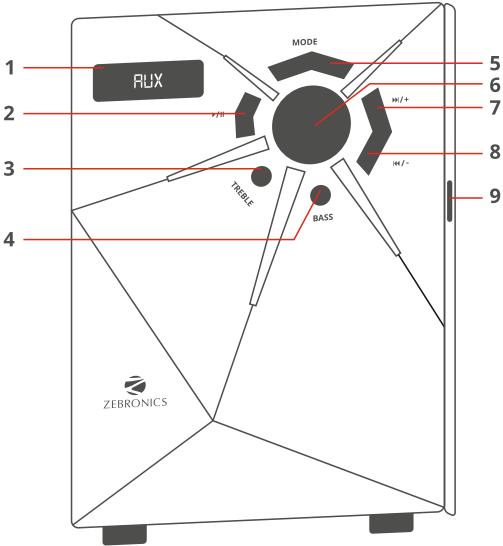

- 1. LED DISPLAY
- 2. PLAY / PAUSE
- 3. TREBLE CONTROL
- 4. BASS CONTROL
- 5. MODE
- 6. VOLUME CONTROL
- 7. NEXT / +
- 8. PREVIOUS / -
- 9. USB PORT

Remote Control

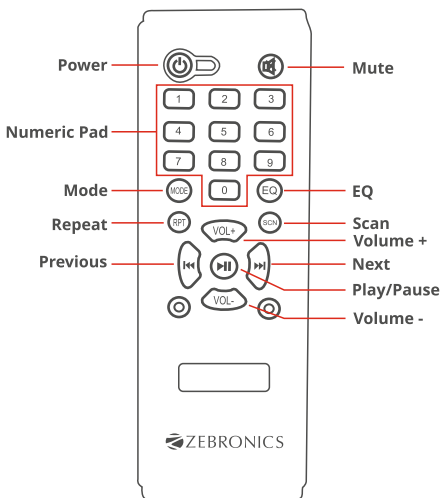

Power : Standby ON/OFF

Numeric Pad (0-9) : To select direct tracks from USB drive and to select two digits and above, by consecutively pressing

Volume + : To increase the volume

Previous : To select the previous songs in BT/USB or channels in FM mode

Volume - : To decrease the volume

Repeat : To Switch between REP ALL tracks or REP 1 track

Scan : To scan all FM channels

Mode : Mode Selection (BT/AUX/USB/FM)

EQ : Equalizer (Normal/Pop/Rock/Jazz/Classic/Cut)

Play/Pause To Play / Pause for current song

Next : To select the next songs in BT/USB or channels in FM mode

Mute To Mute / Unmute for currently playing song

Instructions for Use:

Button functions

1. Press the **“Mode”** button to change the input mode (BT/AUX/USB/FM) of the speaker.
2. Short press the **“Next/Prev”** button to change the Prev/ Next track or channel when in BT/USB mode or FM mode respectively.
3. Long press the **“Next/Prev”** button to increase/decrease the speaker volume.
4. Press the **“Play/Pause”** button to Play/Pause the track being played.

General Instructions

BT Mode:

Power ON the speaker, press **“Mode”** button to switch to BT Mode. Switch ON BT on your phone or tablet and search for nearby BT devices, Search for the BT name **“ZEBRONICS”** and tap to connect it.

USB Mode:

The speaker automatically switches to USB input mode with the LED display when a USB flash drive is inserted (this mode isn't selectable on the speaker or remote control unless a USB flash drive is connected).

Ensure that your USB flash drive contains MP3 audio files (other file types not supported).

FM Radio:

Switch the speaker to FM mode. In FM mode, use the Play/Pause button in the subwoofer control panel or remote to scan for the available FM channels. Once the scanning is done, the scanned channels will begin to play. The next button or previous button in the subwoofer control panel or remote can be used to change the FM channels.

AUX-IN:

The speaker can be connected to an audio device using an RCA to 3.5mm cable. Connect the one end of the cable to the speaker and the other end to an audio source. The songs from the audio source can be heard through the speaker.

