



ZEBRONICS  
ALWAYS AHEAD

2.1 Speaker  
**BT2490RUCF**



**User Manual**

[www.zebronics.com](http://www.zebronics.com)

Dear Customer,

Thank you for purchasing the **ZEB-BT2490RUCF** 2.1 Speaker. Please read the user manual carefully before usage & save it for future reference.

**Note:**

- Avoid the usage of this product at the high temperature and high humidity environment.
- Avoid the self-disassembly of the products or it results in voiding the product's Warranty.
- Turn off the speaker when it is not in use.

To know more about Terms and conditions for warranty policy, please visit

<https://zebronics.com/pages/warranty-policy>

**Features**

2.1 Channel Speaker

Wireless BT v5.0 / USB / FM / AUX

LED display

11.52cm Subwoofer

Volume, Bass & Treble Adjustment

Remote control

**Specifications**

Output power (RMS)

Subwoofer : 18 watts

Satellite : 8 watts x 2

 
 
Total : 34 watts

Driver size		
Subwoofer	:	11.52 cm x 1
Satellite	:	7.62 cm x 2
Impedance		
Subwoofer	:	6Ω
Satellite	:	4Ω
Frequency response	:	20Hz-20kHz
S/N Ratio	:	≥68 dB
Separation	:	≥45 dB
File format		
support (USB)	:	Mp3
Line input	:	2ch RCA
Max. supported		
memory size (USB)	:	32GB
FM frequency range	:	87 MHz - 108 MHz
BT name	:	ZEB-BT2490RUCF
BT version	:	v5.0
Product dimension (W x D x H)		
Subwoofer	:	15 x 28 x 27 cm
Satellite	:	9.5 x 9 x 15 cm
Net. weight		
Subwoofer	:	2.076 kg
Satellite	:	512g x 2
Total	:	3.1kg

### **Package Content**


Subwoofer	:	1 U
Satellite	:	2 U
Input cable	:	1 U
Remote	:	1 U
QR code guide	:	1 U

## Control Description

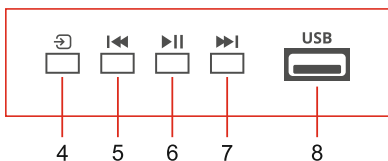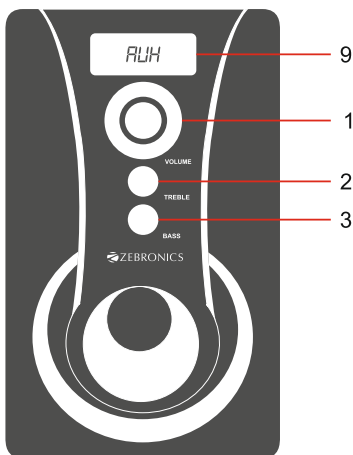

1. Volume Control : To adjust volume level
2. Treble Control : To adjust Treble level
3. BASS Control : To adjust Bass level
4. INPUT MODE (AUX/BT/FM/USB)
5. PREV / FM CHANNEL-
6. PLAY / PAUSE and Long Press SCAN
7. NEXT / FM CHANNEL+
8. USB PORT
9. LED Display


## Back Panel

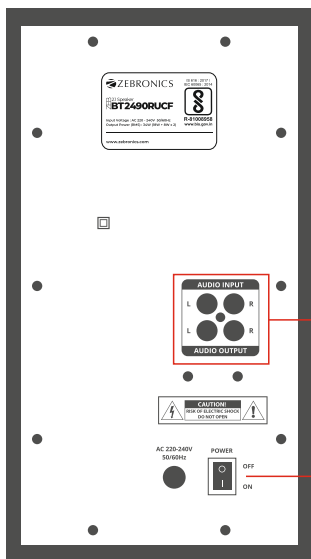 

Input and  
Output Ports

Power  
ON/OFF  
Switch

## Remote Control

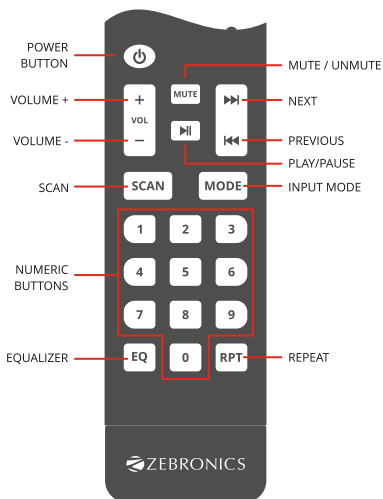 

**Power :** standby ON/OFF

**Numeric Pad (0-9) :** To select particular track from USB drive directly or to enter FM Channel frequency directly

**Vol+ :** To increase the volume

**Prev :** To select the previous tracks in BT/USB or to Tune in FM mode

**Vol- :** To decrease the volume

**RPT :** To Switch between available repeat modes

**Scan :** To scan all FM channels available

**Mode :** Mode Selection (BT/AUX/USB/FM)

**EQ :** NOR, ROC, POP, JAZ, CLA & CUT Press to use Equalizer

**Play/Pause** To Play / Pause the current track. To switch next channel in FM mode

**Next :** To select the next tracks in BT/USB or to Tune in FM mode

**Mute** To Mute / Unmute

## **General Instructions**

### **BT Mode:**

Switch the Speaker to BT mode, scan for nearby BT devices on your device. Tap on **“ZEB-BT2490UCF”** to connect.

### **USB Mode:**

Insert the USB drive to the slot provided on the subwoofer. It will detect the USB and the audio files from drive will be played automatically.

### **FM Radio:**

Switch the source to FM mode. In FM Mode, Long press the Play / Pause button in woofer or short press scan button in remote to scan the available FM channels. Once the scanning is done, the first scanned channel will begin to play. Short press the **“Prev and next”** button can be used to change the FM channel.

### **AUX-IN:**

Switch the speaker to AUX mode. The speaker can be connected to an audio device using an RCA to 3.5mm. Connect the one end of the cable to the speaker and the other end to an audio source. The songs from the audio source can be heard through the speaker.

**ISO 9001:2015 Certified Company**

**[www.zebronics.com](http://www.zebronics.com)**

