



ZEBRONICS  
ALWAYS AHEAD

2.1 Speaker  
ZEB **SAMBA 5**



User Manual

[www.zebronics.com](http://www.zebronics.com)

Dear Customer,

Thank you for purchasing the **ZEB-SAMBA 5** 2.1 Speaker. Please read the user manual carefully before usage & save it for future reference.

**Note:**

- Avoid the usage of this speaker at the high temperature and high humidity environment.
- Avoid the self-disassembly of the product as it results in the failure of Warranty.
- Please turn off the power and pull out the plug, when the speaker is not in use.

**Features**

2.1 Channel Speaker

Wireless BT/USB/mSD/FM/AUX

LED Display

15.25 cm Subwoofer

Remote Control

Volume, Bass and Treble Adjustment

LED Lights

Stylish Design

**Specifications**

Output power (RMS)

Subwoofer : 50W

Satellite : 15W x 2

Total : 80W

Driver size


Subwoofer : 15.25 cm

Satellite	: 7.62 cm x 2
Impedance	
Subwoofer	: 8Ω
Satellite	: 4Ω
Frequency response	: 40Hz - 20kHz
S/N Ratio	: ≥72dB
Separation	: ≥45dB
File format	
support (USB/mSD)	: MP3
Line input	: 2ch RCA
Max. supported memory	
size (USB/mSD)	: 32GB
FM frequency range	: 87 MHz-108 Mhz
BT name	: ZEBRONICS
BT version	: 5.1
Product dimension (W x D x H)	
Subwoofer	: 21.5 x 35 x 31 cm
Satellite	: 10.8 x 9.7 x 31.3 cm
Net. weight	
Subwoofer	: 5.6 Kg
Satellite	: 432 g x 2
Total	: 6.4 Kg

### **Package Content**


Subwoofer	: 1 U
Satellite	: 2 U
Remote	: 1 U
Input cable	: 1 U
QR Code Guide	: 1 U

## Control Description

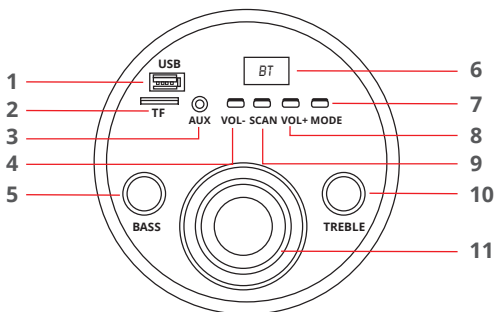

1. USB PORT
2. mSD CARD SLOT
3. AUX
4. PREVIOUS TRACK / VOL -
5. BASS
6. LED DISPLAY
7. MODE
8. NEXT TRACK / VOL +
9. SCAN
10. TREBLE
11. VOLUME CONTROLLER

## Remote Control

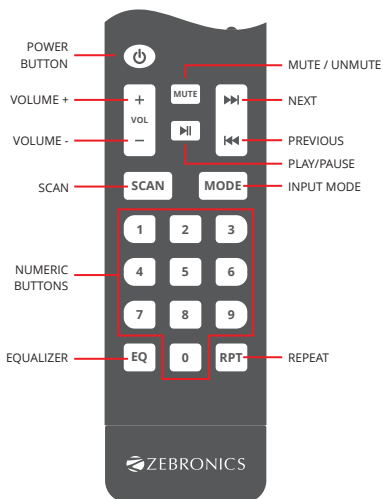

**Power :** standby ON/OFF

**Numeric Pad (0-9) :** To select particular track from USB drive directly or to enter FM Channel frequency directly

**Vol+ :** To increase the volume

**Prev :** To select the previous tracks in BT/USB or to Tune in FM mode

**Vol- :** To decrease the volume

**RPT :** To Switch between available repeat modes

**Scan :** To scan all FM channels available

**Mode :** Mode Selection (BT/AUX/USB/FM)

**EQ :** Short press to control BASS and short Press again to control TREBLE. Long Press to use Equalizer

**Play/Pause** To Play / Pause the current track. To switch next channel in FM mode

**Next :** To select the next tracks in BT/USB or to Tune in FM mode

**Mute** To Mute / Unmute

## **General Instructions:**

**BT Mode:** Switch the Speaker to BT mode, Scan for nearby BT devices in your mobile. Tap on **"ZEBRONICS"** to connect.

**USB/mSD Mode:** Insert the USB pen drive / mSD card to the speaker. The speaker will detect the mSD & USB & audio from it will be played automatically.

**FM Radio:** Switch the speaker to FM mode. In FM Mode, Long press the Scan key to scan the available FM channels. Once the scanning is done, the speaker will start playing the first scanned channel. Short press the Vol+ and Vol- buttons can be used to change the FM Channels

**AUX-IN:** Switch the speaker to AUX mode. The speaker can be connected to an audio device using an RCA to 3.5mm. Connect the one end of the cable to the speaker and the other end to an audio source. The songs from the audio source can be heard through the speaker.

**ISO 9001:2015 Certified Company**

**[www.zebronics.com](http://www.zebronics.com)**

