



ZEBRONICS
ALWAYS AHEAD

4.1 Speaker
ZEB BT4340RUCF



User Manual

www.zebronics.com

Description of the Subwoofer Control Panel



1. Bass Control
2. Volume Control
3. USB Port
4. AUX
5. Scan / Play / Pause
6. Prev. / Next
7. LED Display
8. LED Lights
9. Mode

Features

4.1 Channel speaker
BT/USB/AUX/FM
LED display
LED Lights
Volume & Bass adjustment
Remote control
Wall Mountable

Specification

Output power (RMS)

| | |
|------------|----------------|
| Subwoofer | : 20 Watts |
| Satellites | : 12 x 4 Watts |
| Total | : 68 Watts |

Driver size

| | |
|------------|--------------|
| Subwoofer | : 10.16cm |
| Satellites | : 7.62cm x 4 |

Impedance

| | |
|-----------|------|
| Subwoofer | : 4Ω |
| Satellite | : 4Ω |

Frequency response : 40Hz - 20kHz

S/N Ratio : ≥80dB

Separation : ≥45dB

File format support (USB): MP3

Line input : 2ch RCA

Max. supported USB

memory size : 32GB

FM frequency range : 87.5 MHz - 108 MHz

BT name : ZEBRONICS

BT Range : 10 Meters

BT version : 5.1

Product dimension (W x D x H)

Subwoofer : 152 x 275 x 203 mm

Satellite : 96 x 82 x 200 mm


Net. weight

Subwoofer : 2.37kg

Satellites : 287g x 4

Total : 3.51kg

Description of the Rear side of the Subwoofer

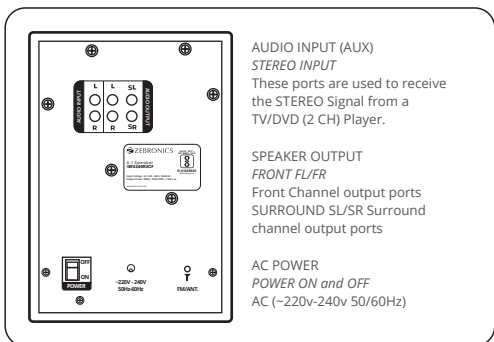

Description of the Rear side of the Subwoofer

1. Use the Power Button to Switch ON/OFF the Speaker. The MODE button can be used to change the different input modes of the speaker.
2. When in BT mode: Scan and connect your mobile phone with the speaker and once connected, audio can be streamed through the speaker.


3. The volume knob can be used to control the Volume level of the speaker. Similarly, bass knob is used for Bass adjustments.
4. While playing audio using BT/USB the PLAY/PAUSE button can be used to pause/resume the playback.
5. When in FM Mode, press SCAN button to initiate auto-scan all the channels and save it automatically. Once scanning is complete, press the Play/pause button to change the channels.
6. For playing using AUX Cable, connect the AUX cable on the rear input port of the speaker and connect the 3.5mm jack of the cable to a phone/laptop. Once connected, audio playback can be done.
7. For playback using USB drive insert the drive to the USB port of the speaker and the speaker will automatically start playing audio from that source.

AC POWER

Important Notes

- Make sure that the power supply is proper and never handle the power cord or its plug with wet hands when plugging into, or unplugging from a power socket.
- Ensure that the main power switch is in the "OFF" position before connecting the AC power cord to the power supply to avoid damage to the system.
- A damaged power cord can be easily cause an electric shock or fire hazard. Never use a power cord if it has been damaged.

DESCRIPTION OF THE REMOTE CONTROL

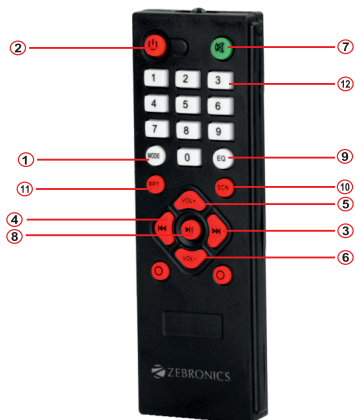

1. MODE to change between different input sources.
2. POWER Switch ON/OFF the speaker.
3. NEXT: to select the next song in USB/BT
4. PREV: to select the previous song in USB/BT
5. VOL+: Increase The Speaker Volume
6. VOL-: decrease the speaker volume
7. MUTE: Mute the audio playback
8. Play/Pause: play/pause the audio playback and also to change the next channel in FM mode
9. EQ: To change different Equalizer modes during USB playback
10. SCAN: For Auto-Scanning the channels in FM mode
11. REP: To enable the REPEAT ONE/ALL function
12. 0-9: To directly select the song number/FM channel using numbers from 0-9

Safety Precaution



WARNING:

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

* Note: This product is for indoor use only.

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the present of important operating and maintenance (servicing) instructions in the manual accompanying the product.



IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions before using the product
2. Read all warnings carefully
3. Follow all instructions carefully
4. Do not use this speaker unit near water

5. Clean only with dry cloth
6. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
7. Do not install near any heat source such as radiators, heat registers, stoves or other devices (including amplifiers) that produce heat.
8. Only use attachments / accessories specified by the manufacture.
9. Unplug this speaker unit during lightning storm or when unused for long periods of time.
10. Refer all the servicing part to qualified service personnel. Servicing is required when the speaker unit has been damaged in any way, such as power supply cord or plug is damaged, liquid has spilled or objects have fallen into the unit, has been exposed to rain or moisture, does not work normally, or has been dropped.

