



ZEBRONICS
ALWAYS AHEAD

4.1 Speaker
ZEB **FEEL4**



User Manual

www.zebronics.com

Dear Customer,

Thank you for purchasing the **ZEB-FEEL 4** 4.1 Speaker. Please read the user manual carefully before usage & save it for future reference.

Note:

- Avoid the usage of this speaker at the high temperature and high humidity environment.
- Avoid the self-disassembly of the product as it results in the failure of Warranty.
- Please turn off the power and pull out the plug, when the speaker is not in use.

Features

4.1 Channel Speaker

Wireless BT/USB/mSD/FM/AUX

Volume & Bass adjustment

LED Display

Remote control

10.16cm subwoofer

Specifications

Output power (RMS)

Subwoofer : 20 Watts

Satellite : 10 Watts x 4

Total : 60 Watts

Driver size

Subwoofer : 10.16 cm x 1

Satellite : 6.35 cm x 4

Impedance

Subwoofer : 6Ω

Satellite : 8Ω

Frequency response : 20Hz - 20kHz

S/N Ratio : ≥68dB

Separation : ≥45dB

File format

support (USB/mSD) : MP3

Line input : 2ch RCA

Max. supported

memory size (USB/mSD) : 32GB

FM frequency range : 87.5 MHz-108 MHz

BT name : Zebronics

BT version : 5.0

Product dimension (W x D x H)

Subwoofer : 15 x 25.5 x 23.7 cm

Satellite : 9 x 8.6 x 14.8 cm

Net. weight

Subwoofer : 2.1Kg

Satellite : 280g x 4

Total : 3.2Kg

Package content

Subwoofer : 1 U

 
Satellite : 4 U

Input cable : 1 U

Remote control : 1 U


QR Code guide : 1 U

Control Description

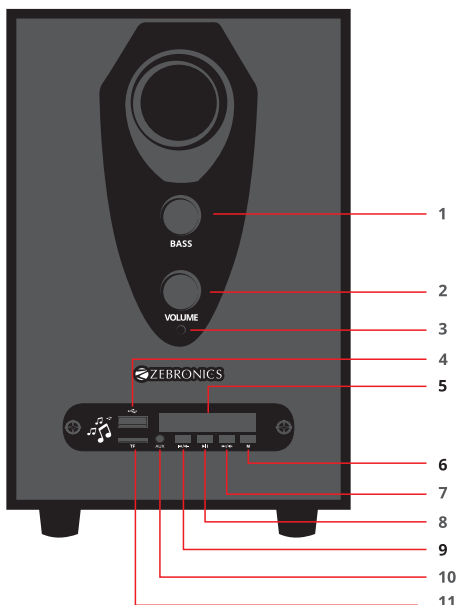


1. Bass Control
2. Volume Control
3. LED Indicator
4. USB Port
5. LED Display
6. Mode
7. Next / Volume+ / FM Channel +
8. Play / Pause / Scan
9. Prev / Volume - / FM Channel-
10. 3.5 mm AUX Port
11. Micro SD / TF Slot

 Back Panel

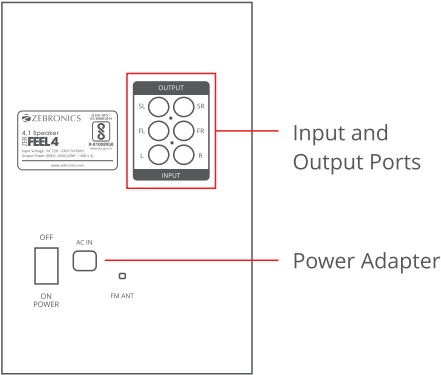

Remote control

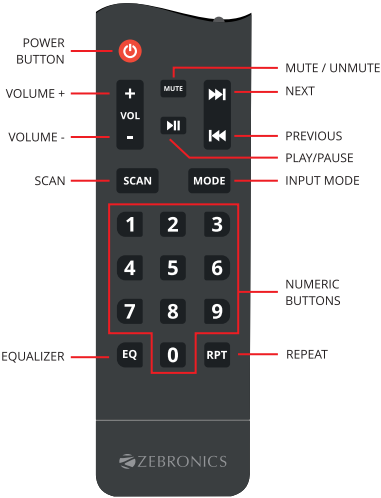 

Power : standby ON/OFF

Numeric Pad(0-9) : To select particular track from USB drive directly or to enter FM Channel frequency directly

Vol+ : To increase the volume

Prev : To select the previous tracks in BT/USB or to Tune in FM mode

Vol- : To decrease the volume

RPT : To Switch between available repeat modes

Scan : To scan all FM channels available

Mode : Mode Selection (BT/AUX/USB/FM)

EQ : Short press to control BASS and short Press again to control TREBLE. Long Press to use Equalizer

Play/Pause To Play / Pause the current track. To switch next channel in FM mode

Next : To select the next tracks in BT/USB or to Tune in FM mode

Mute To Mute / Unmute

Instructions for Use:

Button functions

1. Press the **"Mode"** button to change the input mode (BT/USB/mSD/FM/AUX) of the speaker.
2. Short press the **"Next/Prev"** button to change the Prev/ Next track or channel when in BT/USB mode or FM mode respectively.
3. Long press the **"Next/Prev"** button to increase/decrease the speaker volume.
4. Press the **"Play/Pause/Scan"** button to Play/Pause the track being played or Scan for the available FM channels.

General Instructions

BT Mode:

Power ON the speaker, press **"M"** button to switch to BT Mode. Switch ON BT on your phone or tablet and search for nearby BT devices, Search for the BT name **"Zebronics"** and tap to connect it.

USB/mSD Mode:

The speaker automatically switches to USB/mSD input mode with the LED display when a USB/mSD flash drive/card is inserted (this mode isn't selectable on the speaker or remote control unless a USB/mSD flash drive/card is connected).

FM radio:

Switch the speaker to FM mode. In FM mode, use the Play/Pause button in the subwoofer control panel or remote to scan for the available FM channels. Once the scanning is done, the scanned channels will begin to play.

AUX-IN:

The speaker can be connected to an audio device using an RCA to 3.5mm / 3.5mm to 3.5mm cable. Connect the one end of the cable to the speaker and the other end to an audio source. The songs from the audio source can be heard through the speaker.

