



ZEBRONICS
ALWAYS AHEAD

4.1 Speaker
SAMBA 5



User Manual

www.zebronics.com

Dear Customer,

Thank you for purchasing the **ZEB-SAMBA 5** 4.1 Speaker. Please read the user manual carefully before usage & save it for future reference.

Note:

- Avoid the usage of this speaker at the high temperature and high humidity environment.
- Avoid the self-disassembly of the product as it results in the failure of Warranty.
- Please turn off the power and pull out the plug, when the speaker is not in use.

Features

4.1 Channel Speaker

Wireless BT/USB/mSD/FM/AUX

LED Display

16.51 cm Subwoofer

Remote control

Volume, Bass and Treble adjustment

LED Lights

Stylish Design

Specifications

Output power (RMS)

Subwoofer : 45W

Satellite : 15W x 4

Total : 105W

Driver size


Subwoofer : 16.51 cm

Satellite	: 7.62 cm x 4
Impedance	
Subwoofer	: 8Ω
Satellite	: 4Ω
Frequency response	: 40Hz - 20kHz
S/N Ratio	: ≥72dB
Separation	: ≥45dB
File format	
support (USB/mSD)	: MP3
Line input	: 2ch RCA
Max. supported memory	
size (USB/mSD)	: 32GB
FM frequency range	: 87 MHz-108 Mhz
BT name	: ZEBRONICS
BT version	: 5.1
Product dimension (W x D x H)	
Subwoofer	: 215 x 350 x 310 mm
Satellite	: 108 x 97 x 313 mm
Net. weight	
Subwoofer	: 5.38 Kg
Satellite	: 524 g x 4
Total	: 7.47 Kg

Package Content


Subwoofer	: 1 U
Satellite	: 4 U
Remote	: 1 U
Input cable	: 1 U
QR Code Guide	: 1 U

Control Description

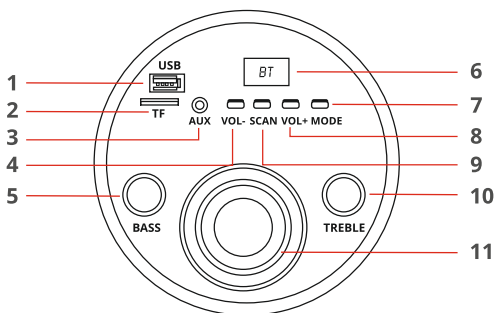

1. USB PORT
2. mSD CARD SLOT
3. AUX
4. PREVIOUS TRACK / VOL -
5. BASS
6. LED DISPLAY
7. MODE
8. NEXT TRACK / VOL +
9. SCAN
10. TREBLE
11. VOLUME CONTROLLER

Remote Control

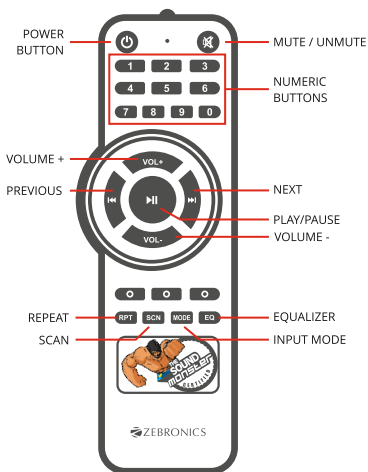

Power: Standby ON/OFF

Numeric Pad(0-9) : To select direct tracks from USB/mSD and to select two digits and above, by consecutively pressing

Vol+: To increase the volume

Prev : To select the previous songs in BT/USB/mSD or channels in FM mode

Vol-: To decrease the volume

RPT: To Switch between REP ALL Tracks or REP 1 Track

Scan : To scan all FM channels available

Mode: Mode Selection(BT/AUX/USB/mSD/FM)

EQ: Equalizer

Play/Pause To Play / Pause for current song

Next : To select the next songs in BT/USB/mSD or channels in FM mode

Mute To Mute / Unmute for currently playing song

General Instructions:

BT Mode: Switch the Speaker to BT mode, Scan for nearby BT devices in your mobile. Tap on **"ZEBRONICS"** to connect.

USB/mSD Mode: Insert the USB pen drive / mSD card to the speaker. The speaker will detect the mSD & USB & audio from it will be played automatically.

FM Radio: Switch the speaker to FM mode. In FM Mode, Long press the Scan key to scan the available FM channels. Once the scanning is done, the speaker will start playing the first scanned channel. Short press the Vol+ and Vol- buttons can be used to change the FM Channels

AUX-IN: Switch the speaker to AUX mode. The speaker can be connected to an audio device using an RCA to 3.5mm. Connect the one end of the cable to the speaker and the other end to an audio source. The songs from the audio source can be heard through the speaker.

