



ZEBRONICS
ALWAYS AHEAD

4.1 Speaker ZEB **SAMBA+**



User Manual

www.zebronics.com

Dear Consumer,

Thank you for purchasing ZEB-SAMBA PLUS 4.1 Speaker. Please read the user manual carefully before usage & save it for future reference.

Note :

- Avoid the usage of this product at the high temperature and high humidity environment.
- Avoid the self-disassemble of the product as it results in the failure of Warranty.
- Turn off the speaker if the speaker is not being used for a long period of time.

Features:

4.1 Channel speaker

Wireless BT/USB/SD/FM/AUX

LED Display

Volume, Treble & Bass adjustment

Multi-colour LED

Remote control

Specification:

Output power (RMS)

Subwoofer : 45 Watts

Satellite : 15 Watts x 4

Total : 105 Watts

Driver size

Subwoofer : 16.51 cm x 1

 
Satellite : 7.62 cm x 4

Impedance	
Subwoofer	: 8Ω
Satellite	: 4Ω
Frequency response	: 40Hz - 20kHz
S/N Ratio	: ≥72dB
Separation	: ≥45dB
File format support	
(USB/SD)	: MP3
Line input	: 2ch RCA
Max. supported	
memory size (USB/SD)	: 32GB
FM frequency range	: 87MHz-108 Mhz
BT name	: ZEB-SAMBA PLUS
BT version	: 5.0
Product dimension (W x D x H)	
Subwoofer	: 20 x 34 x 32.5 cm
Satellite	: 11.5 x 10.5 x 32.3 cm
Net. weight	
Subwoofer	: 5.2 kg
Satellite	: 820g x 4
Total	: 8.48 kg

Package content

Subwoofer	: 1 U
Satellite	: 4 U
Remote control	: 1 U
Input cable	: 1 U
QR Code Guide	: 1 U

Front panel description

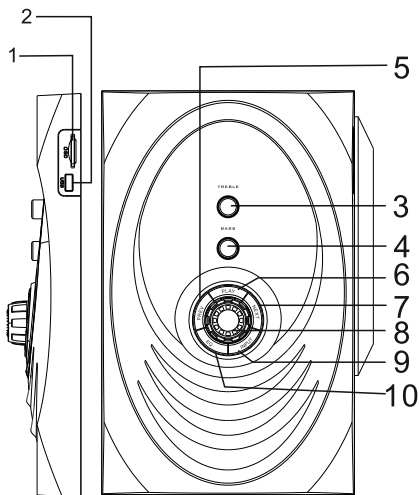

1. SD CARD: SD/MMC Card Slot

2. USB: USB Port for the pen drive

3. TREBLE: Treble +/- control

4. BASS: Bass +/- control

5. PREV:

In USB/SD mode: Press to go to previous track.

In FM mode: Press to go to previous pre-saved FM channel.

In all modes: Press and hold to decrease the volume.

6. PLAY:

In USB/SD mode: Press to Play the track.

Press again to Pause the playing track.

Press to Play again.

In FM mode: Long Press to search and save the FM Channels. Short Press will Mute the audio in Aux & FM Modes. Press again to release it from Mute.

7. NEXT:

In USB/SD mode: Press to go to next track.

In FM mode: Press to go to next pre-saved FM channel.

In all modes: Press and hold to increase the volume.

 
8. VOLUME: Volume +/- control

9. INPUT: Select the Input source

(Aux, Bluetooth, USB, SD or FM)

10. EQ: Equalizer presets in USB & SD/MMC modes.

Rear panel description

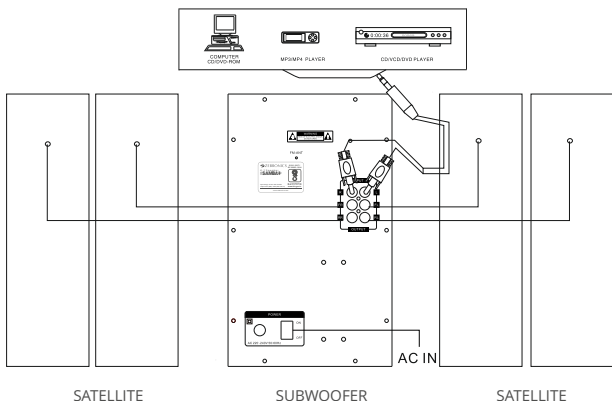

The lightning flash with arrowhead symbol, within an exclamation triangle, is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

CAUTION

RISK OF ELECTRIC SHOCK
DO NOT OPEN

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE BACK PANEL

 


The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions.

Remarks

1. Do not expose the product to high temperature, water or moisture.
2. Do not attempt to open or disassemble the product. You can get an electrical shock.
3. The authorized service personnel only, or else the warranty is invalid.
4. Please turn off the power and pull out the plug when the product is not in use.
5. USB connection can be used only for playing songs stored from U-disk. Charging for mobile or digital products is prohibited.

Remote Control

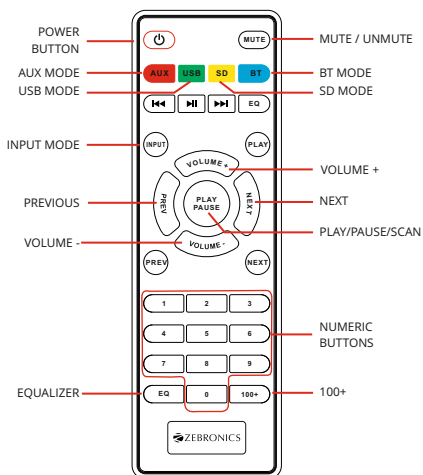

Power : standby ON/OFF

Numeric Pad (0-9) : To select direct tracks from SD Card / USB drive and select two digits by consecutively pressing

Vol+ : To increase the volume

Prev : To select the previous tracks in BT/USB/SD or channels in FM mode

Vol- : To decrease the volume

100+ : To select tracks when more than 100 tracks present in USB / SD Card

Input Mode : Mode Selection (BT/AUX/USB/SD/FM)

EQ : Equalizer Presets PASS/POP/ROCK/JAZZ/CLASS/COUN.

Play/Pause : To Play / Pause for current track, Long Press to scan all available FM channels in FM mode

Next : To select the next tracks in BT/USB/SD or channels in FM mode

Mute : To Mute / Unmute for currently playing track

AUX/USB/SD/BT : Dedicated Hotkeys for directly switching to AUX Mode / USB Mode / SD Mode / BT Mode

Instructions for Use:

Button functions

1. Press the **"Input"** button to change the input mode (BT/USB/SD/FM/AUX) of the speaker.
2. Short press the **"Next/Prev"** button to change the Prev/ Next track or channel when in BT/USB/SD mode or FM mode respectively.
3. Long press the **"Next/Prev"** button to increase/decrease the speaker volume.
4. Short press the **"PLAY"** button to Play/Pause the track being played or Mute/Unmute when in BT/USB/SD mode or FM/AUX mode respectively.
5. Press and Hold the **"PLAY"** button to Scan for the available FM channels.

General Instructions

BT Mode:

Power ON the speaker, press **"Input Mode"** button to switch to BT Mode. Switch ON BT on your phone or tablet and search for nearby BT devices, Search for the BT name **"ZEB-SAMBA PLUS"** and tap to connect it.

USB/SD Mode:

The speaker automatically switches to USB/SD input mode with the LED display when a USB flash drive/SD Card is inserted (this mode isn't selectable on the speaker or remote control unless a USB/SD flash drive is connected).

FM radio:

Switch the speaker to FM mode. In FM mode, long press the **PLAY / PAUSE** button in the subwoofer control panel or remote to scan for the available FM channels. Once the scanning is done, the scanned channels will begin to play.

AUX-IN:

Switch the speaker to AUX mode. The speaker can be connected to an audio device using an RCA to 3.5mm. Connect the one end of the cable to the speaker and the other end to an audio source. The songs from the audio source can be heard through the speaker.

