



ZEBRONICS  
ALWAYS AHEAD

4.1 Speaker  
ZEB **SAMBA**



User Manual

[www.zebronics.com](http://www.zebronics.com)

## **Dear Consumer,**

Thank you for purchasing ZEB-SAMBA 4.1 Speaker. Please read the user manual carefully before usage & save it for future reference.

### **Note:**

- Avoid the usage of this product at the high temperature and high humidity environment.
- Avoid the self-disassemble of the product as it results in the failure of Warranty.
- Turn off the speaker if the speaker is not being used for a long period of time.

### **Features:**

4.1 Channel speaker

Wireless BT/USB/SD/FM/AUX

LED Display

16.51 cm Subwoofer

Remote control

Volume, Bass and treble adjustment

Color changing lights

Stylish design

### **Specification:**

Output power (RMS)

Subwoofer : 45 Watts

Satellite : 15 Watts x 4

Total : 105 Watts

Driver size

Subwoofer : 16.51 cm x 1

 
Satellite : 7.62 cm x 4

Impedance	
Subwoofer	: 8Ω
Satellite	: 4Ω
Frequency response	: 20Hz - 20kHz
S/N Ratio	: ≥72dB
Separation	: ≥45dB
File format support (USB/SD)	: MP3
Line input	: 2ch RCA
Max. supported memory size (USB/SD)	: 32GB
FM frequency range	: 87MHz-108 Mhz
BT name	: ZEB-SAMBA
BT version	: 4.2
Product dimension (W x D x H)	
Subwoofer	: 200 x 340 x 325 mm
Satellite	: 115 x 105 x 323 mm
Package dimension (W x D x H)	: 515 x 385 x 375 mm
Net. weight	
Subwoofer	: 5.07 kg
Satellite	: 790g x 4
Total	: 8.23 kg

### **Package content**

Subwoofer	: 1 U
Satellite	: 4 U
Remote control	: 1 U
Input cable	: 1 U
QR Code Guide	: 1 U

## Front panel description

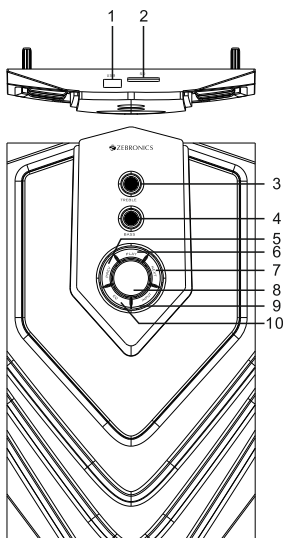

1. USB: USB Port for the pen drive
2. SD CARD: SD/MMC Card Slot
3. TREBLE: Treble +/- control
4. BASS: Bass +/- control
5. PREV:  
In BT/ USB/SD mode: Press to go to previous track.  
In FM mode: Press to go to previous pre-saved FM channel.  
In all modes: Press and hold to decrease the volume.

6. PLAY:

In BT/USB/SD mode: Press to Play the track.

Press again to Pause the playing track.

Press to Play again.

In FM mode: Long Press to search and save the FM Channels. Short Press will Mute the audio in Aux & FM Modes. Press again to release it from Mute.

7. NEXT:

In BT/USB/SD mode: Press to go to next track.

In FM mode: Press to go to next pre-saved FM channel.

In all modes: Press and hold to increase the volume.


8. VOLUME: Volume +/- control

9. INPUT: Select the Input source

(Aux, Bluetooth, USB, SD or FM)

10. EQ: Equalizer presets in USB & SD/MMC modes. PASS / POP / ROCK / JAZZ / CLASS / COUN.

## Rear panel description

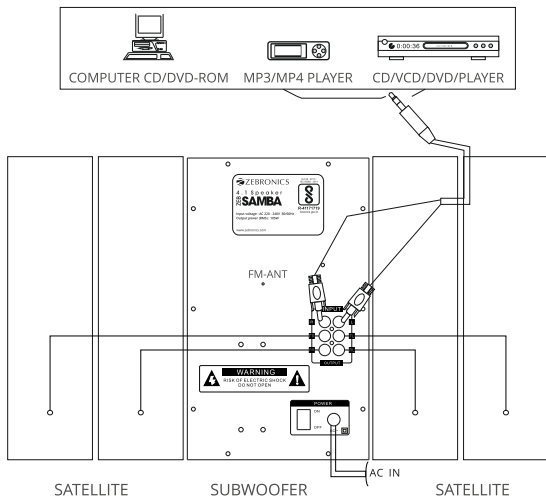 

The lightning flash with arrowhead symbol, within an exclamation triangle, is intended to alert the user to the presence of un-insulated dangerous voltage within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock

### CAUTION

 
RISK OF ELECTRIC SHOCK  
DO NOT OPEN

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE BACK



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions

## Remote Control Description

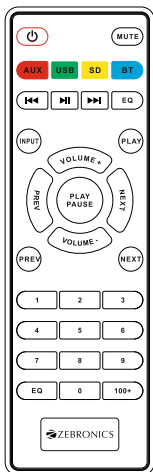

INPUT	The input signal switching (AUX/Bluetooth/USB/SD/FM)
PREV	Previous track in USB, BT & SD Card modes, previous FM station in FM mode.
PLAY/PAUSE	Play & pause in USB, BT & SD Card modes, Mute/Unmute in AUX & FM modes, Long press for auto searching - FM station in FM mode.
NEXT	Next track in USB, BT & SD Card mode, Next FM station in FM mode.

AUX	AUX input
USB	USB input
SD	SD input
BT	Bluetooth input
0-9	0 TO 9 button is the selection key to select the tracks in the USB and SD Card
100+	This is used to select track when more than hundred tracks in your USB/SD Card.
EQ	Equalizer presets in USB & SD/MMC modes. PASS/POP/ROCK/JAZZ/CLASS/COUN.
- VOLUME+	Volume level increase & decrease

### **BLUETOOTH CONNECTION INSTRUCTIONS:**

First, press the INPUT KEY to switch to the "BT" Bluetooth Audio INPUT mode. Next open the phone's Bluetooth and search for the Bluetooth device. Click on the Bluetooth name "ZEB-SAMBA" to connect

