



ZEBRONICS
ALWAYS AHEAD

ZEB 4.1 Speaker
SAMBA



User Manual

www.zebronics.com

Dear Consumer,

Thank you for purchasing ZEB-SAMBA 4.1 Speaker. Please read the user manual carefully before usage & save it for future reference.

Note:

- Avoid the usage of this product at the high temperature and high humidity environment.
- Avoid the self-disassemble of the product as it results in the failure of Warranty.
- Turn off the speaker if the speaker is not being used for a long period of time.
- To know more about Terms and conditions for warranty policy, please visit <https://zebronics.com/pages/warranty-policy>

Features:

4.1 Channel Speaker

BT v5.0/USB/FM/AUX

LED Display

16.51cm Subwoofer

Remote control

Volume, Bass and Treble adjustment

Color Changing Lights

Specification:

Output power (RMS)

Subwoofer : 45 Watts

Satellite : 15 Watts x 4

 
Total : 105 Watts

Driver size	
Subwoofer	: 16.51 cm x 1
Satellite	: 7.62 cm x 4
Impedance	
Subwoofer	: 8Ω
Satellite	: 4Ω
Frequency response	: 20Hz - 20kHz
S/N Ratio	: ≥68dB
Separation	: ≥45dB
File format support	
(USB)	: MP3
Line input	: 2ch RCA
Max. supported	
memory size (USB)	: 32GB
FM frequency range	: 88MHz-108 Mhz
BT name	: ZEB-SAMBA
BT version	: v5.0
Product dimension (W x D x H)	
Subwoofer	: 20 x 34 x 32.5 cm
Satellite	: 11.5 x 10.5 x 32.3 cm
Net. weight	
Subwoofer	: 5.07 kg
Satellite	: 790g x 4
Total	: 8.23 kg

Package content

Subwoofer	: 1 U
Satellite	: 4 U
Remote control	: 1 U
Input cable	: 1 U
QR Code Guide	: 1 U

Front panel description

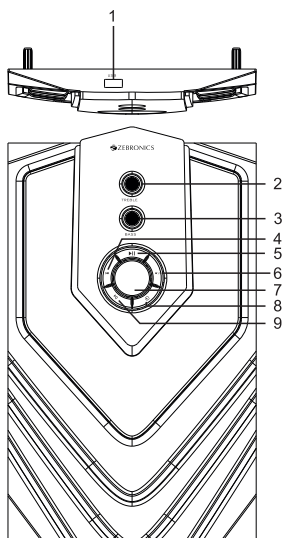

1. USB: USB Port for the pen drive

2. TREBLE: Treble +/- control

3. BASS: Bass +/- control

4. PREV:

In BT/ USB mode: Press to go to previous track.

In FM mode: Press to go to previous pre-saved FM channel.

In all modes: Press and hold to decrease the volume.

5. PLAY:

In BT/USB mode: Press to Play the track.

Press again to Pause the playing track.

Press to Play again.

In FM mode: Long Press to search and save the FM Channels. Short Press will Mute the audio in Aux & FM Modes. Press again to release it from Mute.

6. NEXT:

In BT/USB mode: Press to go to next track.

In FM mode: Press to go to next pre-saved FM channel.

 
In all modes: Press and hold to increase the volume.



7. VOLUME: Volume +/- control

8. INPUT: Select the Input source
(Aux, BLUE TOOTH, USB, FM)


9. EQ: Equalizer presets in USB mode.
PASS / POP / ROCK / JAZZ /
CLASS / Normal/Country.

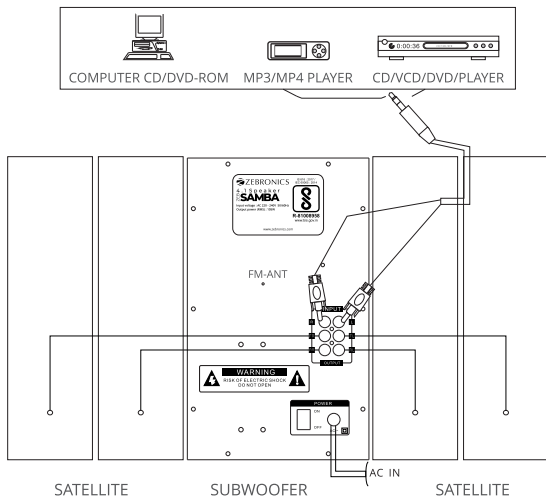Rear panel description



 <p>The lightning flash with arrowhead symbol, within an exclamation triangle, is intended to alert the user to the presence of un-insulated dangerous voltage within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock</p>	<p>CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN</p> <p>CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE BACK</p>	 <p>The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions</p>
---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

 Remote Control

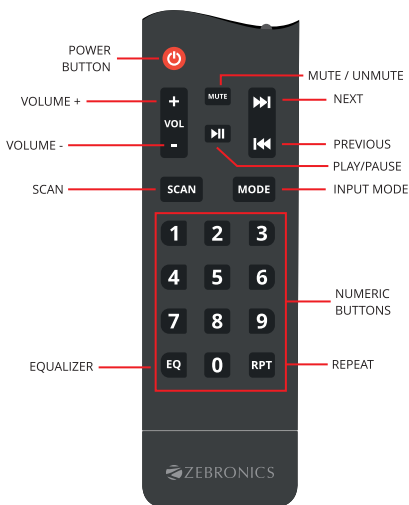

Power : standby ON/OFF

Numeric Pad (0-9) : To select particular track from USB drive directly or to enter FM Channel frequency directly

Vol+ : To increase the volume

Prev : To select the previous tracks in BT/USB or to Tune in FM mode

Vol- : To decrease the volume

RPT : To Switch between available repeat modes

Scan : To scan all FM channels available

Mode : Mode Selection (BT/AUX/USB/FM)

EQ : Short press to control BASS and short Press again to control TREBLE. Long Press to use Equalizer

Play/Pause To Play / Pause the current track. To switch next channel in FM mode

Next : To select the next tracks in BT/USB or to Tune in FM mode

Mute To Mute / Unmute

General Instructions

BT Mode:

Switch the source to BT mode, scan for nearby BT devices on your device. Tap on **"ZEB-SAMBA 4.1"** to connect.

USB Mode:

Insert the USB drive to the slot provided on the subwoofer. It will detect the USB and the audio files from drive will be played automatically.

FM Radio:

Switch the source to FM mode. Press the **SCAN** button on the remote or control Panel to scan the available FM channels. Once the scanning is done, the first scanned channel will begin to play. Use **"Play/Pause"** button on the remote to go to next channel.

AUX-IN:

The device can be connected to an audio device using an 2 Channel RCA to 3.5mm cable. Connect the one end of the cable to the speaker and the other end to an audio source. The songs from the audio source can be heard through the speaker.

ISO 9001:2015 Certified Company

www.zebronics.com

