



ZEBRONICS
ALWAYS AHEAD

 
4 . 1 S p e a k e r
ZEB **SUNSHINE**



User Manual

www.zebronics.com

Safety Precaution

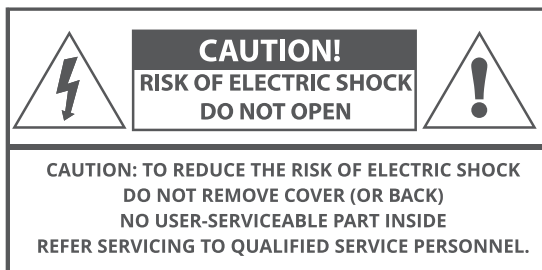

Warning

To prevent fire or shock hazard, do not expose this equipment to rain or moisture.

Note: *This Product is for indoor use only*



The lightning flash within an equilateral triangle is intended to alert you to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

 


Important! This symbol alerts you to the presence of important operating and maintenance (servicing) instructions in the manual accompanying the product.

Important Safety Instructions


1. Read these instructions before using the product.
2. Do not use this apparatus near water.
3. Clean only with dry cloth.
4. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
5. Do not install near any heat sources such as radiators, heaters, stoves, or other apparatus (including amplifiers) that produce heat.
6. Only use attachments / accessories specified by the manufacturer.
7. Unplug this apparatus during lightning storms or when unused for long periods of time.

DESCRIPTION OF THE SUBWOOFER CONTROL PANEL

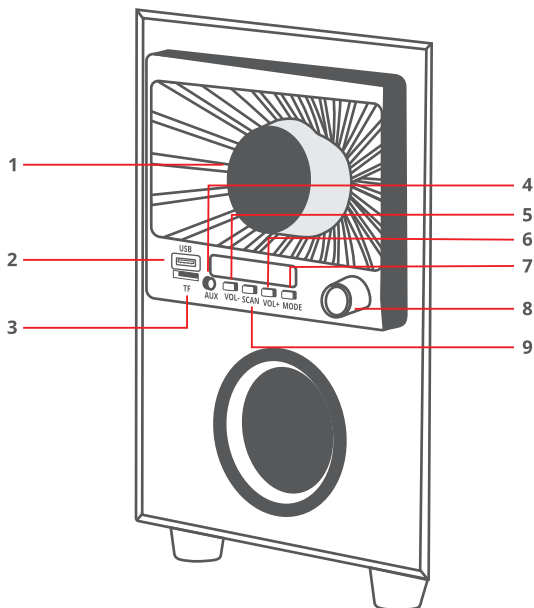

1. VOLUME CONTROL
2. USB PORT
3. MICROSD PORT
4. AUX
5. PREV/VOL-
6. NEXT/VOL+
7. MODE
8. BASS CONTROL
9. SCAN/PLAY/PAUSE

 DESCRIPTION OF THE REAR SIDE OF THE SUBWOOFER

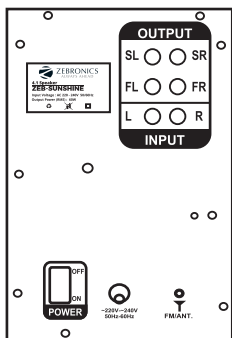

AUDIO INPUT (AUX)

STEREO INPUT

These ports are used to receive the STEREO signal from a TV/DVD (2 CH) player.

SPEAKERS OUTPUT

FRONT FL/FR

Front channel output ports

SURROUND SL/SR

Surround channel Output ports

AC POWER

POWER ON and OFF

AC (~220V-240V 50/60Hz)

Unit Operation

 
1. First plug the cable of the satellite into the output jack on the rear panel of the woofer, one end of the audio cord into the input jack on the rear panel, the other end into the output jack of the computer or other audio equipment, the power cord into the power supply jack, switch on the computer or other audio equipment, switch on the unit, LED Display on the front panel light up, the system starts to work.
2. Bluetooth operation: Change the mode of the speaker to BT. Now switch ON bluetooth in your phone / tablet and search for ZEBRONICS BT name. Tap to connect it.

3. Rotate the VOLUME knob to adjust the volume, rotate the BASS knob to adjust the bass.
4. When USB device is working, press the SCAN button to pause / resume music.
5. When it is in FM mode, push SCAN button to search the channel automatically according to local radio conditions. It can save 20 stations at most, after the search has been finished, it plays the first channel saved automatically.
6. When USB device is working, press the MODE button to cycle through the LINE IN, FM, USB, Micro SD.
7. When USB / Micro SD device is working, short press the VOL- and VOL+ button to choose the previous or the next/track channel, long Press VOL- and VOL+ button to adjust the volume.

Important Notes

- *Make sure that the power supply is proper and never handle the power cord or its plug with wet hands when plugging into, or unplugging from a power socket.*
- *Ensure that the main power switch is in the "OFF" position before connecting the AC power cord to the power supply to avoid damage to the system.*
- *A damaged power cord can be easily cause an electric shock or fire hazard. Never use a power cord if it has been damaged.*

Remote control

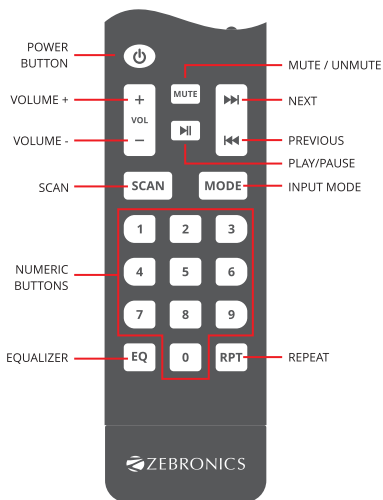

Power : standby ON/OFF

Numeric Pad(0-9) : To select particular track from USB drive directly or to enter FM Channel frequency directly

Vol+ : To increase the volume

Prev : To select the previous tracks in BT/USB or to Tune in FM mode

Vol- : To decrease the volume

RPT : To Switch between available repeat modes

Scan : To scan all FM channels available

Mode : Mode Selection (BT/AUX/USB/FM)

EQ : Short press to control BASS and short Press again to control TREBLE. Long Press to use Equalizer

Play / Pause To Play / Pause the current track. To switch next channel in FM mode

Next : To select the next tracks in BT/USB or to Tune in FM mode

Mute To Mute / Unmute

Features:

4.1 Channel Speaker

Wireless BT/USB/mSD/AUX/FM

LED Display

10.16cm Subwoofer

Remote control

Volume and Bass control

Wall mountable

Specification:

Output power (RMS)

Subwoofer : 20 Watts

Satellite : 10 Watts x 4

Total : 60 Watts

Driver Size

Subwoofer : 10.16cm

Satellite : 7.62cm x 4

Impedance

Subwoofer : 8Ω

Satellite : 8Ω

Frequency response : 20Hz - 20kHz

S/N Ratio : ≥80dB

Separation : ≥45dB

Fileformat support

(USB/mSD) : MP3

Line input : 2ch RCA

Max. Supported memory

Size (USB/mSD) : 32 GB

FM frequency range : 87MHz - 108MHz

BT Name : Zebronics

BT Version : 5.1

Product dimension (W x D x H)

Subwoofer : 15.5 x 27 x 23.8 cm

Satellite : 8.5 x 7 x 13.5 cm

Net. weight

Subwoofer : 1.63kg

Satellite : 286g x 4

Total : 2.77kg

Package contents:

Subwoofer : 1 U

Satellite : 4 U

Remote control : 1 U

Input cable : 1 U

QR Code guide : 1 U

ISO 9001:2015 Certified Company

www.zebronics.com

