



4.1 Speaker
ZEB **SAMBA 200**



User Manual

www.zebronics.com

Thank you for purchasing **ZEB-SAMBA 200** 4.1 speaker. Please read this user manual carefully before usage & save it for future reference.

Note:

- Avoid the usage of this speaker at high-temperature and high-humidity environments.
- Avoid the self-disassembly of the product as it results in failure of warranty.

Features:

- 4.1 channel speaker
- BT v5.0 / USB / AUX
- FM Radio
- LED display
- 13.335 cm subwoofer
- Remote control
- RGB LED With with Modes
- Glossy Finish

Specifications:

Output Power (RMS) : Total - 105 watts

Driver Size

Subwoofer : 13.335 cm

satellite : 7.62 cm x 4

Impedance

Subwoofer : 4Ω

Satellite : 4Ω

Frequency Response : 20Hz-20kHz

S/N Ratio : ≥68dB

Separation : ≥45dB

File format Support (USB) : MP3

Line Input : 2ch RCA

Max supported

memory size (USB) : 32GB

FM Frequency range : 87.5MHz - 108MHz

BT name : ZEB-Samba 200

BT Version : 5.0

Product Dimensions (W x D x H)

Subwoofer : 18 x 32.8 x 25 cm

satellite : 11.5 x 9.5 x 16.8 cm

Net. Weight

Subwoofer : 3.819kg

 
satellite : 310g x 4

Total : 5.059kg

Package Contents:


Subwoofer	: 1 U
Satellite	: 4 U
Remote	: 1 U
Input cable	: 1 U
QR Code Guide	: 1 U

Control Panel Description

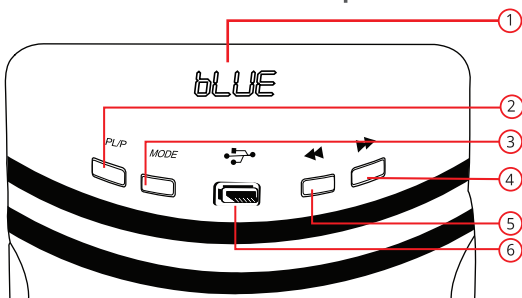


1. LED Display
2. Play/Pause | Scan Button
3. Input Mode
4. Next Track | Volume Increase
5. Previous Track | Volume Decrease
6. USB Port

 Back Panel Description

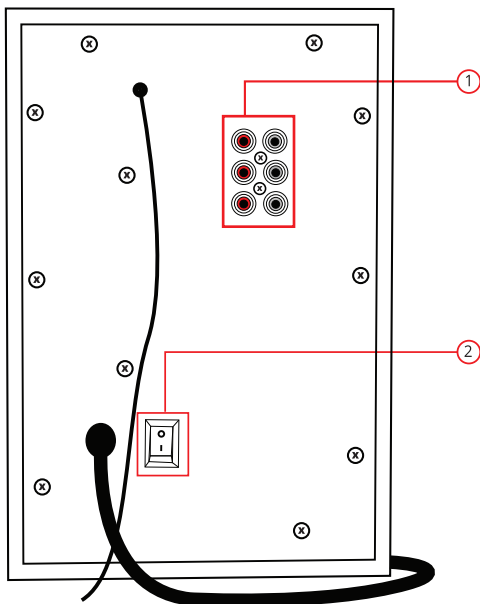

1. Audio Input and Output Ports
2. Power On / Off Switch

 Remote Control

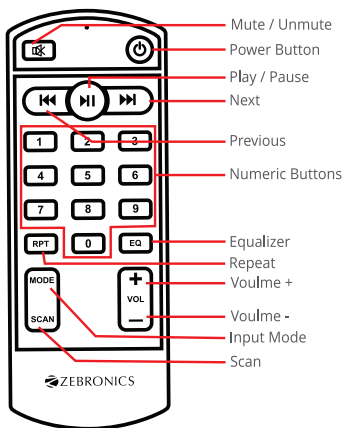

Mute : To Mute / Unmute

Power : Standby ON/OFF

Play/pause : To Play / Pause the current track. To switch next channel in FM mode

Next : To select the next tracks in BT/USB or to Tune in FM mode

Previous : To select the previous tracks in BT/USB or to Tune in FM mode

Numeric Pad (0-9) : To select particular track from USB drive directly or to enter FM channel frequency directly

EQ : Short press to control BASS and short Press again to control TREBLE. Long press to use Equalizer

RPT : To Switch between avilabel repeat modes

Vol+ : To Increase the volume

Vol- : To Decrease the volume

Mode : Mode selection (BT/AUX/USB/FM)

Scan : To scan all FM channel available.

General Instructions

BT Mode:

Switch the speaker to BT mode, Scan for nearby BT devices in your device. Tap on **ZEB-SAMBA 200** to connect.

USB Mode:

Insert the USB drive to the speaker. The speaker will detect the USB and the audio files from drive will be played automatically.

FM Radio:

Switch the speaker to FM mode, In FM mode, use the “**SCN**” button in remote to scan for the available FM channels. Once the scanning is done, the scanned channel will begin to play. The next button or previous button in the remote can be used to change the FM channels.

AUX-IN

The Speaker can be connected to an audio device using an RCA to 3.5mm cable. connect the one end of the cable to the speaker and the other end to the audio source. The songs from the audio source can be heard through the speaker.

