





User Manual

www.zebronics.com

Thank you for purchasing the ZEB-UDAAN

4 - 4.1 Speaker. Please read the user manual carefully before usage & save it for future reference

Note:

- Avoid the usage of this product at the high temperature and high humidity environment.
- Avoid the self-disassembly of the products or it results in the voiding the product's Warranty.
- Turn off the speaker when the speaker is not in use.
- To know more about Terms and conditions for warranty policy, please visit

https://zebronics.com/pages/warranty-policy

Features

- 4.1 channel speaker
- Wireless BT/USB/AUX/FM
- LED display
- Synchronized multi color dancing LED with on/off switch
- · Remote control
- · Volume, Bass & Treble adjustment
- Wall mountable

Specifications

Output power (RMS)

Subwoofer : 20W Satellite : 10W x 4 Total : 60W

Driver size

Subwoofer : 10.16 cm

Satellite $:7.62 \,\mathrm{cm} \,\mathrm{x} \,4$

Impedance

Subwoofer : 4Ω

Satellite : 4Ω

Frequency response : 40Hz - 20kHz

S/N Ratio $: \ge 80 dB$ Separation $: \ge 45 dB$

File format

support (USB) : MP3

Line input : 2ch RCA

Max. supported USB

memory size : 32GB

FM frequency range : 87.5 MHz-108 MHz

BT name : Zebronics

BT version : 5.1 Product dimension (W x D x H)

Subwoofer : 15 x 27.5 x 21 cm Satellite : 9.6 x 9.5 x 13.5 cm

Net. weight

Subwoofer : 3 kg Satellites : 1.2 kg Total : 4.2 kg


Package Content

Subwoofer : 1 U Satellite : 4 U Remote : 1 U


Input Cable : 1 U

QR Code Guide : 1 U

Control Panel Description

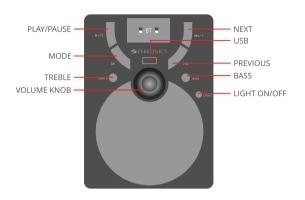

Back Panel Description

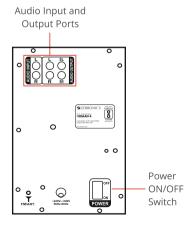

Remote Control - Type 1



Power: Standby ON/OFF

Numeric Pad (0-9): To select direct tracks from USB and to select two digits and above, by consecutively pressing

Vol+: To increase the volume

Prev: To select the previous songs in BT/USB

Vol-: To decrease the volume

RPT: To Switch between REP ALLtracks or REP 1 track

Mode: Mode Selection(BT/AUX/USB/FM)

EQ:Equalizer


Play/Pause:To Play/Pause for current song & FM Next

Channel Navigation

Next: To select the next songs in BT/USB

Mute: To Mute / Unmute for currently playing song

Remote Control - Type 2

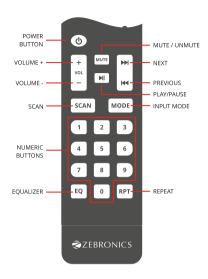

Power: standby ON/OFF

Numeric Pad(0-9) : To select particular track from USB drive directly or to enter FM Channel frequency directly

Vol+: To increase the volume

Prev : To select the previous tracks in BT/USB or to Tune

in FM mode

Vol-: To decrease the volume

RPT: To Switch between available repeat modes

Scan: To scan all FM channels available **Mode:** Mode Selection (BT/AUX/USB/FM)

EQ: Press to use Equalizer

Play/Pause To Play / Pause the current track. To switch

next channel in FM mode

Next: To select the next tracks in BT/USB or to Tune in

FM mode

Mute To Mute / Unmute

General Instructions

Switch the speaker to BT mode, Scan for nearby BT devices in your device. Tap on "**Zebronics**" to connect.

USB Mode:

Insert the USB flash drive to the speaker. The speaker will detect the USB and the audio files from flash drive will be played automatically. (This mode isn't selectable on the speaker or remote control unless a USB flash drive is connected).

Ensure that your USB flash drive contains MP3/WAV/WMA files (other file types not supported).

FM Radio:

Switch the speaker to FM mode. In FM mode, press &hold the "Play / Pause" button in the remote to scan for the available FM channels. Once the scanning is done, the scanned channels will begin to play. The next button or previous button in the remote can be used to change the FM channels.

AUX-IN:

The speaker can be connected to an audio device using an RCA to 3.5mm cable. Connect the one end of the cable to the speaker and the other end to an audio source.

The songs from the audio source can be heard through the speaker.

ISO 9001:2015 Certified Company www.zebronics.com