

5.1 Speaker 100 BASSO 100



User Manual

www.zebronics.com

Dear Customer,

Thank you for purchasing the **ZEB-BASSO 100** 5.1 Speaker. Please read the user manual carefully before usage & save it for future reference.

Note:

- Avoid the usage of this speaker at the high temperature and high humidity environment.
- Avoid the self-disassembly of the product as it results in the failure of Warranty.
- Please turn off the power and pull out the plug, when the speaker is not in use.

Features

5.1 Channel Speaker
Wireless BT/USB/FM/AUX/AC-3
LED Display
Remote control
13.33cm Subwoofer
RGB Ring Light
Elegant Design
Wall Mountable

Specifications

Output power (RMS)

Subwoofer : 30W Satellite : 12W x 5 Total : 90W

Driver size

Subwoofer : 13.33 cm x 1

Satellite : 7.62 cm x 5

Impedance

Subwoofer : 8Ω Satellite : 4Ω

Frequency response : 20Hz - 20kHz

S/N Ratio : ≥55dB Separation : ≥35dB

File format

support (USB) : MP3

Line input : 2ch RCA, AC-3

Max. supported

memory size (USB) : 32GB

FM frequency range : 87.5 MHz - 108 Mhz BT name : 7FB-BASSO 100 5.1

BT version : 5.1

Product dimension (W x D x H)

Subwoofer : 160 x 340 x 260 mm Satellite : 105 x 90 x 205 mm

Net. weight


Subwoofer : 4.25 Kg Satellite : 535 g x 5 Total : 6.92 Kg

Package Content

Subwoofer : 1 U
Satellite : 5 U
Input cable : 1 U
FM Cable : 1 U
Remote : 1 U


QR code guide : 1 U

Control Description

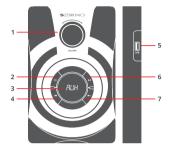


- VOLUME CONTROL KNOB / MFB
 Volume Control: To adjust volume level
 MFB Control: To Calibrate the front speaker /
 surround speaker / subwoofer / center
- 2. INPUT MODE (AUX/BT/FM/USB/AC3)
- 3. LED DISPLAY
- 4. PREV/FM CHANNEL-
- 5. USB PORT
- 6. PLAY/PAUSE/SCAN
- 7. NEXT / FM CHANNEL+

Back Panel

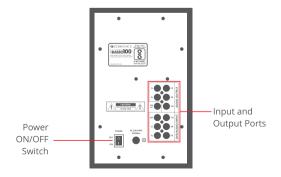

Remote Control

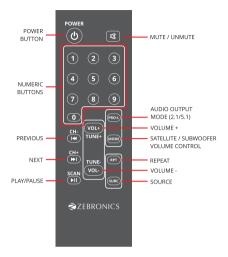

Standby: Power ON/OFF

Mute/Unmute

Numeric Pad(0-9) : To select tracks from USB & BT and to enter FM Channel Frequency directly.

PRO-L: To switch audio output as 2.1 or 5.1.

CH -: Go to previous track in USB /BT mode & to previous channel in FM mode.

VOL +: To increase master volume.

Mode: To change center/rear/front satellite and subwoofervolume.

CH + : Go to next track in USB/BT mode & to next channel in FM mode.

 $\mbox{\bf RPT}$: To use available repeat option . This function works only in USB mode.

Play/Pause : To play/pause audio output in BT/USB and to scan available channels in FM mode

VOL -: To decrease master volume.

SURC: To change source (AUX/USB/BT/FM/AC-3)

General Instructions

Switch the source to BT mode, scan for nearby BT devices on your device. Tap on "ZEB-BASSO 100 5.1" to connect.

USB Mode:

Insert the USB drive to the slot provided on the subwoofer. It will detect the USB and the audio files from drive will be played automatically.

FM Radio:

Switch the source to FM mode. Press the "Play / Pause" button in the remote or control panel to scan for the available FM channels. Once the scanning is done, the first scanned channel will begin to play. The next button or previous button in the remote can be used to change the FM channels.

AUX-IN:

The device can be connected to an audio device using an RCA to 3.5mm cable. Connect the one end of the cable to the speaker and the other end to an audio source. The tracks from the audio source can be heard through the speaker.

ISO 9001:2015 Certified Company www.zebronics.com