



ZEBRONICS
ALWAYS AHEAD

5.1 Speaker
ZEBBASSO**200**



User Manual

www.zebronics.com

Dear Customer,

Thank you for purchasing the **ZEB-BASSO 200** 5.1 Speaker. Please read the user manual carefully before usage & save it for future reference.

Note:

- Avoid the usage of this speaker at the high temperature and high humidity environment.
- Avoid the self-disassembly of the product as it results in the failure of Warranty.
- Please turn off the power and pull out the plug, when the speaker is not in use.

To know more about Terms and conditions for warranty policy, please visit

<https://zebronics.com/pages/warranty-policy>

Features

5.1 Channel Speaker

Wireless BT/USB/FM/AUX/AC-3

LED Display

Remote control

13.33cm Subwoofer

Multicolor Light

Elegant Design

Wall Mountable

Specifications

Output power (RMS)

Subwoofer : 50 watts

 
Satellite : 12 watts x 5

Total	: 110 watts
Driver size	
Subwoofer	: 13.33 cm x 1
Satellite	: 7.62 cm x 5
Impedance	
Subwoofer	: 8Ω
Satellite	: 8Ω
Frequency response	: 20Hz - 20kHz
S/N Ratio	: ≥55dB
Separation	: ≥35dB
File format	
support (USB)	: Mp3
Line input	: 2ch RCA, AC-3
Max. supported	
memory size (USB)	: 32GB
FM frequency range	: 88 MHz - 108 MHz
BT name	: ZEB-BASSO 200 5.1
BT version	: 5.1
Product dimension (W x D x H)	
Subwoofer	: 17 x 34 x 26.5 cm
Satellite	: 10.5 x 9 x 20 cm
Net. weight	
Subwoofer	: 4.65 kg
Satellite	: 550g x 5
Total	: 7.4 kg

Package Content


Subwoofer	: 1 U
Satellite	: 5 U
Input cable	: 1 U
FM Cable	: 1 U
Remote	: 1 U
QR code guide	: 1 U

Control panel Functions:-

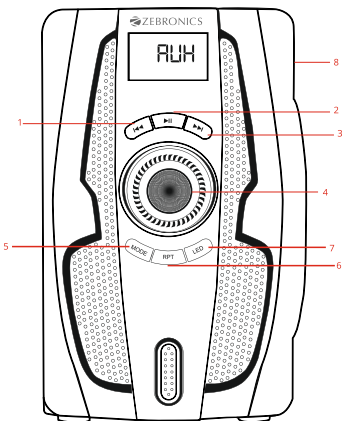


1. ◀◀ - Previous button
2. ▶◼ - Play/Pause button
3. ▶▶ - Next button
4. Volume Knob
5. Mode button
6. Repeat button
7. LED Button
8. USB Port

 Back Panel

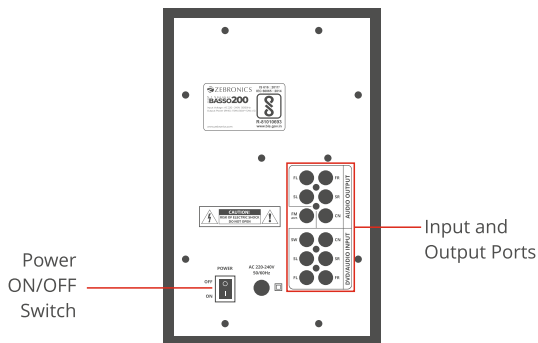

Remote Control

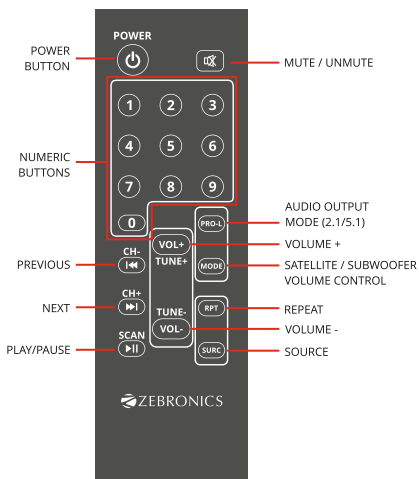 

Standby : Power ON/OFF

Mute/Unmute

Numeric Pad(0-9) : To select tracks from USB & BT and to enter FM Channel Frequency directly.

PRO-L : To switch audio output as 2.1 or 5.1 .

CH - : Go to previous track in USB /BT mode & to previous channel in FM mode.

VOL + : To increase master volume.

Mode : To change center/rear/front satellite and subwoofer volume.

CH + : Go to next track in USB/BT mode & to next channel in FM mode.

RPT : To use available repeat option . This function works only in USB mode.

Play/Pause : To play/pause audio output in BT/USB and to scan available channels in FM mode

VOL - : To decrease master volume.

SURC : To change source (AUX/USB/BT/FM/AC-3)

General Instructions

BT Mode:

Turn on the speaker, press "Mode" button to switch to BT Mode. Switch ON BT on your phone or tablet and search for nearby BT devices, Search for the BT name "**ZEB-BASSO 200 5.1**" and tap to connect it.

AUX-IN:

Switch the speaker to AUX mode. The speaker can be connected to an audio source using a RCA to 3.5mm cable. Connect the one end of the cable to the speaker and the other end to an audio source. The songs from the audio source can be heard through the speaker.

FM Radio:

- Switch the speaker to FM mode. In FM mode, use the **▶▶** button in the control panel to scan for the available FM channels. Once the FM scanning is done, the scanned channels will begin to play.
- Press **◀◀** button to switch to previous FM channel and Press the **▶▶** button to switch to next FM channel.

USB Mode:

The speaker automatically switches to USB input mode when a USB flash drive is inserted. The songs from the audio source can be heard through the speaker (this mode isn't selectable on the speaker unless a USB flash drive is connected). Press the **◀◀** button to switch to previous audio track and Press the **▶▶** button to switch to Next audio track.

AC-3 Mode:

Users can connect a dedicated 5.1 input to this speaker and use the AC-3 Input mode to experience true 5.1 surround sound, possible inputs involving DVD Player, Computer, TV, etc...

(Please ensure the input devices are compatible with 5.1 content and 5.1 RCA connector output supported).

ISO 9001:2015 Certified Company

www.zebronics.com

