

# 5.1 Speaker SPARK100



# **User Manual**

www.zebronics.com

### Dear Customer,

Thank you for purchasing ZEB-SPARK 100 5.1 Speaker. Please read the user manual carefully before usage & save it for future reference.

#### Note:

- Avoid the usage of this product at the high temperature and high humidity environment.
- Avoid the self-disassembly of the products or it results in the voiding the product's Warranty.
- Turn off the speaker when the speaker is not in use.
- To know more about Terms and conditions for warranty policy, please visit:

https://zebronics.com/pages/warranty-policy

#### **Features**

5.1 Channel speaker Wireless BT/USB/FM/AUX LED display Remote control 13.33cm Subwoofer RGB Lights

## **Specification**

Output Power (RMS)

Subwoofer : 50 Watts
Satellite : 10 Watts x 5
Total : 100 Watts

Driver size

Subwoofer : 13.33cm x 1

Satellite : 7.62cm x 5

**Impedance** 

Subwoofer :  $4\Omega$ Satellite :  $8\Omega$ 

Frequency response : 20Hz - 20kHz

S/N Ratio :≥72dB Separation :≥45dB

File format support (USB): Mp3 Line input : 2ch RCA

Max. supported USB

memory size : 64GB

FM frequency range : 87.5 MHz - 108 MHz

BT name : ZEB-SPARK 100 5.1

BT version : v5.1 Product dimension (W x D x H)

> Subwoofer : 18 x 33.4 x 26.5 cm Satellite : 10.5 x 8.5 x 18 cm

Net. weight

Subwoofer : 4.25kg Satellites : 335g x 5 Total : 5.92kg


# Package contents

Subwoofer : 1 U
Satellite : 5 U
Remote control : 1 U
FM Cable : 1 U
Input cable : 1 U

nput cable : 1 U


QR Code guide : 1 U

## Description of the Subwoofer front control panel:

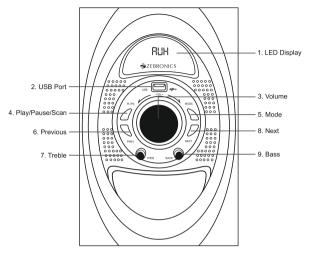


- 1. LED Display, 2. USB Port, 3. Volume control
- 4. Play/Pause/Scan, 5. Mode, 6. Previous
- 7. Treble control, 8. Next, 9. Bass control

# Description of the Subwoofer back control panel:

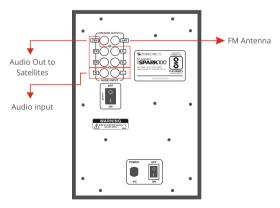

#### **Remote Control**

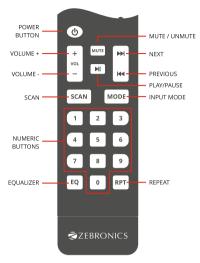

Power: standby ON/OFF

**Numeric Pad( 0-9) :** To select particular track from USB drive directly or to enter FM Channel frequency directly

Vol+: To increase the volume

**Prev :** To select the previous tracks in BT/USB or to Tune

in FM mode

Vol-: To decrease the volume

RPT: To Switch between available repeat modes

**Scan:** To scan all FM channels available **Mode:** Mode Selection (BT/AUX/USB/FM)

**EQ:** Short press to use Equalizer (Nor, roc, pop, Jaz,

CLA, Cut)

**Play/Pause** To Play/Pause the current track. To switch

next channel in FM mode

Next: To select the next tracks in BT/USB or to Tune in

FM mode

Mute To Mute / Unmute

## **General instruction**

## BT Mode:

Switch the speaker to BT mode, Scan for nearby BT devices in your device. Tap on ZEB-SPARK 1005.1 to connect.

#### **USB Mode:**

Insert the USB drive to the speaker. The speaker will detect the USB and the audio files from drive will be played automatically.

## FM radio:

Switch the speaker to FM mode. In FM mode, long press the play button to scan for the available FM channels. Once the scanning is done, the first scanned channels will begin to play. The next button or previous button can be used to change the FM channels

## **AUX-IN:**

The speaker can be connected to an audio device using an RCA to 3.5mm cable. Connect the one end of the cable to the speaker and the other end to an audio source. The songs from the audio source can be heard through the speaker

ISO 9001:2015 Certified Company www.zebronics.com