

5.1 Speaker SAMBA 500



User Manual

www.zebronics.com

Thank you for purchasing **ZEB-SAMBA 500 5.1** Speaker. Please read this user manual carefully before Operation & save it for future reference.

Note:

- Avoid the use of this speaker at the hightemperature and high humidity environment.
- Avoid self-disassemble of speaker, or it will result in the failure of warranty.

Features:

5.1 Channel Speaker BT v5.1/USB/FM/AUX LED Display Remote control 13.33cm Subwoofer LED Lights

Specification:

Output Power (RMS)

Total : 120 watts

Driver Size

Subwoofer : 13.33 cm x 1 Satellite : 7.62cm x 5

Impedance

Subwoofer : 4Ω Satellite : 6Ω

Frequency Response : 20Hz - 20kHz

S/N Ratio : ≥68dB Separation : ≥45dB File Format Support

(USB) : Mp3

Line Input : 2ch RCA

Max Supported

Memory Size (USB) : 32GB

FM Frequency Range : 87.5 MHz - 108 MHz

BT Name : ZEB-Samba 500

BT Version : v5.0

Product Dimension (W x D x H)

Subwoofer : 17.2 x 32.9 x 24.9 cm

Satellite : 11.5 x 9.5 x 16.8 cm

Net.Weight

Subwoofer : 2.84kg Satellite : 338g x 5

Total : 4.56kg

Package Content

Subwoofer : 1 U Satellite : 5 U

Input cable : 1 U

FM Cable :1 U

Remote : 1 U QR Code Guide : 1 U


Control description



- 1. Play/Pause | Scan Button
- 2. Input Mode
- 3. USB Port
- 4. Previous Track | Volume Decrease
- 5. Next Track | Volume Increase
- 6. LED Display



Remote Control

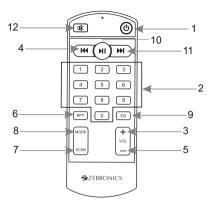

- 1. Power: Standby ON/OFF
- **2. Numeric Pad (0-9) :** To select particular track from USB drive directly or to enter FM Channel frequency directly.
- 3. Vol+: To increase the volume
- **4. Prev :** To select the previous tracks in BT/USB or to Tune in FM mode
- 5. Vol-: To decrease the volume
- **6. RPT :** To Switch between available repeat modes
- 7. Scan: To scan all FM channels available
- 8. Mode: Mode Selection (BT/AUX/USB/FM)
- **9. EQ:** Short press to control BASS and short Press again to control TREBLE. Long Press to use Equalizer
- **10. Play/Pause:** To Play/ Pause the current track. To switch next channel in FM mode
- **11. Next :** To select the next tracks in BT/USB or to Tune in FM mode
- 12. Mute: To Mute / Unmute

General Instructions

BT Mode: Switch the speaker to BT mode, Scan for nearby BT devices in your device. Tap on **ZEB-SAMBA 500** to connect.

USB Mode: Insert the USB drive to the speaker. The speaker will detect the USB and the audio files from drive will be played automatically.

FM Radio: Switch the speaker to FM mode. In FM mode, use the "SCN" button in the remote to scan for the available FM channels.

Once the scanning is done, the scanned channels will begin to play. The next button or previous button in the remote can be used to change the FM channels.

AUX-IN: The speaker can be connected to an audio device using an RCA to 3.5mm cable. Connect the one end of the cable to the speaker and the other end to an audio source. The songs from the audio source can be heard through the speaker.

ISO 9001:2015 Certified Company www.zebronics.com