



ZEBRONICS
ALWAYS AHEAD

5 . 1 S p e a k e r
ZEB **TWIST 5**



User Manual

www.zebronics.com

Thank you for purchasing **ZEB-TWIST 5** Speaker. Please read this user manual carefully before Operation & save it for future reference.

Note:

- Avoid the use of this speaker at the high-temperature and high humidity environment.
- Avoid self-disassemble of speaker, or it will result in the failure of warranty.

Features:

Wireless BT/USB/FM/AUX

LED Display

13.33cm Subwoofer

Remote control

Volume, bass and treble adjustment

Stylish design

Wall mountable

Specification:

Output power (RMS)

Subwoofer : 30 Watts

Satellite : 12 Watts x 5

Total : 90 Watts

Driver size

Subwoofer : 13.33cm

Satellite : 7.62 cm x 5

Impedance

Subwoofer : 4Ω

 
Satellite : 4Ω

Frequency response	: 20Hz - 20kHz
S/N Ratio	: ≥72dB
Separation	: ≥45dB
File format	
support (USB)	: Mp3
Line input	: 2ch RCA
Max. supported	
memory size (USB)	: 32GB
FM frequency range	: 87.5 MHz-108 MHz
BT name	: Zebronics
BT version	: 5.1
Product dimension (W x D x H)	
Subwoofer	: 17 x 31 x 28.4cm
Satellite	: 10.5 x 8.3 x 17.3cm
Net. weight	
Subwoofer	: 3.2kg
Satellite	: 366g x 5
Total	: 5.03kg


Package contents :

Subwoofer	: 1 U
Satellite	: 5 U
Remote	: 1 U
Input cable	: 1 U
QR Code Guide	: 1 U
FM cable	: 1 U

Control description :

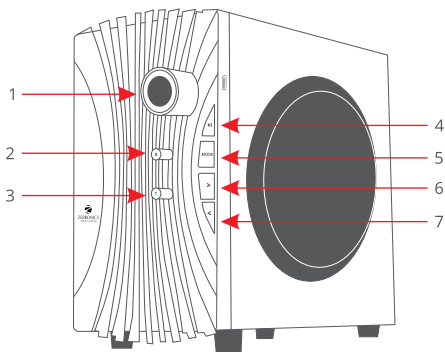


Back Panel

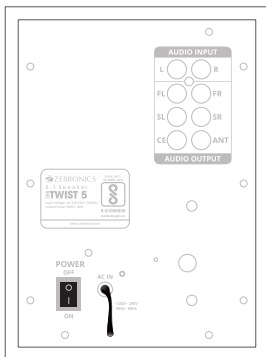 

1. Master volume control
2. Bass control
3. Treble control
4. Play/Pause/Scan
5. Mode change
6. Next Track/FM channel+
7. Previous Track/FM channel-

 Remote control :

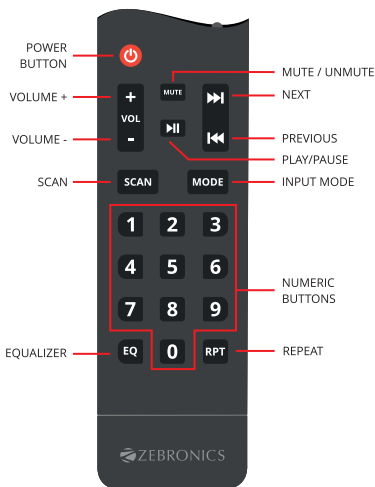

Power : standby ON/OFF

Numeric Pad(0-9) : To select particular track from USB drive directly or to enter FM Channel frequency directly

Vol+ : To increase the volume

Prev : To select the previous tracks in BT/USB or to Tune in FM mode

Vol- : To decrease the volume

RPT : To Switch between available repeat modes

Scan : To scan all FM channels available

Mode : Mode Selection (BT/AUX/USB/FM)

EQ : Short press to control BASS and short Press again to control TREBLE. Long Press to use Equalizer

Play/Pause To Play / Pause the current track. To switch next channel in FM mode

Next : To select the next tracks in BT/USB or to Tune in FM mode

Mute To Mute / Unmute

General instruction :

Bluetooth connectivity:

Switch the Speaker to BT mode, Scan for nearby BT devices in your mobile. Tap on BT name **"Zebronics"** to connect.

USB mode :

Insert the USB pen drive to the speaker. The speaker will detect the USB & audio from it will be played automatically.

FM Radio :

Switch the speaker to FM mode. In FM Mode, Long press the Play/Pause key to scan the available FM channels. Once the scanning is done, the speaker will start playing the first scanned channel. The next and Prev. buttons can be used to change the FM channels.

AUX-IN :

The speaker can be connected to an audio device using audio cable. Connect the one end of the cable to the speaker & connect the other end of the cable to an audio source. The tracks from the audio source can be heard through the speaker.

ISO 9001:2015 Certified Company
www.zebronics.com

