



7.1 Multimedia Speaker

ZEB **SPARK**207



User Manual

www.zebronics.com

Dear Customer,

Thank you for purchasing the ZEB-SPARK 207 7.1 Speaker. Please read the user manual carefully before usage & save it for future reference.

Note:

- *Avoid the usage of this product in high temperature and high humidity environments.*
- *Avoid the self-disassembly of the product or it results in the voiding the product's Warranty.*
- *Turn off the speaker when the speaker is not in use.*

To know more about Terms and conditions for warranty policy, please visit

<https://zebronics.com/pages/warranty-policy>

Features:

- 7.1 channel speaker
- BT v5.0 / USB / AUX / FM radio
- LED display
- 13.335 cm Subwoofer driver
- Remote control
- Volume & Bass control knob

Specifications:

Output Power (RMS) : Total - 140 watts

Driver Size

Subwoofer : 13.335 cm x 1

Satellite : 7.62cm x 7

Impedance

Subwoofer : 4Ω

Satellite : 6Ω

Frequency response : 20Hz - 20kHz

S/N Ratio : ≥ 68dB

Separation : ≥ 45dB

File format : MP3

support(USB)

Line input : 2ch RCA

Max supported

USB memory size : 32GB

FM frequency range : 87.5 MHz - 108 MHz

BT name : ZEB-Spark 207

BT version : 5.0

Product Dimension

(W x D x H)

Subwoofer : 16.8 x 30.1 x 26.2 cm

Satellite : 9.7 x 6.6 x 20.3 cm

Package Dimension

(W x D x H) : 54.95 x 29 x 51.5 cm

Net. Weight

Subwoofer : 3.92 kg

 
Satellite : 313g x 7

: 6.10Kg

Package Content:


Subwoofer	: 1 U
Satellite	: 7 U
Input cable	: 1 U
Remote	: 1 U
QR Code Guide	: 1 U
Antenna Cable	: 1 U

Control Panel Description:

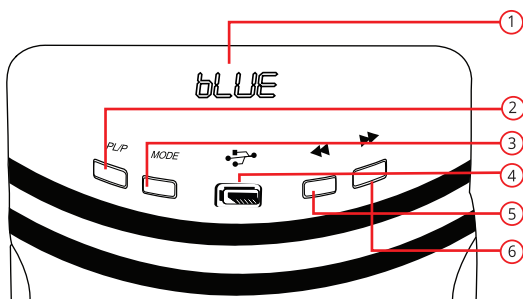


- 1.LED Display
- 2.Play / pause
- 3.Mode
- 4.USB Port
- 5.Previous Track
- 6.Next Track

 Back Panel Description:

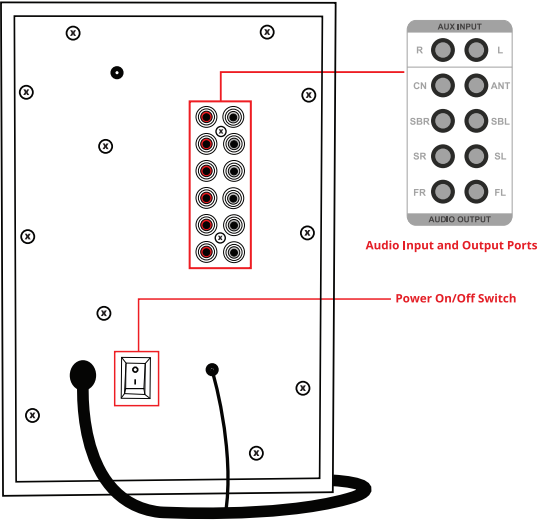

Remote Control:

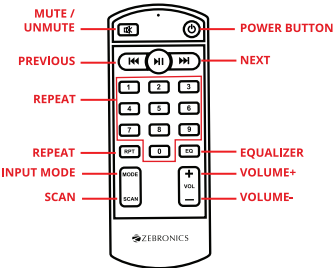 

Power: Standby ON/OFF

Numeric Pad (0-9): Select particular track from USB directly or enter FM channel frequency directly

Vol+: To Increase volume

Prev: To Previous track (BT/USB) or Tune in FM mode

Vol-: To Decrease volume.

RPT : Switch between available repeat modes

Scan: To Scan all available FM channels

Mode: Mode Selection (BT/AUX/USB/FM)

EQ : Short press to Control BASS and Short press again to Control TREBLE. Long press to Use Equalizer

Play/Pause: To Play/pause current track. To switch next channel in FM Mode

Next: To Select next track (BT/USB) or to tune in FM mode

Mute: To Mute/unmute

Mode Instructions:

BT Mode

Turn ON the speaker, press "**Mode**" button to switch to BT Mode. Switch ON BT on your phone or tablet and search for nearby BT devices, Search for the BT name "ZEB-SPARK 207" and tap to connect it.

USB Mode

The speaker automatically switches to **USB** input mode when a USB flash drive is inserted into the speaker. The songs from the USB audio source can be heard through the speaker (this mode isn't selectable on the speaker unless a USB flash drive is connected). Single Press The **PREV** to switch to previous audio track and Single Press the **NEXT** button to switch to next audio track.

FM Radio

Press the **Mode** button to select FM mode. Long press **Play pause** button to initiate FM Scanning process. Once the scanning process is done, the Speaker automatically plays the First channel of the FM. Press **Prev** to switch to previous FM channel and Press **Next** to switch to next FM channel.

AUX-IN

Press the **Mode** button to select **AUX** mode. The speaker can be connected to an audio source using a RCA to 3.5mm cable. Connect the RCA connector to the speaker and the 3.5 mm Aux connector to an audio source. The songs from the audio source can be heard through the speaker.

