



DJ Speaker  
ZEB **EPIC** *Pro*



**User Manual**

[www.zebronics.com](http://www.zebronics.com)

## **Dear Customer,**

Thank you for purchasing **ZEB-EPIC PRO** DJ Speaker. Please read the user manual carefully before usage & save it for future reference.

### **Note:**

- Avoid the usage of this product at the high temperature and high humidity environment.
- Avoid the self-disassembly of the products or it results in the voiding the product's Warranty.
- Turn off the speaker when the speaker is not in use.
- To know more about Terms and conditions for warranty policy, please visit

<https://zebronics.com/pages/warranty-policy>

### **Features:**

- BT v5.0 | USB | AUX
- TWS Function
- LCD display
- 38.1 Powerful Full Range Driver
- Dual UHF Wireless MIC
- Dual XLR / 6.3mm - Hybrid port
- XLR Output
- 4 DSP EQ Presets
- MIC Volume, Bass & Treble Controls
- Volume, Bass & Treble Controls
- Karaoke Function
- Carry Handle with Tripod Mount
- Titanium Tweeter
- Remote control

 
## **Specification :**

Output Power (RMS)	: 700W
Driver Size	
Full range	: 38.1cm
Tweeter	: 4.47cm
Impedance	
Full range	: 4Ω
Tweeter	: 8Ω
Frequency response	: 40Hz-20kHz
S/N Ratio	: ≥82dB
File format support	
(USB)	: MP3
Line input	: RCA, 3.5 mm, Dual XLR/TRS IN
Max. Supported	
Memory Size (USB)	: 32GB
BT name	: ZEB-EPIC PRO
BT version	: v5.0
Product Dimension	
(W x D x H)	: 41x 38.5x 71 cm
Net.Weight	: 23.46Kg

## **Package Contents:**

Speaker	: 1 U
Power Cord	: 1 U
Remote	: 1 U
Wireless Mic	: 2 U
Input Cable	: 1U
QR Code Guide	: 1 U


# Control Description :

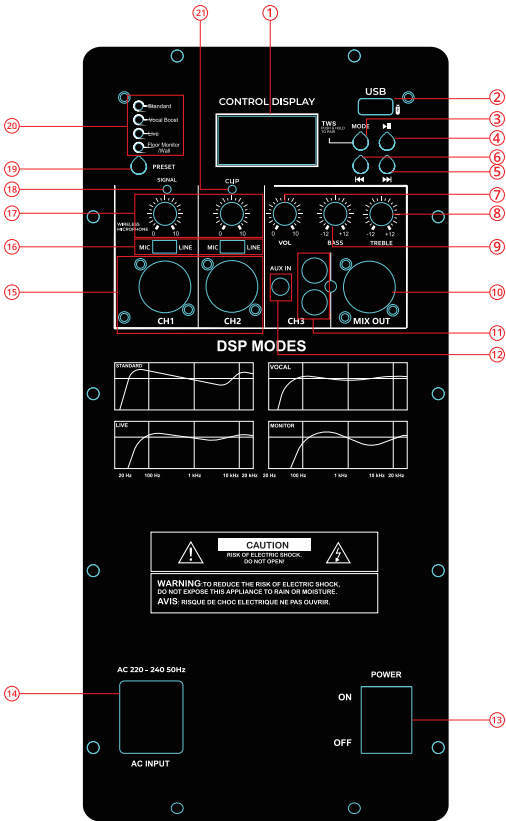



1. LCD Display
2. USB Port
3. Mode button
4. Play/Pause button
5. Next Track
6. Previous Track
7. Master Volume Control Knob
8. Treble Control knob
9. Bass Control knob
10. MIX Out (XLR Output)
11. 2 ch RCA Input
12. AUX IN
13. Power ON/OFF Switch
14. AC 220-240V 50Hz/60Hz
15. XLR/TRS Input
16. Switch button (MIC/LINE)
17. MIC Volume Control
18. Signal Indicator
19. 4 DSP Preset button
20. DSP Mode Indicators
21. Clipping Indicator

## Remote Control:

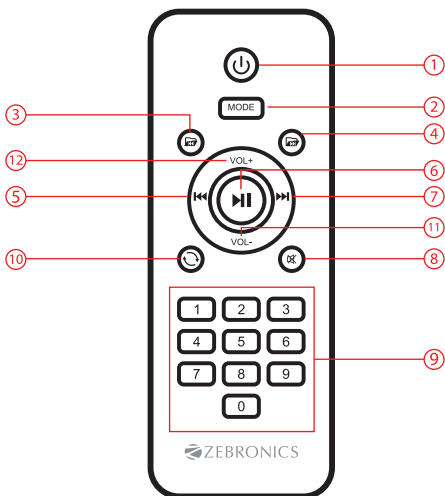 

### Power Button

1. Power Button
2. Mode Button
3. Previous Folder Button (only in USB Mode)
4. Next Folder Button (only in USB Mode)
5. Previous Track Button
6. Play/Pause Button
7. Next Track Button
8. Mute Button
9. Number Track Selection
10. Repeat Button
11. Volume Decrease Button
12. Volume Increase Button

## **General Instructions**

### **BT Connectivity**

Turn ON the speaker, press Mode button to switch to BT Mode. Switch ON BT on your phone or tablet and search for nearby BT devices, Search for the BT name ZEB-EPIC PRO and tap to connect it.

### **USB Mode :**

The speaker automatically switches to USB input mode when a USB flash drive is inserted. The songs from the audio source can be heard through the speaker (this mode isn't selectable on the speaker unless a USB is connected to the speaker). Single Press the ◀◀ to switch to previous audio track and Single Press the ▶▶ button to switch to next audio track.

### **Connecting Audio Inputs:**

Connect the speaker to an audio source using one of the following methods, depending on your setup:

3.5 mm AUX – Use a standard stereo mini-jack cable.

 
2-Channel RCA – Connect via left/right RCA cables. (Cable Not Included)

XLR – Use a balanced XLR cable (Cable Not Included)

Choose the connection type that matches your source equipment, plug it into the speaker's corresponding input, and adjust volume levels as needed.

### **DSP Preset Modes :**

- When we turn on the Speaker, the default DSP Mode will be Standard.
- To change it to different DSP Modes just Single press the Preset Button where the LED Indicator denotes which Preset Mode is currently active.
- There are total of 4 DSP preset Modes that are available
  1. Standard
  2. Vocal Boost
  3. Live
  4. Floor Monitor/Wall

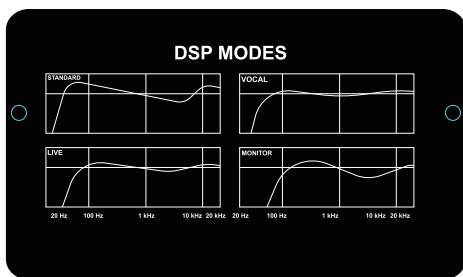

### **Power Source:**

This speaker is designed to operate in AC 220-240V 50/60Hz.