

User Manual

www.zebronics.com



Thank you for purchasing **ZEB-GLOW BOX 8B** DJ Speaker. Please read this user manual carefully before operation & save it for future reference.

Note:

- Avoid the usage of this product at the high temperature and high humidity environment.
- Avoid the self-disassembly of the products or it results in the voiding the product's warranty.
- Turn off the speaker when the speaker is not in use.
- Use the provided power adapter for charging the speaker.
- To know more about terms and conditions for warranty policy, please visit

https://zebronics.com/pages/warranty-policy

Features:

BT v5.0 | USB | mSD | AUX | FM | MIC IN LED Display
TWS Function
Media/Volume control
Volume, Bass & Treble Control
Mic Volume / Echo Control Knob
UHF Wireless Mic
RGB Lights with control switch
Karaoke / Recording
Carry Handle

Specification:

Output Power (RMS): 160W

Driver Size

Full Range : 20.32 cm x 2

Tweeter : 2.54 cm x 1

Impedance

Full Range : 8Ω

Tweeter : 8Ω

Frequency Response: 50Hz-20KHz

S/N Ratio : ≥78dB Separation : ≥78dB

File Format Support : Mp3

Line Input : 3.5mm Max. Supported USB/mSD

Memory Size : 32GB

FM Frequency Range: 87.5 Mhz -108 MHz

BT Name : ZEB-GLOW BOX 8B

BT Version : v5.0 Charging Time : 5h Playback Time : 12h*

Product Dimension : 32 x 29 x 76 cm

 $(W \times D \times H)$

Net. Weight : 7.76 kg


Package Contents:

Speaker : 1 U
Input Cable : 1 U
Power Adapter : 1 U
Remote : 1 U

Remote : 1 U Wireless MIC : 1 U


QR Code Guide : 1 U

Control Description

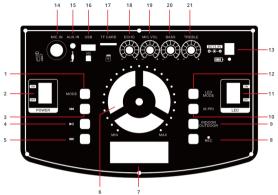

- 1. Mode Switch
- 2. Power ON/OFF
- 3. Previous Track
- 4. Play/Pause
- 5. Next Track
- 6. Volume Control Knob
- 7. LED Display
- 8. Record
- 9. Indoor/Outdoor
- 10.Mic Priority
- 11.RGB LED ON/OFF
- 12.RGB LED Mode Switch
- 13. Charging Input Port
- 14.Microphone Input Port
- 15.Aux Input Port
- 16.USB Input Port
- 17.mSD Card Slot
- 18.Mic Echo Control Knob
- 19.Mic Volume Control Knob
- 20.Bass Control Knob
- 21.Treble Control Knob

Remote Control

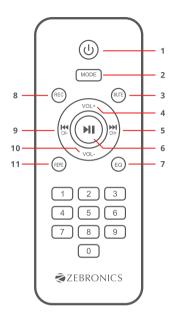

- 1. Standby
- 2. Mode Switch
- 3. Mute
- 4. Volume Increase
- 5. Next (Channel +)
- 6. Play/Pause
- 7. EQ Button
- 8. Record Button
- 9. Previous (Channel -)
- 10. Volume Decrease
- 11. Repeat

General Instructions BT connectivity

- Switch the source to BT mode
- Turn on BT on your mobile and scan for nearby BT devices.
- Tap on "ZEB-GLOW BOX 8B" to connect.

USB/mSD Mode

- Insert the USB/mSD card into the slot provided on the speaker
- The speaker will automatically detect the USB/mSD card and the supported audio content will be played from it.

Note: This mode isn't selectable on the speaker or remote control unless a USB/mSD flash card is connected

FM Radio

- Switch the speaker to FM mode
- Short press the Play/Pause button to scan the available FM channels.
- Once the scanning is done, the first scanned channel will start playing.

AUX-In

- The speaker can be connected to an audio source using a 3.5mm to 3.5mm cable.
- Connect one end of the cable to the AUX-In port on the speaker and the other end to an audio source.
- The audio from the source can be played through the speaker.

Recording Function

- First plug-in a USB/mSD flash card which will act as a storage device into the slot provided on the speaker.
- Press the **REC** button on the remote to start the recording.
- Press the REC button again to stop the recording.
- Long Press the **REC** button in the speaker to play the recorded file.

TWS Function:

When two speaker are in BT mode, Long press Play/Pause button of one speaker to enter TWS mode, it will search automatically, when two speakers connected successfully, you can control two speakers at the same time.

Note: Requires another **ZEB-GLOW BOX 8B** for true wireless stereo setup.

Charging Indication:

- Connect the provided power adapter to the power supply and connect the other end to the speaker's charging input port.
- Red LED glows, indicating that the battery is being charged.
- Once the speaker is fully charged, the blue LED glows.

ISO 9001:2015 Certified Company www.zebronics.com