



DJ Speaker
KNOCK



User Manual

www.zebronic.com

Thank you for purchasing the **ZEB-KNOCK** DJ Speaker. Please read the user manual carefully before usage & save it for future reference.

Note:

- Avoid the usage of this speaker at the high temperature and high humidity environment.
- Avoid the self-disassembly of the product as it results in the failure of Warranty.

Features :

Cross Fade Mixer
Dual Wireless BT Connectivity
Dual USB Connectivity
Guitar | Mic Input
Karaoke function
DJ Mixer Control
LED display
RGB LED Controls
Remote control
Dual Wireless UHF MIC
FM Radio | AUX
Volume & Media Control
Bass Boost

Specifications :

Output power (RMS) : 230W

Driver size

Subwoofer : 20.32cm

 
Tweeter : 2.54cm

Impedance	
Subwoofer	: 4Ω
Tweeter	: 4Ω
Frequency response	: 20Hz-20kHz
S/N Ratio	: ≥60dB
File format	
support (USB)	: Mp3
Line input	: 3.5mm
Max. supported (USB)	
memory size	: 64GB
FM frequency range	: 87.5 MHz-108 Mhz
BT name	: ZEB-KNOCK A / ZEB-KNOCK B
BT version	: 5.0
Product dimension	: 28.5 x 31.5 x 87.5 cm
(W x D x H)	
Net. weight	: 12.5 kg

Package Content :

DJ Speaker	: 1 U
Remote	: 1 U
Wireless UHF MIC	: 2 U
QR Code Guide	: 1 U
Input Cable	: 1 U
Power Cable	: 1 U
FM Cable	: 1 U


Control Panel Description :

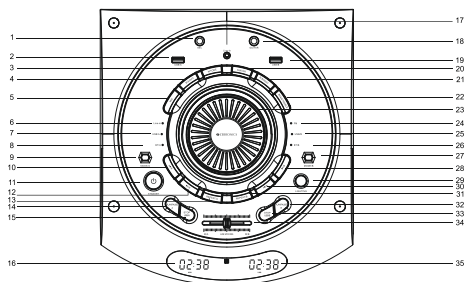

1. Microphone inserting jack
2. USB/A socket
3. Microphone Tone button
4. Microphone Echo
5. Microphone volume button
6. Line-in indicator light
7. USB/A indicator light
8. BT/A indicator light
9. Mode/A switching button
10. Previous/A button
11. Standby button
12. Next/A button
13. Repeat/A button
14. Play/Pause A button
15. Stop A button
16. Display window/A
17. AUX Input
18. 6.3mm Guitar input
19. USB/B socket
20. Guitar volume button


- 21.Bass Boost button
- 22.Bass/ Treble button
- 23.Volume rotary knob
- 24.FM indicator light
- 25.USB/B indicator light
- 26.BT/B indicator light
- 27.Mode/B switching button
- 28.Next/B button
- 29.Lighting swithing button
- 30.Previous/B button
- 31.Repeat/B button
- 32.Play/Pause B button
- 33.Stop B button
- 34.Cross fader A/B
- 35.Display B

 Overview of the Rear Panel :

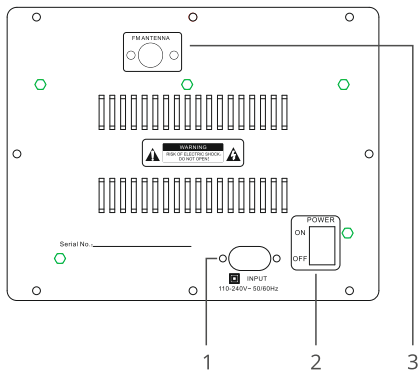


- 1.AC Input socket
- 2.Power ON/OFF Switch
- 3.FM Antenna

 Remote Control :

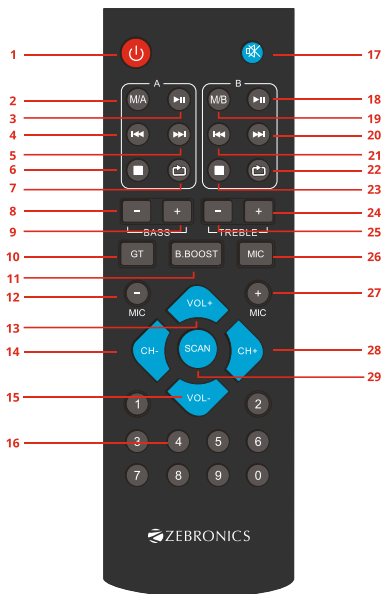

- | | |
|--|--|
| 1. Standby button | 16. Numeric button |
| 2. A Mode switching button | 17. Mute button |
| 3. A Play/Pause button | 18. B Play/Pause button |
| 4. A Previous button | 19. B Mode switching button |
| 5. A Next button | 20. B Next button |
| 6. A Stop button | 21. B Previous button |
| 7. A Repeat button | 22. B Repeat button |
| 8. Bass volume- button | 23. B Stop button |
| 9. Bass volume+ button | 24. Treble volume+ button |
| 10. Guitar volume control button | 25. Treble volume- button |
| 11. Bass Boost button | 26. MIC/ MIC Echo/ MIC Tone switching button |
| 12. Guitar/ MIC/ MIC Echo/ MIC Tone volume- button | 27. Guitar/ MIC/ MIC Echo/ MIC Tone volume+ button |
| 13. Volume+ button | 28. Channel+ button |
| 14. Channel- button | 29. Scan button |
| 15. Volume- button | |

 Prepare the remote control :



To insert the remote control batteries :

1. Open the battery compartment.
2. Insert 2 x AAA batteries with correct polarity (+/-) as indicated. The 2xAAA battery not include in our products, please purchase from Authorized Seller.
3. Close the battery compartment.

Please Note :

- If you are not going to use the remote for a long time, remove the batteries.
- Do not use old and new or different type of batteries in combination.
- Batteries contain chemical substances, so they should be disposed of properly.

Turn On :

1. Connect the AC power cable and plug to the wall socket;
2. Press the "POWER" button to the "ON" status to power on the speaker.
3. Press the "STANDBY" button on the top panel to turn on the speaker..








Caution:









If you do not use this unit for a while, please switch the "POWER" button to "OFF" status. and disconnect the AC power cable of this unit.













4.Play:

Basic key play operations

You can control play through following operations.

Key	Mode
 MIC	Connect a wired microphone on MIC jack (wired microphone not supplied).
 USB/B	Insert the USB driver to USB socket to play music
	Press this button first to start the volume control of microphone tone, then turn the volume knob to adjust the sound level of microphone bass and treble volume. Press once is treble tone and continue to press twice is bass tone.
	Press this button first to start the volume control of microphone echo, then turn the volume knob to adjust the sound level of microphone echo volume.
	Press this button first to start the volume control of microphone, then turn the volume knob to adjust the sound level of microphone volume.
	Turn this volume knob to adjust the music sound level.
 MODE/B	Press MODE B button to switch the different modes between USB/ Line-in / BLUE TOOTH

	Press this previous B button to switch to previous track
	Press this next B button to switch to next track
	Press REPEAT/B button to repeat the track (Press one time for repeat the single track, press two times for repeat all tracks.)
	Press this button to switch to standby mode (When the speaker is playing music, press again to power on the speaker.)
	Press this Play/Pause B button to pause or play the music
	Press this STOP USB/B button to stop the music from USB source.
	<p>Turn this MIXING knob to adjust the music from playing in A or B source.</p> <p>A/B Mixing Mode</p> <p>A/B Mixing Mode is designed for mixing different music from different source. This unit could mix music with USB A/USB B, BT A/BT B, USB/AUX, FM Radio etc.</p> <ol style="list-style-type: none"> 1. If the slid button is centered, the unit will play both music from M/A and M/B. 2. If the Cross Fade move to M/A position, the music from M/B will Fade out, and the music from M/A will become clear. If you want to stop music from M/B, please press Play/Pause B. 3. If the Cross Fader move to M/B position, the music from M/A will Fade out, and the music of M/B will Fade In.
	Insert the 3.5mm AUX in cable to Line-in jack to connect to the external device

 GUITAR	Connect a 6.3mm cable to GUITAR jack
 USB/A	Insert the USB driver to USB socket to play music
 GUITAR	Press this button first to start the guitar volume control, then turn the volume knob to adjust the sound level of guitar volume.
 B BOOST	Press this Bass Boost button to turn on or off the bass boost effect.
 BASS/TREBLE	Press this Bass/ Treble button first to Turn on the bass or treble volume control , then turn the volume knob to adjust the sound level of the bass or treble volume. Press once is treble tone and continue to press twice is bass tone.
 MODE/A	Press MODE A button to switch the different modes between USB/FM/BLE TOOTH
 A	Press this next A button to switch to next track
 A	Press this previous A button to switch to previous track
 REPEAT/A	Press REPEAT/A button to repeat the track (Press one time for repeat the single track, press two times for repeat all tracks.)
 LIGHTING	Press this LIGHTING button to switch the speaker light mode or Turn on or off the light.
 PLAY/PAUSE A	Press this Play/pause A button to pause or play the music. Short press this PLAY/PAUSE A button for FM radio search automatically.
 STOP USB/A	Press this STOP USB/A button to stop the music from USB source

Play from USB :

Make sure that the USB storage device contains playable audio in supported MP3 format.

Insert the "USB 1 or/and USB 2 into the "USB " socket on the speaker

Press ⏮ or ⏭ key to select

Press ⏩ key to play or pause

Important :

USB socket is only for music playing, not support charging.

The MAX memory size of USB:64Gb

USB memory device should be formatted as FAT32.

5.Listen to radio :

 
Note

- Make sure that you have connected and fully extended the supplied FM antenna cable.

1. Insert the FM Antenna Cable to Antenna port on the rear panel.
2. Press the MODE/B button on the Top Control panel or the M/B button of B column on the remote control to switch to FM MODE.
3. Short press the PLAY/PAUSE B key on the Top Control panel or press

SCAN key on the remote control to search and program radio stations automatically.

4. Press ►/B / ◀/B to select programmed radio stations.

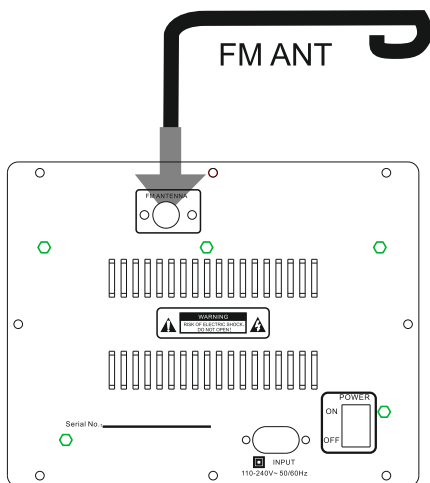

6.Connect with BT :

1. Press the MODE/A or MODE/B button on the Top Control panel or the F button of A or B column on the remote control to switch to the BT CONNECT mode, (BT1 and BT2) will be displayed on the screen.

2. Open the BT on the external device (must have BT function), and the name "ZEB-KNOCK A" "ZEB-KNOCK B" will show on the device, please try to connect it.

3. Once connected, you can hear a small sound from the speaker.

4. You can use the ◀◀ or ▶▶ key on the Top Control panel to control the tracks of the external device.

Note: no password needed for connecting.

7.Connect with Line-in :

1. Press the MODE/A button on the Top Control panel or the F button of A column on the remote control to switch to the mode, (LINE) will be displayed on the screen.

 
2. Connect the audio source/external device with a supplied Line-in cable.

3. Once connected, turn on your external device music

4. All playback will be controlled by your external device.

Caution :

Please before switching to line-in mode on the speaker connect Line-in cable in order to avoiding unexpected noise.

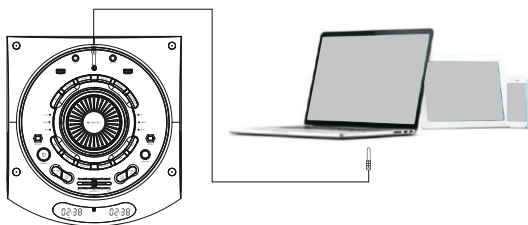

8. Connect with Wired Microphone / Guitar



MIC

Image 1



Image 2



Image 3

1. Insert 6.3mm wired microphone turn on to MIC jack(Image1),
2. Press this MIC button(Image2) first to turn on the volume control of microphone, then turn on the volume knob(Image3) to adjust the sound level of microphone.



Image 1



Image 2



Image 3

When using the microphone, press M.TONE (Image 1) to control the volume of the 6.3mm microphone if it's plugged in. To control the echo effect for the 6.3mm microphone press M.ECHO (Image 2). To increase/decrease the volume for both the above functions toggle master volume (Image 3) after pressing M.TONE or M.ECHO

*M TONE: Press once is treble tone and continue to press twice is bass tone.



GUITAR

Image 1

 


Image 2



Image 3

1.Insert the 6.3mm wired guitar to the GUITAR jack(Image1),

2.Press this GUITAR button(Image2) first to turn on the volume control of guitar, then turn the volume knob(Image3) to adjust the sound level of guitar.

Important Notes :

While using the microphone, avoid being put the microphone opposite the bass of Speaker, as they may have Feedback Noise. To get the best singing performance, keep the microphone within 5-15cm from your mouth and at a 45 degree angle.

Caution :

Please do not put the microphone directly face to the speaker, it may damage the speaker.

