



User Manual

www.zebronics.com

Trolley DJ Speaker
M1000
ZEB

Thank you for purchasing Zebronics Speaker. Please read this user manual carefully before operation & save it for future reference.

Note:

- *Avoid the usage of this product at the high temperature and high humidity environment.*
- *Avoid the self-disassembly of the products or it results in the voiding the product's Warranty.*
- *Turn off the speaker when the speaker is not in use.*
- *To know more about Terms and conditions for warranty policy, please visit*

<https://zebronics.com/pages/warranty-policy>

Features:

- BT v5.0 / AUX / mSD / USB / FM Radio
- 38.1cm Powerful Subwoofer
- 3 Way Speaker
- Wired Mic & Guitar Input
- Remote Control
- Dual UHF Wireless Mic
- LED Display
- Recording Support
- Supports External Battery
- Karaoke
- Built-in Rechargeable Battery
- Castor Wheels
- Dedicated Mic, Guitar & Music Control Knobs

Specification:


Output Power (RMS)	: 660W
Driver Size	
Subwoofer	: 38.1cm
Satellite	: (4 x 10.16cm) + (4 x 2.54cm)
Impedance	
Subwoofer	: 4Ω
Satellite	: 4Ω + 6Ω
Frequency Response	: 20Hz-20kHz
S/N Ratio	: ≥96dB
File Format Support	: MP3
Line Input	: RCA
Max. Supported Memory	: 64GB (USB/mSD)
FM Frequency Range	: 87 MHz-108 MHz
Charging Time	: 10h
Playback Time	: 3h*
BT Name	: ZEB-MYTHO PLUS
BT Version	: v5.0
Product Dimension	: 49.5 x 54 x 130cm (W x D x H)
Net. Weight	: 65.6 kg

Package Contents:

Trolley DJ Speaker	: 1 U
Remote	: 1 U
Wireless MIC	: 2 U
Input Cable	: 1 U
Power Cord	: 1 U
Satellite Connector Cable	: 1 U
QR Code Guide	: 1 U


**at 50% Volume*

Control Description

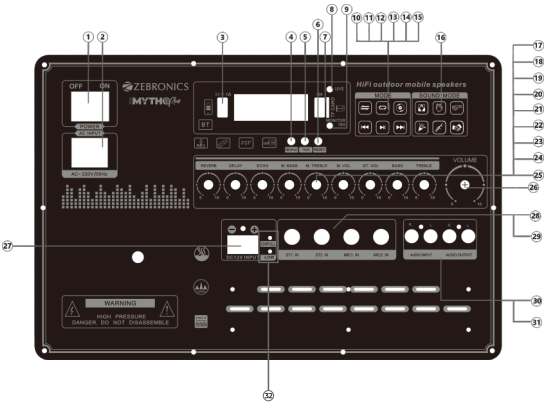

- | | |
|---------------------------------|--|
| 1. Power Switch Button | 17. Microphone Reverb Volume Control |
| 2. AC Input (-220V 50Hz) | 18. Microphone Delay Volume Control |
| 3. Charger Input | 19. Microphone Echo Volume Control |
| 4. Recording & Play | 20. Microphone Bass Volume Control |
| 5. TWS Function | 21. Microphone Treble Volume Control |
| 6. Microphone Priority | 22. Microphone Volume Control |
| 7. USB/TF Card Input | 23. Guitar Volume Control |
| 8. Live Input | 24. Bass Volume Control |
| 9. Monitoring Function | 25. Treble Volume Control |
| 10. Mode Switch Button | 26. Master Volume Control |
| 11. Play One / All Music | 27. Battery Input Socket |
| 12. Voice Cancel | 28. Guitar1 and Guitar2 Input |
| 13. Previous/Channel- | 29. Microphone1 and Microphone2 Input |
| 14. Pause & Play/Channel Scan | 30. Audio Input |
| 15. Next/Channel+ | 31. Audio Output |
| 16. Background DJ Sound Effects | 32. Full Charge and Low Battery Indicators |

Remote Control

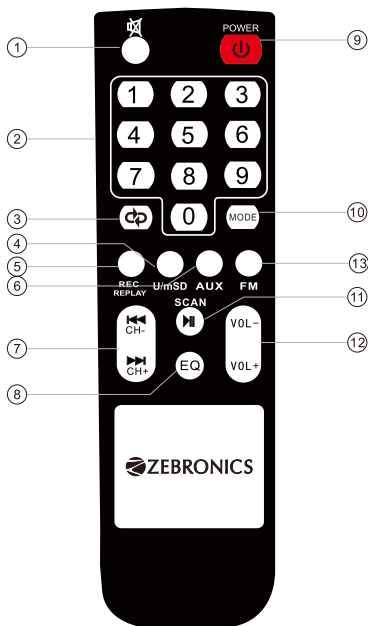

1. Mute Control Button
2. 0-9 Number Control Button to Selecting MP3 Song
3. Repeat Control Button
4. Recording & Replay Button
5. USB/mSD Control Button
6. AUX Control Button
7. Previous Channel (-) & Next Channel (+)
8. EQ Control Button
9. Power Switch Button
10. Mode Control Button
11. Pause / Play & Channel Scan Button
12. Volume- & Volume+ Button
13. FM Control Button

General Instructions

BT connectivity

- Press mode button to switch to BT input & the display shows "bLUE" .
- Now turn on BT on your mobile phone or other device and open BT settings then search for BT name ZEB-MYTHO PLUS tap on the name to connect.
- Upon successful BT pairing you can hear a tone from the speaker.

USB/mSD Mode

- Insert the USB/mSD card into the slot provided on the speaker
- The speaker will automatically detect the USB/mSD card and the supported MP3 audio content will be played from it.

***Note:** This mode isn't selectable on the speaker or remote control unless a USB/mSD flash card is connected*

FM Radio

- Switch the speaker to FM mode
- Long press the Play/Pause button to scan the available FM channels.
- Once the scanning is done, the first scanned channel will start playing.

AUX-In

- Connect one end of the audio cable to the Aux input port of the speaker and other end to the input source.
- Now the audio from the source can be heard through the speaker.

Recording Function

- First plug-in a USB/mSD flash card which will act as a storage device into the slot provided on the speaker.
- Press the **REC.** button on the remote to start the recording.
- Press the **REC.** button again to stop the recording.
- Press the **REC.PLAY** button to play the recorded file.

KARAOKE AND MICROPHONE FUNCTION OPERATION INSTRUCTION

- Insert microphone into MIC1/MIC2 socket on the panel, and turn on microphone, and adjust echo and microphone volume.
- ECHO KNOB: Turn ECHO KNOB to adjust microphone ECHO volume.
- MIC.VOL KNOB: Turn MIC.VOL KNOB to adjust microphone volume.
- To avoid feedback sound and speaker drive damage do not use a microphone toward the speaker or near the speaker.
- Turn off microphone and take out microphone from MIC socket, when you do not use microphone.

TWS

- Turn on two **ZEB-MYTHO PLUS** speakers and select BT mode as input on

both speakers.

- Now press TWS button on any one of the **ZEB-MYTHO PLUS** speaker to initiate TWS pairing
- Display blink with "**bt st**" once the TWS pairing is successful between both speakers the blinking display will become constant.
- Long press the TWS button on any one the speaker to exit TWS mode.

