



Trolley DJ Speaker  
**MYTHO**  
ZEB



## User Manual

[www.zebronics.com](http://www.zebronics.com)

Thank you for purchasing Zebronics Speaker. Please read this user manual carefully before operation & save it for future reference.

**Note:**

- *Avoid the usage of this product at the high temperature and high humidity environment.*
- *Avoid the self-disassembly of the products or it results in the voiding the product's Warranty.*
- *Turn off the speaker when the speaker is not in use.*
- *To know more about Terms and conditions for warranty policy, please visit*

<https://zebronics.com/pages/warranty-policy>

**Features:**

- Wireless BT / USB / Micro SD / AUX / MIC Input / Guitar IN / TV ARC / Optical Input
- Recording Function
- LED Display
- 3 Way Speaker
- Remote Control
- Dual UHF Wireless MIC
- Volume, Bass & Treble Controls
- Karaoke
- Dedicated MIC, Guitar & Music Control Knobs
- Supports External Battery
- Built in Rechargeable Battery
- Castor Wheels with Rubber Stop
- Detachable Satellite Setup

## **Specification:**

Output Power (RMS) : 520W

Driver Size

Subwoofer : 38.1cm

Satellite : (16.51cm x 2) + 7.62cm

Impedance

Subwoofer : 4Ω

Satellite : (4Ω x 2) + 6Ω

Frequency Response : 30Hz-18kHz

S/N Ratio : ≥75dB

File Format Support : MP3, WMA, WAV

Line Input : 3.5mm

Max. Supported USB/mSD

Memory Size : 32GB

FM Frequency Range : 87 MHz-108 MHz

Charging Time : 8h

Playback Time : 4h\*

BT Name : ZEB-MYTHO

BT Version : v5.2

Product Dimension (W x D x H)

Subwoofer : 45 x 55 x 73 cm

Satellite : 20 x 22 x 55 cm

Net. Weight : 45.6 kg

## **Package Contents:**

Trolley DJ Speaker : 1 U

Detachable Satellite : 1 U

Remote : 1 U

Wireless MIC : 2 U


Input Cable : 1 U

Mount Base : 1 U

Power Cord	: 1 U
Satellite Connector Cable	: 1 U
QR Code Guide	: 1 U


*\*at 50% Volume*

## Control Description

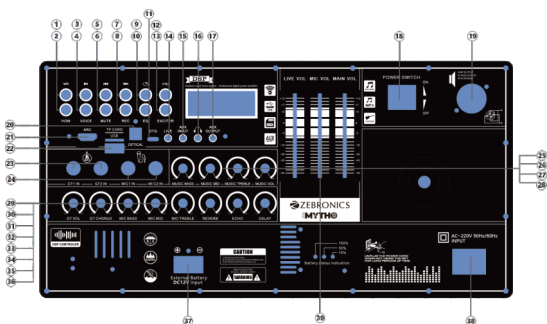

- |  |  |
|--|--|
| 1. Mode Switch Button                          | 21. ARC Interface                        |
| 2. Anti-Whistling Button                       | 22. USB/TF Card Input                    |
| 3. Pause & Play                                | 23. Guitar1 and Guitar2 Input            |
| 4. Voice Cancel                                | 24. Microphone1 and<br>Microphone2 Input |
| 5. Previous/Channel-                           | 25. Bass Volume Control                  |
| 6. Mute Control Button                         | 26. Mid Volume Control                   |
| 7. Next/Channel+                               | 27. Treble Volume Control                |
| 8. Recording & Play<br>(Long press for 3 secs) | 28. Master Volume Control                |
| 9. Play One / All Music                        | 29. Guitar Volume Control                |
| 10. EQ Button                                  | 30. Guitar Chorus Volume Control         |
| 11. OTG Input                                  | 31. Microphone Bass Volume Control       |
| 12. Microphone Priority                        | 32. Microphone Mid Volume Control        |
| 13. EXCITER Button                             | 33. Microphone Treble Volume Control     |
| 14. Live Input                                 | 34. Microphone Reverb Volume<br>Control  |
| 15. AUX Input                                  | 35. Microphone Echo Volume Control       |
| 16. Headphone Output                           | 36. Microphone Delay Volume Control      |
| 17. AUX Output                                 | 37. Battery Input Socket                 |
| 18. Power Switch Button                        | 38. AC Input (-220V 50Hz/60Hz)           |
| 19. Satellite Speaker Connector                | 39. Live/Mic/Main Volume Control         |
| 20. Optical Interface                          |  |

## Remote Control

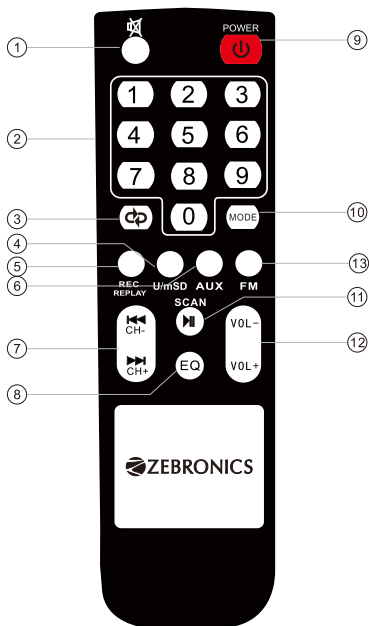

1. Mute Control Button
2. 0-9 Number Control Button to Selecting MP3 Song
3. Repeat Control Button
4. USB/mSD Control Button
5. Recording & Replay Button
6. AUX Control Button
7. Previous Channel (-) & Next Channel (+)
8. EQ Control Button
9. Power Switch Button
10. Mode Control Button
11. Pause / Play & Channel Scan Button
12. Volume- & Volume+ Button
13. FM Control Button

## **General Instructions**

### **BT connectivity**

- Press mode button switch to BT mode, Select **ZEB-MYTHO** on your devices to pair with your audio source devices.

*Note: Initial pairing or Linking may require 3-5 second.*

### **USB/mSD Mode**

- Insert the USB/mSD card into the slot provided on the speaker
- The speaker will automatically detect the USB/mSD card and the supported MP3 audio content will be played from it.

*Note: This mode isn't selectable on the speaker or remote control unless a USB/mSD flash card is connected*

### **FM Radio**

- Switch the speaker to FM mode
- Long press the Play/Pause button to scan the available FM channels.
- Once the scanning is done, the first scanned channel will start playing.
- The audio from the source can be heard through the speaker.

### **AUX-In**

- The speaker can be connected to an audio device using a 3.5mm cable.
- Connect one end of the cable to the speaker & connect the other end of the audio cable to source.
- The songs from the audio source can be heard through the speaker

## **Recording Function**

- First plug-in a USB/mSD flash card which will act as a storage device into the slot provided on the speaker.
- Press the **REC.** button on the remote to start the recording.
- Press the **REC.** button again to stop the recording.
- Press the **REC.PLAY** button to play the recorded file.

## **KARAOKE AND MICROPHONE FUNCTION OPERATION INSTRUCTION**

- Insert microphone into MIC1/MIC2 socket on the panel, and turn on microphone, and adjust echo and microphone volume.
- **ECHO KNOB:** Turn **ECHO KNOB** to adjust microphone **ECHO** volume.
- **MIC.VOL KNOB:** Turn **MIC.VOL KNOB** to adjust microphone volume.
- Do not use microphone toward speaker or near speaker, avoid to feedback sound and damage speaker.
- Turn off microphone and take out microphone from MIC socket, when you do not use microphone.

## **Charging & Backup Indications**

- The three **RED LED** Indicators present on the top panel indicate the status of battery

backup percentage 10%, 50% & 100% respectively.

- While charging the RED LED Indicators blinks for each level and once unit is fully charged all the LED will glow RED constantly.

**ISO 9001:2015 Certified Company**

**[www.zebronics.com](http://www.zebronics.com)**

