



DJ Speaker
ZEB **PARTY** *Fyre* **500**



User Manual

www.zebronics.com

Dear Customer,

Thank you for purchasing **ZEB-PARTY FYRE 500 DJ Speaker**. Please read the user manual carefully before usage & save it for future reference.

Note :

- Avoid the usage of this product at the high temperature and high humidity environment.
- Avoid the self-disassembly of the products or it results in the voiding the product's Warranty.
- Charge the speaker with included power cable.
- To know more about Terms and conditions for warranty policy, please visit

<https://zebronics.com/pages/warranty-policy>

Features :

- 140W RMS Output
- Up to 7h* Backup
- Dual 20.32cm Full range Drivers
- TWS Function
- Karaoke Function
- Wireless Mic
- BT v5.0 | USB | mSD | AUX
- Dual 6.3mm Microphone Input

- 6.3mm Guitar Input
- Mic Volume & Echo controls
- RGB Lights
- Remote control
- LED Display
- Mobile holder
- Type-C Charging
- Built-in Rechargeable Battery
- Carry Handle with Wheels

Specification :

| | |
|-----------------------------------|--|
| Output Power | : 140W (RMS) |
| Driver Size | : Full range - 20.32cm x 2 Tweeter - 3.8 cm |
| Impedance | : Full range - 3Ω Tweeter - 10Ω |
| Frequency response | : 20Hz-20kHz |
| S/N Ratio | : ≥80dB |
| File format support | : MP3 (USB/mSD) |
| Line input | : 3.5mm |
| Max supported USB/mSD memory size | : 32GB |
| Charging time | : 4h |
| Playback time | : 7h* |
| BT name | : ZEB-PartyFyre 500 |
| BT version | : v5.0 |

Product Dimension

(W x D x H) : 31 x 33 x 73 cm

Net.Weight : 10.5kg

**at 50% Volume (LED OFF)*

Package Content :

Speaker : 1 U

Remote : 1 U


Wireless Mic : 1 U

Charging Cable : 1 U

Input cable : 1 U

QR Code Guide : 1 U

Control Panel Description :

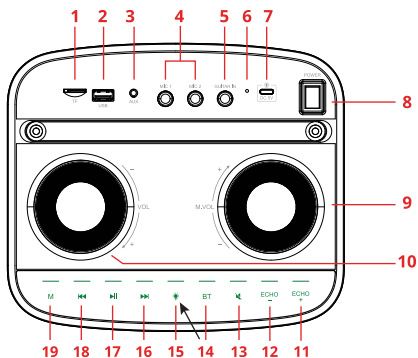


1. mSD Port

2. USB Port

3. AUX Port
4. 6.3mm Microphone Input
5. 6.3mm Guitar Input
6. LED Indicator
7. Type-C Charging Port
8. Power On/Off Switch
9. MIC Volume Knob
- 10.Master Volume Knob
- 11.ECHO Volume Increase Button
- 12.ECHO Volume Decrease Button
- 13.Mute Button
- 14.BT Connect/Disconnect Button
- 15.RGB Modes Button
- 16.Next Track Button
- 17.Play/Pause Button
- 18.Previous Track Button
- 19.Mode Button

Remote Control :

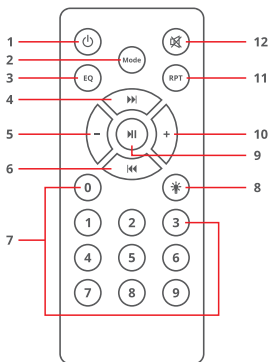

1. Power ON/OFF
2. Input Mode
(BT/USB/mSD/AUX)
3. EQ: Change the EQ Mode
4. Next Track
5. Volume Decrease
6. Previous Track
7. Numeric Pad
8. RGB Light Control
9. Play/Pause
10. Volume Increase
11. Repeat
12. Mute

General Instructions :

BT Mode :

Switch the speaker to BT mode, Scan for nearby BT devices. Tap on "ZEB-PartyFyre 500" to connect.

USB/mSD :

Insert the USB Drive/mSD Card to the speaker it will detect the USB Drive/mSD Card and the audio files from drive will be played automatically.

AUX-IN :

The speaker can be connected to an audio device using a 3.5mm cable. Connect the one end of the cable to the speaker & connect the other end of the cable to an audio source. The songs from the audio source can be heard through the speaker.

TWS Connectivity :

1. Turn on both "ZEB-PartyFyre 500" speakers in BT mode.
2. Press and hold the Mode button for 3-5 seconds in any one of the speakers to initiate TWS pairing.
3. After a few seconds both speakers will connect successfully.
4. Now search for a nearby BT device in your mobile phone or other source device and tap on BT name "ZEB-PartyFyre 500" to connect.

Note :

To exit TWS mode, press and hold the Mode button for 3-5 seconds in any one of the speakers.

Charging the Speaker :

1. Use a DC 5V adapter for charging the speaker.
2. The red LED will be ON while charging.

