



DJ Speaker
ZEB PARTY Fyre 550



User Manual

www.zebronics.com

Dear Customer,

Thank you for purchasing **ZEB-PARTY FYRE 550** DJ Speaker. Please read the user manual carefully before usage & save it for future reference.

Note:

- *Avoid the usage of this product at the high temperature and high humidity environment.*
- *Avoid the self-disassembly of the products or it results in the voiding the product's Warranty.*
- *Turn off the speaker when the speaker is not in use.*
- *To know more about Terms and conditions for warranty policy, please visit*

<https://zebronics.com/pages/warranty-policy>

Features

240W RMS Output

Up to 9h* Backup

Dual 25.4cm Full range Driver

TWS Function

Karaoke Maker

Mic Recording Function

Dual 6.3mm Microphone Input

6.3mm Guitar Input

Dual Wireless MIC

BT v5.0 | USB | mSD | AUX

FM Radio

Mic Volume, Echo, Bass & Treble controls

Volume, Bass & Treble controls

RGB Lights

Remote control
LED Display
Built-in Rechargeable Battery
Mobile holder
Carry Handle With Wheels

Specifications


Output Power (RMS)	: 240W
Driver Size	
Full Range	: 25.4cm x 2
Tweeter	: 4.78cm
Impedance	
Full Range	
Driver	: 3.5Ω
Tweeter	: 8.4Ω
Frequency Response	: 50Hz-18kHz
S/N Ratio	: ≥70db
File format	
support (USB/mSD)	: MP3
Line input	: 3.5mm
Max Supported	
Memory Size	: 32GB (USB/mSD)
Charging Time	: 8h
Playback Time	: 9h*
BT name	: ZEB-Party Fyre 550
BT Version	: v5.0
Product Dimension	: 32.4 x 31.5 x 72 cm (W x D x H)
Net. Weight	: 14.3 Kg

** at 50% volume (LED off)*

Package Contents:


Speaker	: 1 U
Wireless Mic	: 2 U
Power Adapter	: 1 U
Input Cable	: 1 U
Remote	: 1 U
QR Code Guide	: 1 U

Buttons Description

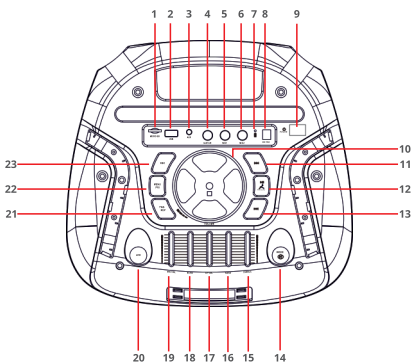

- | | |
|--|------------------------------------|
| 1. Micro SD Port | 16. Bass +/- Control knob |
| 2. USB Port | 17. Guitar volume +/- Control Knob |
| 3. AUX Input | 18. Echo +/- Control Knob |
| 4. Guitar Input | 19. MIC Volume knob |
| 5. 6.3mm MIC Input 1 | 20. LED mode Button |
| 6. 6.3mm MIC Input 2 | 21. TWS/Repeat Button |
| 7. Charging Indicator | 22. MIC Menu / MIC Priority |
| 8. DC 15V Adapter Input | 23. REC Button |
| 9. Power ON/OFF Switch | |
| 10. Music Volume Control | |
| 11. Previous & Radio Channel - | |
| 12. Play / Pause / Radio scan / Karaoke Maker | |
| 13. Next & Radio Channel + | |
| 14. Mode / BT Connect / Disconnect Button (Long Press 3 seconds for BT Cutoff) | |
| 15. Treble +/- Control knob | |

Remote Control

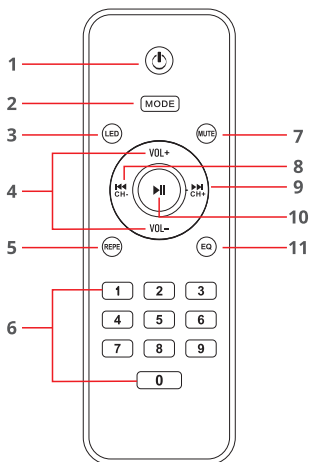

1. Power button
2. Mode Key- to Select Input Signal Source
3. LED Mode
4. Volume +/- Key
5. Repeat Key
6. Track selection key
7. Mute Key
8. Previous /Radio ch-Key
9. Next /Radio ch+ Key
10. Play/ Pause
11. EQ Mode Key

Instruction for Use:

Button Function:

1. Turn the speaker ON/OFF using the power switch.
2. Press mode button to change it to BT mode.
3. Use Master volume control knob to increase / decrease the volume.
4. Use MIC volume control knob to increase / decrease the MIC volume.
5. Press Prev/Next button to control the media / FM Channels
6. Press Play-Pause button to play track or pause track being played.

7. Long Press the Play/Pause Button for Radio Scan (FM Mode) / Karaoke Maker.
8. Press the LED Button Mode to change the LED Modes, Long press the LED Mode button to turn off LED Lights.
9. Use ECHO Knob to increase/decrease the Microphone's Echo ability.
10. Use the Bass Knob to increase/decrease the bass of the speaker.
11. Use the Treble Knob to increase/decrease the treble of the speaker.
12. Use the GT VOL Knob to increase/decrease the Guitar volume.
13. Press the Mic Menu/Priority button to change the Mic Bass/Treble/Volume while on Karaoke and Long press to use "Mic Priority" Mode.
14. Press the MIC button for MIC recording.

Pairing with the Bluetooth speaker:

1. Power ON the Speaker and you will hear the indication tone for the BT mode.
2. Turn ON BT on your phone or tablet and search for the nearby BT compatible devices.
3. Search for the BT name "**ZEB-PARTY FYRE 550**" and tap to connect it.

Micro SD / USB Mode:

Once the speaker is ON, insert the micro SD card / USB drive to the respective ports of the "**ZEB-PARTY FYRE 550**" and the speaker will

automatically detect the track from the USB drive/Micro SD card and play. Press Prev/Next button to control the media. Use the Master volume knob to control the volume of the speaker.

TWS Function:

- Switch ON two **"ZEB-PARTY FYRE 550 "** speakers you want to pair.
- Short Press the TWS button in any one speaker to activate TWS mode.
- After few seconds, both the speakers will be connected successfully.
- Now, search for nearby BT device in your mobile and Tap on the BT name **"ZEB-PARTY FYRE 550"** to connect.
- To exit TWS mode, Short Press the TWS button in any one speaker to exit from TWS mode.

Charging the Speaker:

1. Use a DC 15V/3A adapter for charging the speaker.
2. RED LED will be ON while charging.
3. Once the speaker is fully charged, the Green LED Glows.

