

 ZEBRONICS

DJ Speaker

ZEB PARTY *Fyre* 800



User Manual

www.zebronics.com

Dear Customer

Thank you for purchasing the **ZEB-PARTY FYRE 800** DJ Speaker. Please read the user manual carefully before usage & save it for future reference.

Note:

- *Avoid the usage of this product at high temperature environments and high-humidity*
- *Avoid the self-disassembling of the product or it will result in voiding the Product's warranty.*

Caution:

- ***There is a risk of explosion if the product is disposed in the fire***
- ***To know more about Terms and conditions for warranty policy, please visit <https://zebronics.com/pages/warranty-policy>***

Features

- 160W RMS
- Up to 6h* backup
- Dual 16.51 cm Full range Driver
- TWS function
- Dual Wireless Mic
- Karaoke | Mic Recording

- 6.3mm Mic IN & Guitar IN
- BT v5.3 | USB | AUX IN
- Volume, Bass & Treble Controls
- Mic Volume, Echo, Bass & Treble Controls
- Guitar Volume Control
- 9 RGB Modes
- Carry Handle
- Built in Rechargeable Battery
- Remote Control
- Supports Rapid Charge

Specifications

Model No : ZEB-SSPK 6

Output Power (RMS) : 160W

Driver Size

Full range : 16.51cm

Tweeter : 6cm

Speaker Impedance

Full Range : 4Ω

Tweeter : 6Ω

Frequency Response : 30Hz-18kHz

S/N Ratio : ≥80dB

File format support : MP3 | FLAC | WMA | WAV
(USB)


Line input	: 3.5mm
Max supported USB memory size	: 32GB
Charging time	: 4 h
Playback time	: 6h*
BT name	: ZEB-PARTY FYRE 800
BT version	: v5.3
Product Dimension	: 27 x 27 x 58cm (W x D x H)
Net. Weight	: 7.3 kg
Country of Origin	: PRC

Package Contents

DJ Speaker	: 1 U
Remote	: 1 U
Wireless Mic	: 2 U
Input cable	: 1 U
Charging Cable	: 1 U
QR Code Guide	: 1 U


**at 50% Volume (LED Off)*

Button Description

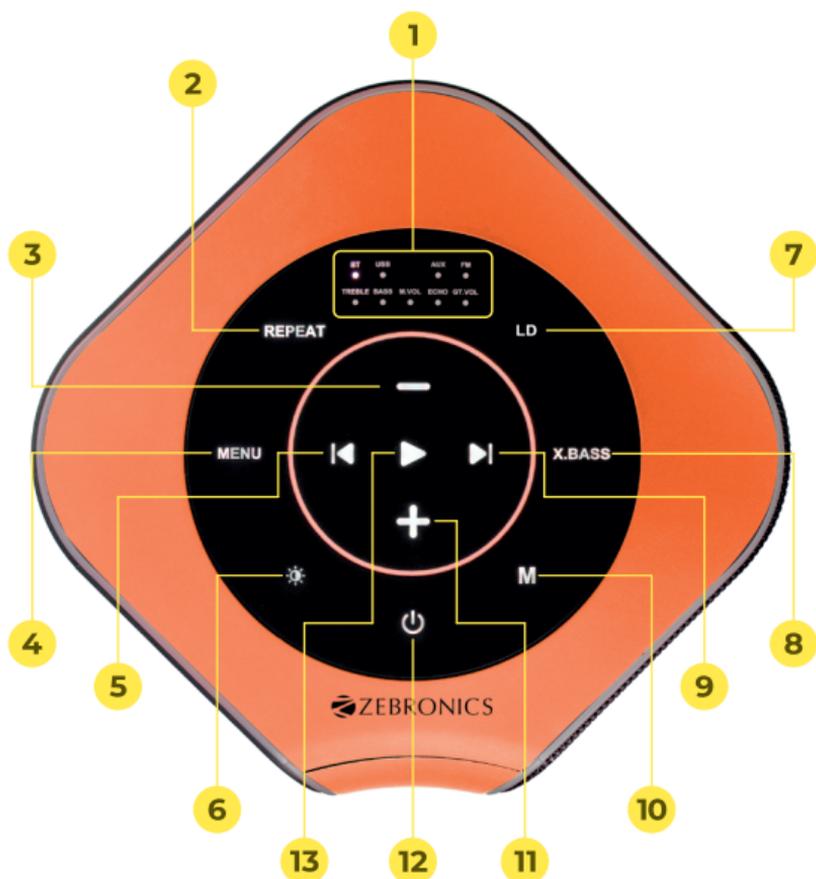

- 1 LED Indicators
- 2 Repeat | Long Press to Enable Karaoke maker mode
- 3 Volume Decrease
- 4 Menu (Bass | Treble | Mic Volume | MIC Treble | MIC Bass | Echo | Guitar Volume)
- 5 Previous Track
- 6 RGB Modes | Long Press for Mic Priority
- 7 LD : Indoor | Outdoor Mode
- 8 X-Bass
- 9 Next Track
- 10 Mode Switch
- 11 Volume Increase
- 12 Long press - Power On/Off | Short press - Battery level Indicator
- 13 Pause | Play

Remote Control

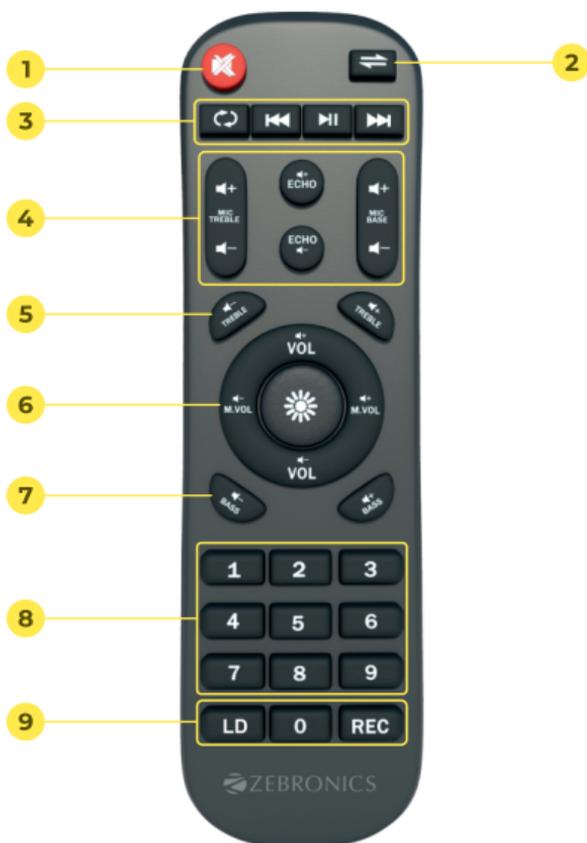

- 1 Mute | Long Press to Power On/Off
- 2 Mode (AUX | USB | BT)
- 3 Repeat Song | Long Press for Karaoke maker mode
Previous Track
Play | Pause
Next Track | Long Press for TWS Function
- 4 Mic Treble Controls
Echo Controls
Mic Bass Controls
- 5 Master Treble Controls
- 6 Master Volume Controls
Mic Volume Controls
RGB Modes Button
- 7 Master Bass Controls
- 8 Numeric Pad
- 9 LD : Short Press for Indoor | Outdoor Modes
Long Press for X-Bass

Instruction for Use

Button Functions

1. Turn the speaker On | Off using the Power Button.
2. When the Speaker is turned on, Default mode is BT mode. Switch between various modes by clicking the Mode Button.
3. Use the Master Volume Control to increase | decrease the volume of the speaker.
4. Press Previous | Next Buttons to control the media.
5. Press Play | Pause button to play track or pause track being played.
6. Long Press Next Button for enabling TWS Function.
7. Press the Repeat Button to repeat the media. Long Press the Repeat Button to enable Karaoke maker Feature.
8. The Menu button allows adjustment of Bass, Treble, Mic Volume, Mic Echo, and Guitar volume.
 - Press the Menu button repeatedly to toggle between the available adjustment options.
 - By default, the Menu button cycles through Bass, Treble, Mic Volume, and Mic Echo, which are indicated by a White LED.
 - To adjust Mic Bass and Mic Treble, press the Menu button until the Bass and Treble indicators appear in Blue LED.
 - Press the Menu button again to access Guitar Volume control, which is indicated by a White LED.
9. Press RGB Button to toggle between the RGB modes of the Speaker. Long press the button to enable Mic Priority Feature.
10. Press LD button to switch between Indoor | Outdoor Modes.
11. Press X-Bass for Bass Boost effect.

Pairing with Bluetooth

1. Power ON the speaker and you will hear the indication tone for the BT mode.
2. Turn on the BT on your phone or tablet and search for the BT name **“ZEB-PARTY FYRE 800”** and tap to connect it.

USB Mode

1. Once the speaker is ON, insert the USB drive to the respective port of the **“ZEB-PARTY FYRE 800”** and the speaker will automatically detect the track from the USB drive and play.
2. Press Prev/Next button to control the media.
3. Use the Master volume control to control the volume of the speaker.

TWS Function

- Switch ON two **“ZEB-PARTY FYRE 800”** (Change the name accordingly) speakers that are to be paired.
- Long Press the Next Button to enable TWS Feature in any one speaker.
- After a few seconds, both the speakers will be connected successfully.
- Now, Search for nearby BT device in the source device and tap on the BT name **“ZEB-PARTY FYRE 800”** to connect.
- To exit TWS mode, long press the Next button in any one speaker.

Charging Instruction

- Use a DC 5V / 9V / 12V / 15V* (3A max.) Adapter for charging the speaker.
- LED Ring around the Volume and Media Controls glows Red to indicate low battery.
- The Ring glows Green while charging and remains static when fully charged.

Note

**For the 15V charging protocol, please use the Type-C to Type-C cable and 45W PD adapter instead using the charging cable provided with the speaker.*

