



DJ Speaker

ZEB PARTY *Fyre* 900



User Manual

www.zebronics.com

Dear Customer

Thank you for purchasing the **ZEB-PARTY FYRE 900** DJ Speaker. Please read the user manual carefully before usage & save it for future reference.

Note:

- Avoid the usage of this product at high temperature environments and high-humidity
- Avoid the self-disassembling of the product or it will result in voiding the Product's warranty.

Caution:

- There is a risk of explosion if the product is disposed in the fire
- To know more about Terms and conditions for warranty policy, please visit:

<https://zebronics.com/pages/warranty-policy>

Features

- 200W RMS
- Up to 10h* backup
- 3-way Speaker
- Full Range Driver 30.48cm
- TWS function
- Dual UHF Mic
- Karaoke | Mic Recording
- 6.3mm Microphone Input x 2
- 6.3mm Guitar Input
- BT v5.3 | USB | mSD | AUX IN
- Volume, Bass & Treble Controls

- Mic Volume, Echo, Bass & Treble Controls
- Guitar Volume Control
- Retractable Handle with Wheels
- Built in Battery
- RGB Lights
- LED Display
- Remote Control
- Supports External Battery

 
Specifications

Model No	: ZEB-DPSPK 101
Output Power (RMS)	: 200W
Driver Size	
Full range	: 30.48cm
Mid Range	: 11.2 cm
Tweeter	: 5.08 cm
Speaker Impedance	
Full Range	: 4Ω
Mid Range	: 4Ω
Tweeter	: 6Ω
Frequency Response	: 48Hz-20kHz
S/N Ratio	: ≥88dB
File format support	: MP3 WAV
Line input	: 3.5mm
Max supported USB memory size	: 32GB
Charging time	: 6 h
Playback time	: 10h*
BT name	: ZEB-PartyFyre 900
BT version	: v5.3
Product Dimension	: 35.5 x 37.5 x 75.5cm (W x D x H)
Net. Weight	: 16.8 kg

Package Contents

DJ Speaker	: 1 U
Remote	: 1 U
Wireless Mic	: 2 U
Power Cord	: 1 U
Input cable	: 1 U
Type-C Cable	: 2 U
QR Code Guide	: 1 U


Front Panel Description

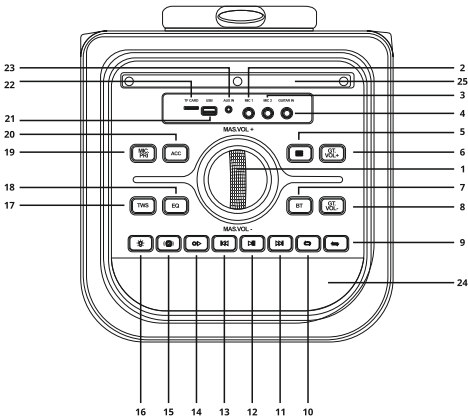

*at 50% Volume (LED Off)

- 1.Master Volume Knob
- 2.Mic Port 1
- 3.Mic Port 2
- 4.Guitar In Port
- 5.Menu Button
- 6.GT Volume Increase
- 7.BT Button
- 8.GT Volume Decrease
- 9.Mode Button
- 10.Repeat Button
- 11.Next channel Button
- 12.Play/Pause Button
- 13.Previous channel Button
- 14.Record Button
- 15.Outdoor/Indoor Mode
- 16.RGB Button
- 17.TWS Mode Button
- 18.EQ Mode Button
- 19.Mic Priority Button
- 20.ACC Button
- 21.USB Port
- 22.mSD Port
- 23.AUX Port
- 24.LED Display
- 25.Mobile Holder

 Back Panel Description

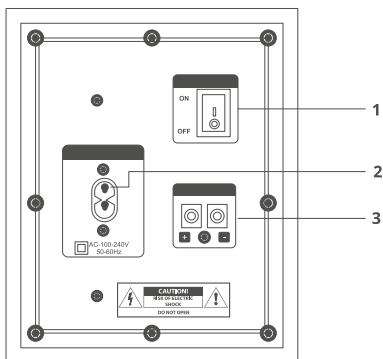


1.Power Switch

2.AC Input Button

3.External DC 12V

 Remote Description

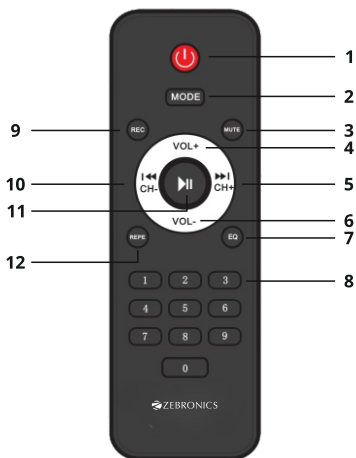

- 1.Standby/Awake
- 2.Mode Button
- 3.Mute Button
- 4.Volume Increase Button
- 5.Next channel Button.
- 6.Volume Decrease Button
- 7.EQ Button
- 8.Numeric Keys(0-9)
- 9.REC Button
- 10.Previous Channel Button
- 11.Play/Pause Button
- 12.Repeat Button

Instruction for Use

Button Functions

1. Turn the speaker ON/OFF using the Power Switch.
2. When the Speaker is turned ON, Default mode is BT mode. Switch between various modes by clicking the Mode Button.
3. Use the Master Volume Control Knob to increase | decrease the volume of the speaker.
4. Press Previous | Next Buttons to control the media/Channel.
5. Press Play | Pause button to play track or pause track being played.
6. Single Press TWS Button for enabling TWS Function.
7. Press the Repeat Button to repeat the media.

8. The Menu button allows adjustment of Bass, Treble, Mic Volume, Mic Echo, and Guitar volume..
 - Press the Menu button repeatedly to toggle between the available adjustment options.
 - By default, the Menu button cycles through Bass and Treble of the Speaker.
 - To adjust Mic Bass and Mic Treble, press the Menu button until the Bass and Treble.
9. Press RGB Button to toggle between the RGB modes of the Speaker. Long press the button to enable Mic Priority Feature.
10. Press  button to switch between Indoor | Outdoor Modes.
11. Press  Button to make Karaoke function.

Pairing with Bluetooth

1. Power ON the speaker and you will hear the indication tone for the BT mode.
2. Turn on the BT on your phone or tablet and search for the BT name **"ZEB-PartyFyre 900"** and tap to connect it.

USB Mode

1. Once the speaker is ON, insert the USB drive to the respective port of the **"ZEB-PARTYFYRE 900"** and the speaker will automatically detect the track from the USB drive and play.
2. Press Prev/Next button to control the media.

3. Use the Master volume control to control the volume of the speaker.

TWS Function

- Switch ON two **“ZEB-PARTY FYRE 900”** (Change the name accordingly) speakers that are to be paired.
- Long Press the Next Button to enable TWS Feature in any one speaker.
- After a few seconds, both the speakers will be connected successfully.
- Now, Search for nearby BT device in the source device and tap on the BT name **“ZEB-PartyFyre 900”** to connect.

AUX-IN

- The speaker can be connected to an audio source using a 3.5 to 3.5mm cable.
- Connect one end of the cable to the AUX-In port on the speaker and the other end to an audio source.
- The audio from the source can be played through the speaker.

Charging Instruction

- Connect the pre-included Power Cord to the speaker & connect the other end to 230V AC power Socket.

Charging Indication

- Charging indication will be displayed on the Speaker LED Display.

ISO 9001:2015 Certified Company
www.zebronics.com

