



DJ Speaker
SLAM
ZEB



User Manual

www.zebronics.com

Dear Customer,

Thank you for purchasing **ZEB-SLAM** DJ Speaker. Please read the user manual carefully before usage & save it for future reference.

Note:

- *Avoid the usage of this product at the high temperature and high humidity environment.*
- *Avoid the self-disassembly of the products or it results in the voiding the product's Warranty.*
- *Charge the speaker with included power cable.*
- *To know more about Terms and conditions for warranty policy, please visit*

<https://zebronics.com/pages/warranty-policy>

Features

BT v5.0 | USB | mSD | AUX | MIC IN x 2 | GT IN
TWS Function

Volume, Bass & Treble Control

Mic Volume & Echo Control Knob

Karaoke

Voice Changing Wireless Mic

RGB Lights

Specifications

Output Power (RMS) : 200W

BT Version : v5.0

Driver Size

Full Range : 25.4 cm x 2

Tweeter : 8 cm

Speaker Impedance

Full Range : 4Ω


Tweeter	: 6Ω
Frequency Response	: 20Hz-20kHz
S/N Ratio	: ≥80dB
Supported Audio Formats	: MP3
Max Supported Memory Size	: 32GB (USB/mSD)
Charging Time	: 3.5h
Playback Time	: 2.5h*
Product Dimension	: 35.5 x 34 x 85 cm (W x D x H)
Net. Weight	: 13.1 Kg

Package Contents:

Speaker	: 1 U
Wireless Mic	: 2 U
Charging Cable	: 1 U
Input Cable	: 1 U
Remote	: 1 U
QR Code Guide	: 1 U


** at 50% volume (LED off)*

Control Panel Description

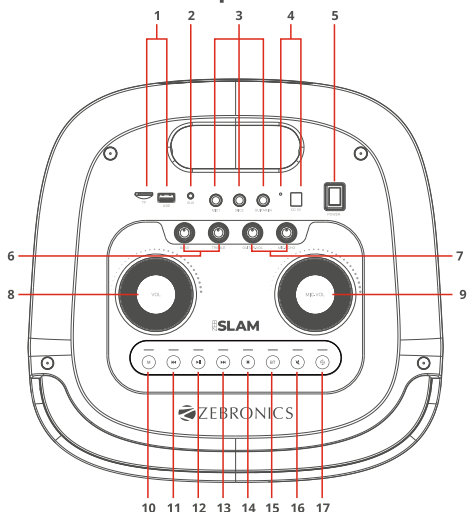

1. mSD Slot & USB Port
2. AUX Input
3. 6.3mm Input for MIC1, MIC 2 & Guitar
4. Charging LED Indicator & Type-C Charging Port
5. Power On/Off Switch
6. Music Bass & Treble Controls
7. Guitar Volume Control & Mic Echo Controls
8. Master Volume Control
9. Mic Volume Control
10. Input Mode
11. Previous Track
12. Play / Pause
13. Next Track
14. LED Modes
15. BT Mode
16. Music Spectrum Display Effect (On/Off)
17. Microphone Voice Modulation – Neutral Mode, High Pitch Mode 1, Sound Monster Mode, High Pitch Mode 2, Reverberation Mode.

Remote Control

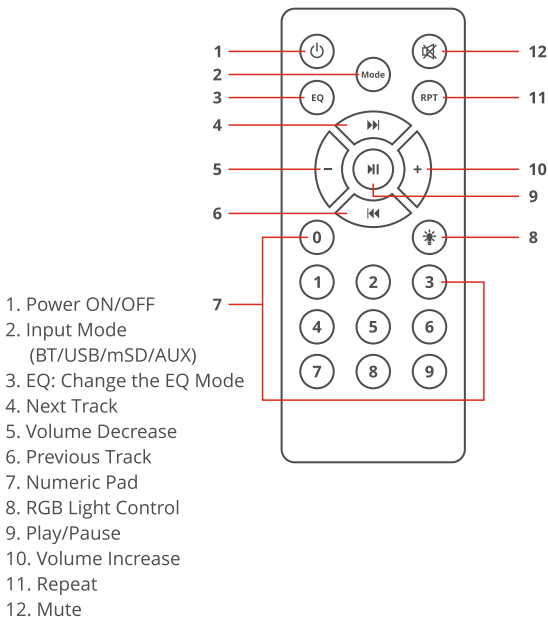

General Instructions

BT Mode:

Switch the speaker to BT mode, Scan for nearby BT devices. Tap on **ZEB-SLAM** to connect.

USB/mSD Mode:

Insert the USB Drive/mSD Card to the speaker it will detect the USB Drive/mSD Card and the audio files from drive will be played automatically.

AUX-IN:

The speaker can be connected to an audio device using a 3.5mm cable. Connect the one end of the cable to the speaker & connect the other end of the cable to an audio source. The songs from the audio source can be heard through the speaker.

TWS Connectivity :

1. Turn on both **"ZEB-SLAM"** speakers in BT mode.
2. Press and hold the Mode button for 3-5 seconds in any one of the speaker to initiate TWS pairing.
3. After few seconds both speakers will get connected successfully.
4. Now search for nearby BT device in you mobile phone or other source device and tap on BT name **ZEB-SLAM** to connect.

***Note:** To exit TWS mode, press and hold the Mode button for 3-5 seconds in any one of the speaker.*

Charging the Speaker :

1. Use a DC 5V/3A adapter for charging the speaker.
2. RED LED will be ON while charging.
3. Once the speaker is fully charged, the RED LED goes OFF.

