



DJ Speaker  
**ZEB THUMP10**



# User Manual

[www.zebronics.com](http://www.zebronics.com)

## **Dear Customer,**

Thank you for purchasing **ZEB-THUMP 10** DJ Speaker. Please read the user manual carefully before usage & save it for future reference.

### **Note:**

- Avoid the usage of this product at the high temperature and high humidity environment.
- Avoid the self-disassembly of the products or it results in the voiding the product's Warranty.
- Turn off the speaker when the speaker is not in use.
- To know more about Terms and conditions for warranty policy, please visit

<https://zebronics.com/pages/warranty-policy>

### **Features:**

140W RMS Output

Up to 5h\* Backup

Dual 25.4cm Full range Drivers

TWS Function

Karaoke Function

Dual Wireless Voice changing MIC

Dual 6.3mm Microphone Input

6.3mm Guitar Input

BT v5.3 | USB | mSD | AUX

4 EQ Modes

Mic Volume & Echo controls

RGB Lights

Remote control

LED Display  
Mobile holder  
Type-C Charging  
Built-in Rechargeable Battery  
Carry Handle with Wheels

**Specifications :**


Output Power (RMS)	: 140W (70W + 70W)
Driver Size	
Full Range	: 25.4cm x 2
Tweeter	: 3.8cm
Impedance	
Full Range	: 3Ω
Tweeter	: 10Ω
Frequency Response	: 100Hz-20kHz
S/N Ratio	: ≥80dB
Supported Audio	
File format support	
(USB/mSD)	: Mp3
Line input	: 3.5mm
Max Supported	
Memory Size	: 32GB (USB/mSD)
Charging Time	: 6h
Playback Time	: 5h*
BT Name	: ZEB-THUMP 10
BT Version	: v5.3
Product Dimension	: 36.1 x 34 x 84.5 cm
	(W x D x H)
Net. Weight	: 10.6kg

*\* at 50% volume (LED off)*

## Package Contents:


Speaker	: 1 U
Wireless Mic	: 2 U
Charging Cable	: 1 U
Input cable	: 1 U
Remote	: 1 U
QR Code Guide	: 1 U

## Buttons Description

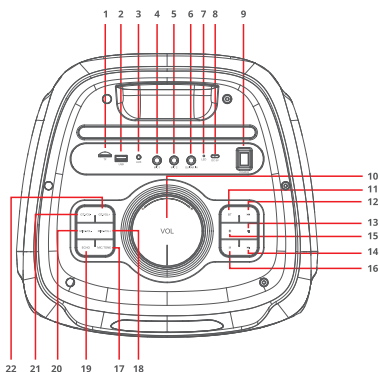

- |                           |                                       |
|---------------------------|---------------------------------------|
| 1. mSD card               | 14. Next Track                        |
| 2. USB port               | 15. RGB light control                 |
| 3. AUX                    | 16. Input Mode/<br>TWS Pairing Button |
| 4. MIC1 input port        | (BT/USB/mSD/AUX)                      |
| 5. MIC2 input port        | 17. MIC Tone (5 Tones)                |
| 6. Guitar input port      | 18. MIC Volume (+)                    |
| 7. LED indicator          | 19. ECHO                              |
| 8. DC 5V                  | 20. MIC Volume (-)                    |
| 9. Power ON/OFF Switch    | 21. Guitar Volume (-)                 |
| 10. Volume control        | 22. Guitar Volume (+)                 |
| 11. BT Connect/Disconnect |                                       |
| 12. Previous Track        |                                       |
| 13. Play/Pause            |                                       |

# Remote Control

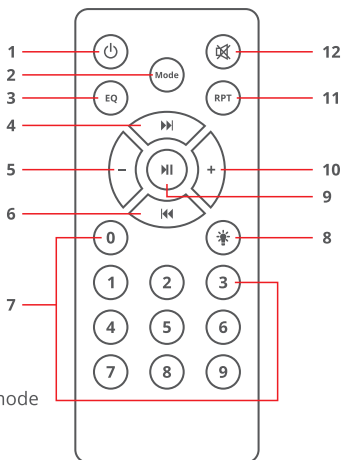

1. Power ON/OFF
2. Input mode  
(BT/USB/mSD/AUX)
3. EQ: Change the EQ mode
4. Next track
5. Volume decrease
6. Previous track
7. Numeric pad
8. RGB light control
9. Play-Pause
10. Volume Increase
11. Repeat
12. Mute

## Instruction for Use:

### Button Function:

1. Turn the speaker ON/OFF using the power switch.
2. Press mode button to change it to BT mode.
3. Use Master volume control knob to increase / decrease the volume.
4. Use MIC volume control buttons to increase / decrease the MIC volume.
5. Press Prev/Next button to control the media.

6. Press Play-Pause button to play track or pause track being played.

### **Pairing with the Bluetooth speaker:**

1. Power ON the Speaker and you will hear the indication tone for the BT mode.
2. Turn ON BT on your phone or tablet and search for the nearby BT compatible devices.
3. Search for the BT name **"ZEB-THUMP 10"** and tap to connect it.

### **Micro SD / USB Mode:**

Once the speaker is ON, insert the micro SD card / USB drive to the respective ports of the **"ZEB-THUMP 10"** and the speaker will automatically detect the track from the USB drive/Micro SD card and play.

Press Prev/Next button to control the media.

Use the Master volume knob to control the volume of the speaker.

### **TWS Function:**

- Switch ON two **"ZEB-THUMP 10"** speakers you want to pair.
- Press & hold the Mode button for 5-10 seconds in any one speaker to activate TWS mode.
- After few seconds, both the speakers will be connected successfully.

- Now, search for nearby BT device in your mobile and Tap on the BT name “**ZEB-THUMP 10**” to connect.
- To exit TWS mode, Press & hold mode button for 5-10 seconds in any one speaker to exit from TWS mode.

### **Charging the Speaker:**

1. Use a DC 5V/3A adapter for charging the speaker.
2. RED LED will be ON while charging.
3. Once the speaker is fully charged, the RED LED goes OFF.

