



Trolley DJ Speaker

ZEB **THUMP 111**



User Manual

www.zebronics.com

Dear Customer,

Thank you for purchasing **ZEB-THUMP 111** (*Trolley Dj Speaker*). Please read this user manual carefully before operation & save this user manual for further reference.

Note:

- Avoid the usage of this product at the high temperature and high humidity environment.
- Avoid the self-disassembly of the products or it results in voiding the product's Warranty.
- Charge the speaker with included power cable.

To know more about Terms and conditions for warranty policy, please visit

<https://zebronics.com/pages/warranty-policy>

Features:

- BT v5.0 | USB | mSD | AUX | FM
- Dual 6.3mm Microphone input
- Wireless MIC
- Karaoke
- TWS Function
- Built-in Rechargeable Battery
- Retractable Handle with Wheels

Specification:


Output Power (RMS)	: 40W
BT Version	: 5.0
Driver Size	: 30.48cm + 2.54cm
Speaker Impedance	: 2.8Ω + 16Ω
Frequency Response	: 65Hz-18kHz
S/N Ratio	: ≥58dB
Max Supported USB/mSD memory size	: 32GB
FM Frequency range	: 87.5MHz - 108MHz
Supported Audio formats:	MP3 / WAV / WMA
Charging time	: 5h
Playback time	: 7h*
Product Dimension (W x D x H)	: 33 x 27.5 x 51 cm
Net. Weight	: 5.1 kg

** at 50% volume (LED OFF)*

Package Contents:


Speaker	: 1 U
Remote	: 1 U
Wireless Mic	: 1 U
MIC Clamp	: 1 U
Power Cord	: 1 U
Input cable	: 1 U
QR Code Guide	: 1 U

Control Description

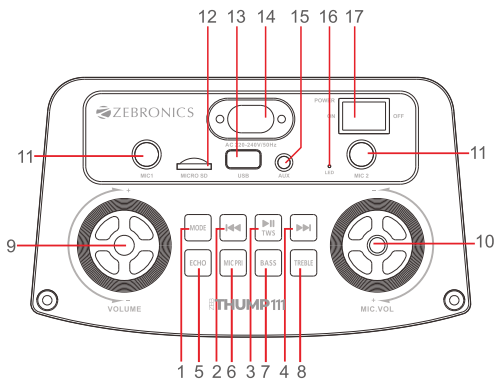

1. Input mode change button & Long press to LED Light control
2. Previous track/FM channel
3. Play/Pause in USB, mSD & BT / Long press for TWS connection
4. Next track/FM channel
5. Short press this button and then rotate volume knob to adjust the Mic echo
6. Short press this button and then rotate volume knob to adjust the Mic volume
7. Short press this button and then rotate volume knob to adjust the Music bass
8. Short press this button and then rotate volume knob to adjust the Music treble
9. Volume knob
10. Mic volume knob
11. Microphone input port 1 and 2
12. mSD slot
13. USB port
14. AC 220-240V/50Hz input
15. AUX IN
16. Charging indicator
17. Power ON/OFF switch

Remote Control

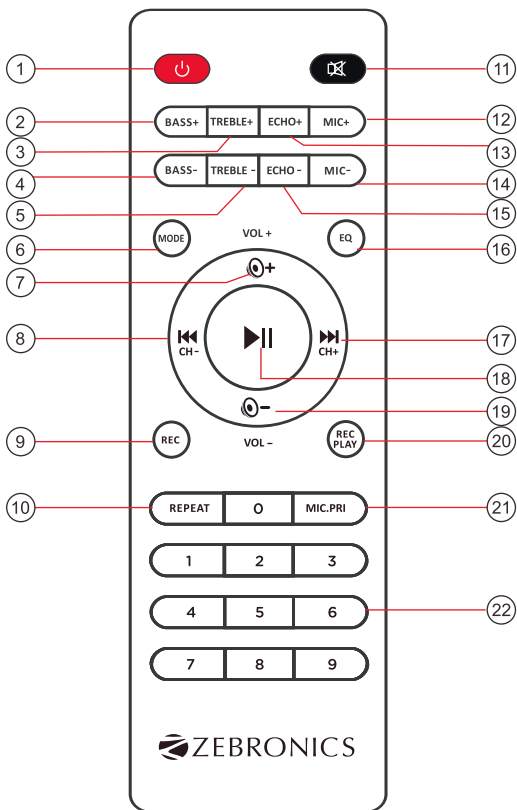

1. Standby/Awake
2. Music bass +
3. Music treble +
4. Music bass -
5. Music treble -
6. Input modes
7. Volume +
8. Previous track/FM channel & Long press for music rewind.
9. Recording
10. Repeat music (works under USB / mSD modes)
11. Mute
12. Mic volume +
13. Mic echo +
14. Mic volume -
15. Mic echo -
16. EQ
17. Next track/FM channel & Long press for music forward.
18. Play/Pause
19. Volume -
20. Play the recorded file
21. Mic priority ON/OFF
22. Numeric keys (0-9) for selecting tracks in USB/mSD & channels in FM

General Instructions

BT Mode

Switch the speaker to BT mode, Scan for nearby BT devices . Tap on BT Name **“ZEB-THUMP 111”** to connect.

USB/mSD Mode

Insert the USB Drive/mSD Card to the speaker it will detect the USB Drive/mSD Card and the audio files from drive will be played automatically.

FM Radio

Switch the speaker to FM, Now long Press the Play/Pause Key to scan the available FM channels. Once the scanning is done the speaker will start playing the first scanned channel.

AUX-IN

The speaker can be connected to an audio device using a 3.5mm cable. Connect the one end of the cable to the speaker & connect the other end of the cable to an audio source. The songs from the audio source can be heard through the speaker.

***Note:** Bass, Treble & EQ controls cannot be adjusted in AUX mode*

TWS Connectivity:

- Turn on both “ZEB-THUMP 111” speakers in BT mode.
- Press and hold the Play/Pause button for 3-5 seconds in any one of the speaker to initiate TWS pairing.
- After few seconds both speakers will get connected successfully.
- Now search for nearby BT device in you mobile phone or other source device and tap on BT name **ZEB-THUMP 111** to connect.

***Note:** To exit TWS mode, press and hold the Play/Pause button for 3-5 seconds*

Recording Function:

To record mic input, first plug-in a USB/mSD card into the speaker, it will act as a storage device. Press the REC key on the remote to start/stop recording. Once the song or voice is recorded through the Mic, press the REC PLAY key to play the recorded file.

ISO 9001:2015 Certified Company

www.zebronics.com

