

ZEBRONICS

DJ Speaker

ZEB **THUMP12**



User Manual

www.zebronic.com

Dear Customer,

Thank you for purchasing the **ZEB-THUMP 12 DJ** Speaker. Please read the user manual carefully before usage & save it for future reference

Note:

- *Avoid the usage of this product at the high temperature and high humidity environment.*
- *Avoid the self-disassembly of the products or it results in voiding the product's Warranty.*
- *Turn off the speaker when the speaker is not in use.*
- *To know more about Terms and conditions for warranty policy, please visit:*

<https://zebronics.com/pages/warranty-policy>

Features:

- 320W RMS
- Upto 9h* backup
- Dual 25.4cm Full Range Drivers
- TWS Function
- Dual UHF MIC
- Karaoke / Recording Function
- BT v5.1 | USB | mSD | AUX
- Guitar Volume Controls
- MIC Volume, Echo, Treble & Bass Control Knobs
- 14 RGB Modes
- Dual 6.3mm Microphone & Guitar Input
- Cosmic Glow LED Display
- Remote Control

- Built-in Battery
- Carry Handle with Wheels

Specifications:

Output Power (RMS) : 320W

BT Version : 5.1

Driver Size

Full Range : 25.4cm x 2

Tweeter : 2.54 cm

Speaker Impedance

Full Range : 4Ω

Tweeter : 16Ω

Frequency Response : 60Hz-18kHz

S/N Ratio : ≥60dB

Seperation : >60dB

Max Supported

USB/mSD memory size : 32GB

FM Frequency range : 87.5 - 108MHz

Supported Audio

formats : MP3

BT name : ZEB-Thump 12

Charging time : 10h

Playback time : 9h*

Product Dimension

(W x D x H) : 34.4 x 34.2 x 91.3 cm

Net. Weight : 15.9 kg


** at 50% volume (LED off)*

Package Contents:


Speaker	: 1 U
Input Cable	: 1 U
Remote Control	: 1 U
Wireless MIC	: 2 U
Power Cable	: 1 U
QR Code Guide	: 1 U

Control Panel Description:

Top Side:

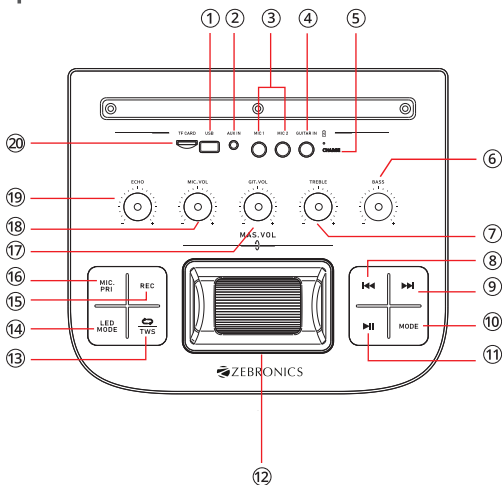


Rear Side:

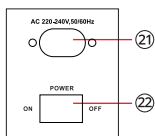

- ① USB Port
- ② AUX Port
- ③ 6.3mm Microphone Input
- ④ 6.3mm Guitar Input
- ⑤ LED Indicator
- ⑥ Bass Volume Control Knob
- ⑦ Treble Volume Control Knob
- ⑧ Previous Track/Channel Button
- ⑨ Next Track/Channel Button
- ⑩ Mode Button
- ⑪ Play / Pause Button
- ⑫ Master Volume Knob
- ⑬ TWS Button
- ⑭ LED Mode Button
- ⑮ Recording Button
- ⑯ Mic Priority Button
- ⑰ Guitar Volume Knob
- ⑱ MIC Volume Knob
- ⑲ Echo Volume Knob
- ⑳ mSD Port
- ㉑ AC Power Port
- ㉒ Power On/Off Switch

Remote Control:

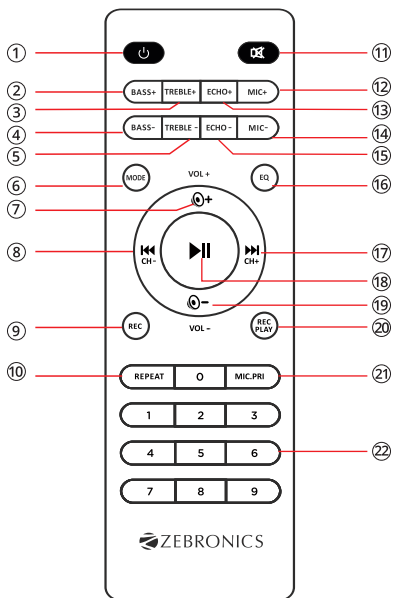

① POWER BUTTON

② BASS +

③ TREBLE +

④ BASS -

⑤ TREBLE -

⑥ MODE

⑦ VOL +

⑧ PREVIOUS

⑨ RECORDING

⑩ REPEAT

⑪ MUTE/UNMUTE

⑫ MIC +

⑬ ECHO +

⑭ MIC -

⑮ ECHO -

⑯ EQ

⑰ NEXT

⑱ PLAY/PAUSE/SCAN

⑲ VOL -

⑳ REC PLAY

㉑ MIC PRIORITY

㉒ NUMERIC BUTTONS (0-9)

General Instructions

BT Connectivity:

- Switch the source to BT mode.
- Turn on BT on your mobile and scan for nearby BT devices.
- Tap on "**ZEB-Thump 12**" to connect.

USB/mSD Mode:

- Insert the USB/mSD card into the slot provided on the speaker.
- The speaker will automatically detect the USB/mSD card and the supported audio content will be played from it.

Note:

This mode isn't selectable on the speaker or remote control unless a USB/SD flash card is connected.

FM Radio:

- Switch the speaker to FM mode
- Long press the Play/Pause button to scan the available FM channels.
- Once the scanning is done, the first scanned channel will start playing.

AUX-IN:

- The speaker can be connected to an audio source using a 3.5mm cable.
- Connect one end of the cable to the AUX-In port on the speaker and the other end an audio source.
- The audio from the source can be Played through the speaker.

TWS Function:

- Turn on both "**ZEB-Thump12**" speakers in BT mode Press and hold the TWS button for 3-5 seconds in any one of the speakers to initiate TWS pairing.
- After a few seconds both speakers will get connected successfully.
- Now search for a nearby BT device in your mobile phone or other source device and tap on BT name "**ZEB-Thump 12**" to connect. To exit TWS mode, press and hold the TWS button for 3-5 seconds.

Recording Function:

- To record mic input, first plug-in a USB/mSD card into the speaker, it will act as a storage device.
- Press the REC key on the remote to start/stop recording.
- Once the voice is recorded through the Mic, press the REC PLAY key to play the recorded file.

Charging the speaker:

- Connect the AC cord to charge the speaker.
- RED LED Will be Flash while Charging.
- Once the speaker is Fully Charged, The RED LED Glows.

