



DJ Speaker
ZEB THUMP 750



User Manual

www.zebronics.com

Thank you for purchasing the **“ZEB-THUMP 750”** DJ Speaker. Please read this user manual carefully before operation & save it for future reference.

Note:

- Avoid the use of this product at the high-temperature and high humidity environment.
- Avoid the self-disassembling of the product or it will result in voiding the Product's warranty.
- To know more about Terms and conditions for warranty policy, please visit :

<https://zebronics.com/pages/warranty-policy>

Features:

- Up to 5h* Backup
- 25.4cm Full range Driver
- TWS Function
- Karaoke Function
- Dual Voice Changing Wireless MIC
- BT v5.3 | USB | mSD | AUX
- Dual 6.3mm Microphone Input
- 6.3mm Guitar Input
- Mic Volume & Echo controls
- RGB Lights
- Type-C Charging
- Built-in Rechargeable Battery
- Carry Handle with Wheels

Specifications:

Output Power	: 180W (RMS)
Driver Size	
Full range	: 25.5cm x 1
Mid range	: 11.2cm x 2
Tweeter	: 6.8cm x 2
Impedance	
Full range	: 4Ω
Mid range	: 4Ω
Tweeter	: 6Ω
Frequency	
Response	: 20Hz-20kHz
S/N Ratio	: ≥80dB
Separation	: ≥80dB
File format support	
(USB/mSD)	: MP3
Line input	: 3.5mm
Max Supported	
USB/mSD memory size	: 32GB
Charging time	: 3h
Playback time	: 5h*
BT name	: ZEB-Thump 750
BT version	: v5.3
Product Dimension	
(W x D x H)	: 31 x 33 x 73 cm
Net. Weight	: 12 kg

* at 50% volume(LED off)

Package Contents:

Speaker : 1 U

Wireless Mic : 2 U


Charging Cable : 1 U

Input cable : 1 U

QR Code Guide : 1 U

Product Description:

Buttons Description:

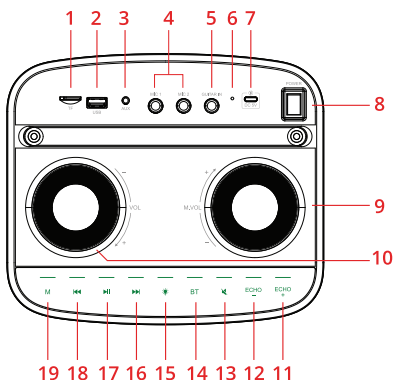

1. mSD Port
2. USB Port
3. AUX Port
4. 6.3mm Microphone Input
5. 6.3mm Guitar Input

6. LED Indicator
7. Type-C Charging Port
8. Power On/Off Switch
9. Mic Volume Knob
10. Master Volume Knob
11. ECHO Volume Increase Button
12. ECHO Volume Decrease Button
13. Mute Button
14. BT Connect / Disconnect Button
15. RGB Modes Button
16. Next Track Button
17. Play/Pause Button
18. Previous Track Button
19. Mode Button

General Instructions :

BT Connectivity :

Switch the speaker to BT mode, Scan for nearby BT devices. Tap on **“ZEB-Thump 750”** to connect.

USB/mSD :

Insert the USB Drive/mSD Card to the speaker it will detect the USB Drive/mSD Card and the audio files from drive will be played automatically.

AUX-IN :

The speaker can be connected to an audio device using a 3.5mm cable. Connect the one

end of the cable to the speaker & connect the other end of the cable to an audio source. The songs from the audio source can be heard through the speaker.

TWS Function :

- Turn on both **ZEB-THUMP 750** speakers in BT mode.
- Press and hold the Mode button for 3-5 seconds in any one of the speakers to initiate TWS pairing.
- After few seconds both speakers will get connected successfully.
- Now search for nearby BT device in your mobile phone or other source device and tap on BT name "**ZEB-Thump 750**" to connect.

Note :

To exit TWS mode, press and hold the Mode button for 3-5 seconds in any one of the speakers.

Charging the Speaker :

- Use a DC 5V/3A adapter for charging the speaker.
- The red LED will be ON while charging.

ISO 9001:2015 Certified Company
www.zebronics.com

