

 ZEBRONICS

DJ Speaker
ZEB **THUMP801**



User Manual

www.zebronics.com

Dear Customer,

Thank you for purchasing **ZEB-THUMP 801** DJ Speaker. Please read the user manual carefully before usage & save it for future reference.

Note:

- Avoid the usage of this product at the high temperature and high humidity environment.
- Avoid the self-disassembly of the products or it results in the voiding the product's Warranty.
- Turn off the speaker when the speaker is not in use.
- To know more about Terms and conditions for warranty policy, please visit

<https://zebronics.com/pages/warranty-policy>

Features

100W RMS Output

Up to 7h* Backup

Dual 20.32cm Full range Drivers

TWS Function

Karaoke Function

4 EQ Modes

Dual Voice Changing Wireless MIC

BT v5.3 | USB | mSD | AUX

Dual 6.3mm Microphone Input

6.3mm Guitar Input

Mic Volume & Echo controls

RGB Lights

Remote control

LED Display
Mobile holder
Type-C Charging
Built-in Rechargeable Battery
Carry Handle with Wheels

Specification:


Output Power (RMS) : 100W (50W + 50W)
Driver Size
Full range : 20.32cm x 2
Tweeter : 3.8 cm
Impedance
Full range : 3Ω
Tweeter : 10Ω
Frequency response : 100Hz-20kHz
S/N Ratio : ≥80dB
File format support : MP3 (USB/mSD)
Line input : 3.5mm
Max supported
memory size : 32GB(USB/mSD)
Charging time : 6h
Playback time : 7h*
BT name : ZEB-THUMP 801
BT version : v5.3
Product Dimension
(W x D x H) : 32.5 x 33 x 69.6 cm
Net.Weight : 8.1kg

Package Content :

Speaker : 1 U
Remote : 1 U
Wireless Mic : 2 U
Charging Cable : 1 U
Input cable : 1 U
QR Code Guide : 1 U


**at 50% Volume (LED OFF)*

Buttons Description :

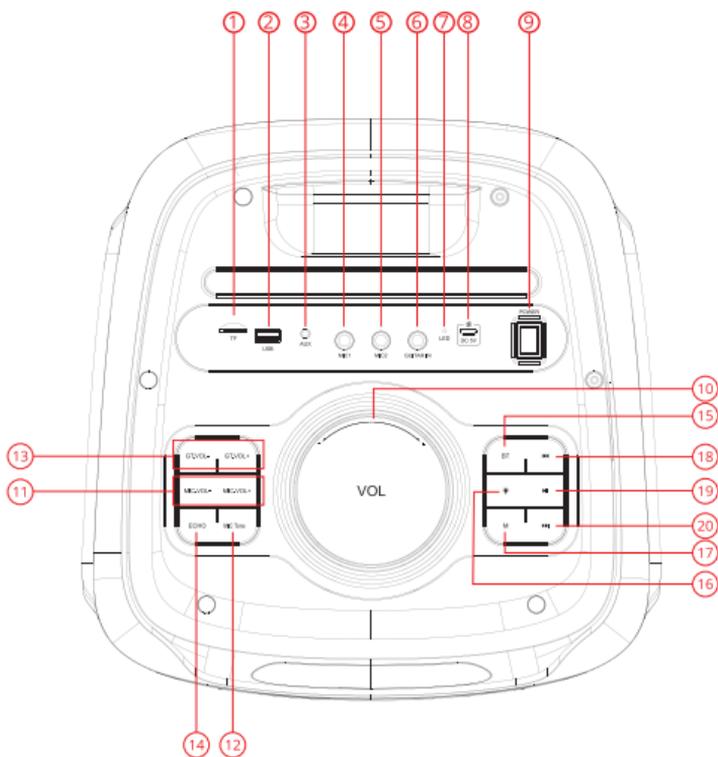

- | | |
|-----------------------------|---------------------------------|
| 1. mSD card | 14. Echo +/- controls |
| 2. USB port | 15. BT Connect / Disconnect |
| 3. AUX | 16. RGB light control |
| 4. MIC1 input port | 17. Input mode (BT/USB/mSD/AUX) |
| 5. MIC2 input port | 18. Previous track |
| 6. Guitar input port | 19. Play-Pause |
| 7. LED indicator | 20. Next track |
| 8. DC 5V | |
| 9. Power ON/OFF Switch | |
| 10. Volume control | |
| 11. MIC Volume +/- controls | |
| 12. MIC. Tones (5 Tones) | |
| 13. Guitar +/- controls | |

Remote Control :

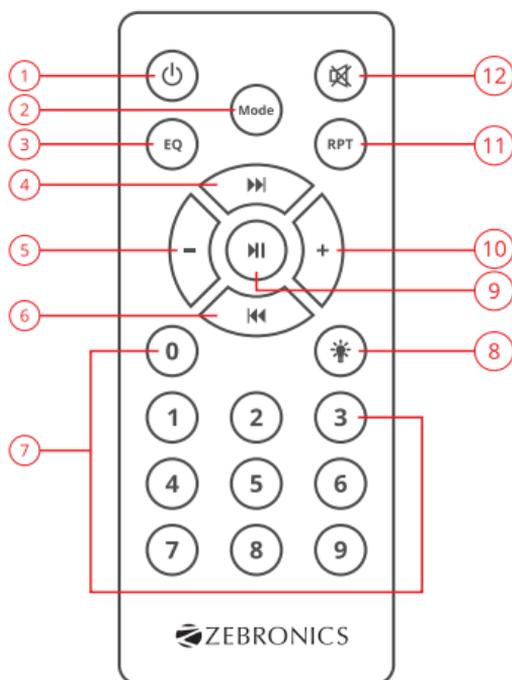

1. Power ON/OFF
2. Input mode
(BT/USB/mSD/AUX)
3. EQ: Change the EQ mode
4. Next track
5. Volume decrease
6. Previous track
7. Numeric pad
8. RGB light control
9. Play-Pause
10. Volume Increase
11. Repeat
12. Mute

Instruction for Use:

Button Function:

- Turn the speaker ON/OFF using the power switch.
- Press mode button to change it to BT mode.
- Use Master volume control knob to increase / decrease the volume.
- Use MIC volume control knob to increase / decrease the MIC volume.
- Press Prev/Next button to control the media.
- Press Play-Pause button to play track or pause track being played.

Pairing with the Bluetooth speaker:

- Power ON the Speaker and you will hear the indication tone for the BT mode.
- Turn ON BT on your phone or tablet and search for the nearby BT compatible devices.
- Search for the BT name "**ZEB-THUMP 801**" and tap to connect it.

Micro SD / USB Mode:

- Once the speaker is ON, insert the micro SD card / USB drive to the respective ports of the "**ZEB-THUMP 801**" and the speaker will automatically detect the track from the USB drive/Micro SD card and play.
- Press Prev/Next button to control the media.
- Use the Master volume knob to control the volume of the speaker.

TWS Function:

- Switch ON two **"ZEB-THUMP 801"** speakers you want to pair.
- Press & hold the Mode button for 5-10 seconds in any one speaker to activate TWS mode.
- After few seconds, both the speakers will be connected successfully.
- Now, search for nearby BT device in your mobile and Tap on the BT name **"ZEB-THUMP 801"** to connect.
- To exit TWS mode, Press & hold mode button for 5-10 seconds in any one speaker to exit from TWS mode.

Charging the Speaker:

- Use a DC 5V/3A adapter for charging the speaker.
- RED LED will be ON while charging.
- Once the speaker is fully charged, the RED LED goes OFF.