



DJ Speaker  
**ZEB THUMP 802**



**User Manual**

[www.zebronics.com](http://www.zebronics.com)

Thank you for purchasing the **“ZEB-THUMP 802”** DJ Speaker. Please read this user manual carefully before operation & save it for future reference.

**Note:**

- Avoid the use of this product at the high-temperature and high humidity environment.
- Avoid the self-disassembling of the product or it will result in voiding the Product's warranty.
- To know more about Terms and conditions for warranty policy, please visit

<https://zebronics.com/pages/warranty-policy>

**Features:**

- 120W RMS Output
- Up to 4h\* Backup
- Dual 20.32cm Full range Drivers
- TWS Function
- Karaoke Function
- Wireless MIC
- BT v5.3 | USB | AUX | FM Radio
- 6.3 mm Microphone Input
- RGB Lights
- Remote control
- Type-C Charging
- Built-in Rechargeable Battery



## Specifications:

BT name	: ZEB-THUMP 802
BT version	: v5.3
Output Power (RMS)	: 120W
Driver Size	
Full range	: 20.32cm x 2
Tweeter	: 5.08cm x 1
Impedance	
Full range	: 4Ω
Tweeter	: 8Ω
Frequency Response	: 60Hz-20kHz
S/N Ratio	: ≥75dB
File format support	
(USB)	: MP3
Line input	: 3.5mm
Max Supported	
USB/mSD memory size	: 32GB
FM frequency range	: 87.5 MHz - 108 MHz
Charging time	: 5h
Playback time	: 4h*
Product Dimension	
(W x D x H)	: 28 x 29 x 60 cm
Net. Weight	: 7 kg


*\* at 50% volume(LED off)*

## Package Contents:

Speaker	: 1 U
Remote	: 1 U
Wireless Mic	: 2 U
Charging Cable	: 1 U
Input cable	: 1 U
QR Code Guide	: 1 U

## Product Description:


### Control Panel Description:

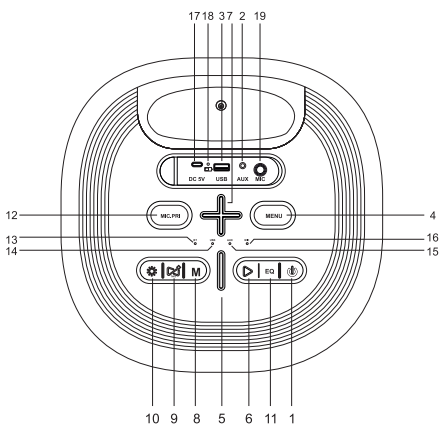

1. Power Button
2. AUX Port
3. USB Port
4. MENU Button
5. Volume Decrease

6. Play/Pause
7. Volume Increase
8. M Button
9. TWS Button
10. LED Mode Button
11. EQ Button
12. MIC Priority
13. BT Indicator
14. USB Indicator
15. AUX Indicator
16. MIC Indicator
17. DC 5V/ 2A Port
18. Charging Indicator
19. 6.3 mm MIC INPUT

## REMOTE CONTROL:

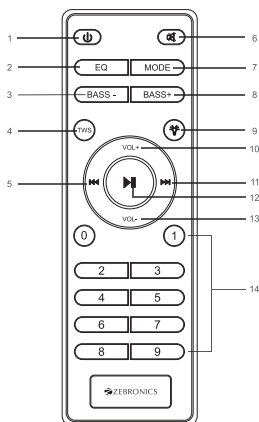

1. Power Button
2. EQ Button
3. BASS -
4. TWS Button
5. Previous Track / Channel
6. Mute Button
7. Mode Button
8. BASS +
9. LED Mode Button
10. Volume Increase +
11. Next Track / Channel
12. Play / Pause Button
13. Volume Decrease -
14. Channel Selection Button(0-9)

## **BUTTON FUNCTIONS :**

- Press the “M” button to switch between the Input Modes of the speaker between BT Mode,AUX Mode,USB Mode & FM Mode while the LED Indicator denotes which Input Mode is currently Active.

- Press the TWS button for the TWS Connectivity between the two speakers only when both the speakers are available in BT Mode.
- Single Press the PLAY/PAUSE button to play/pause the tracks in the Input Mode (BT & USB) Long Press the PLAY/PAUSE button to undergo Scanning Function in FM Mode.
- Press the EQ button to switch between the three EQ Modes; those are Default Mode, Bass-Boost Mode & Vocal Enhancement Mode.
- Press the Power button to Turn ON/OFF the speaker.
- Press the Mic. Priority Button to make the speaker prioritize the sound from the connected microphone over other audio sources.
- Press the Menu button to switch between the Echo controls & MIC Volume controls of the speaker.
- Press the "+" button to increase the Master Volume, MIC Volume & Echo Volume.
- Press the "-" button to decrease the Master Volume, MIC Volume & Echo Volume.

## **General Instructions :**

### **BT Connectivity :**

- Switch the source to BT mode.
- Turn on BT on your mobile and scan for nearby BT devices.
- Tap on **"ZEB-THUMP 802"** to connect.

### **USB :**

- Insert the USB into the slot provided on the speaker.
- The speaker will automatically detect the USB and the supported audio content will be played from it.

### **Note :**

*This mode isn't selectable on the speaker or remote control unless a USB is connected.*

### **FM Radio :**

- Switch the speaker to FM mode
- Long press the Play/Pause button to scan the available FM channels.
- Once the scanning is done, the first scanned channel will start playing.

### **AUX-IN :**

- The speaker can be connected to an audio source using a 3.5mm cable.
- Connect one end of the cable to the AUX-In port on the speaker and the other end an audio source.

- The audio from the source can be Played through the speaker.

### **TWS Function :**

- Turn on both "**ZEB-THUMP 802**" speakers in BT mode Press and hold the "TWS" button for 3-5 seconds in any one of the speakers to initiate TWS pairing.
- After few seconds both speakers will get connected successfully.
- Now search for nearby BT device in you mobile phone or other source device and tap on BT name "**ZEB-THUMP 802**" to connect. To exit TWS mode, press and hold the "TWS" button for 3-5 seconds

### **Charging the Speaker :**

- Use a DC 5V/2A adapter for charging the speaker.
- RED LED will be ON while charging.
- Once the speaker is fully charged, the RED LED goes OFF.