


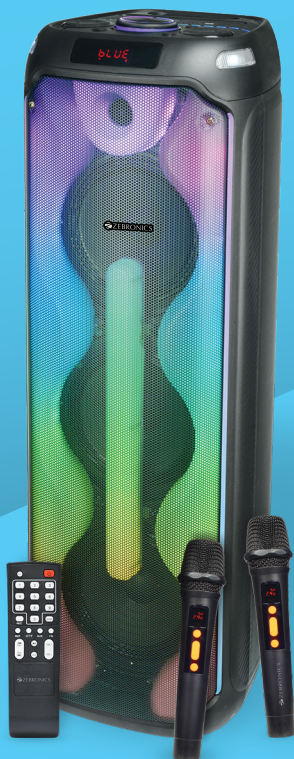

DJ Speaker
ZEB **THUMP**804



User Manual

www.zebronics.com

Dear Customer,

Thank you for purchasing **ZEB-THUMP 804** DJ Speaker. Please read the user manual carefully before usage & save it for future reference.

Note:

- Avoid the usage of this product at the high temperature and high humidity environment.
- Avoid the self-disassembly of the products or it results in the voiding the product's Warranty.
- Turn off the speaker when the speaker is not in use.
- To know more about Terms and conditions for warranty policy, please visit

<https://zebronics.com/pages/warranty-policy>

Features

150W RMS

Up to 8h* Backup

Triple Full Range 20.32cm

Speaker with 4 Drivers

TWS Function

Karaoke | Mic Recording

Dual Wireless MIC

BT v5.0 | USB | mSD | AUX

6.3mm Microphone Input x 2

6.3mm Guitar Input

Volume, Bass & Treble Controls

Mic Volume & Echo Control

Guitar Volume Control

Carry Handle & Wheels

Built-in Battery
RGB Lights
LED Display
Remote Control

Specification:


Output Power (RMS) : 150W
Driver Size
 Full range : 20.32cm x 3
 Tweeter : 2.54cm
Impedance
 Full range : $3\Omega \times 1, 6\Omega \times 2$
 Tweeter : 10Ω
Frequency response : 20Hz-20kHz
S/N Ratio : $\geq 50\text{dB}$
File format support
 (USB/mSD) : MP3
Line input : 3.5mm
Max supported USB
/mSD memory size : 128GB
Charging time : 7h
Playback time : 8h*
BT name : ZEB-Thump 804
BT version : v5.0
Product Dimension
(W x D x H) : 29 x 28.5 x 89 cm
Net.Weight : 9.3 kg

**at 50% Volume (LED OFF)*

Package Content :

Speaker : 1 U,
Remote : 1 U,
Wireless Mic : 2 U,
Power Cord : 1 U,
Type-C Cable : 2 U,
Input Cable : 1 U,
QR Code Guide : 1 U.

Buttons Description :

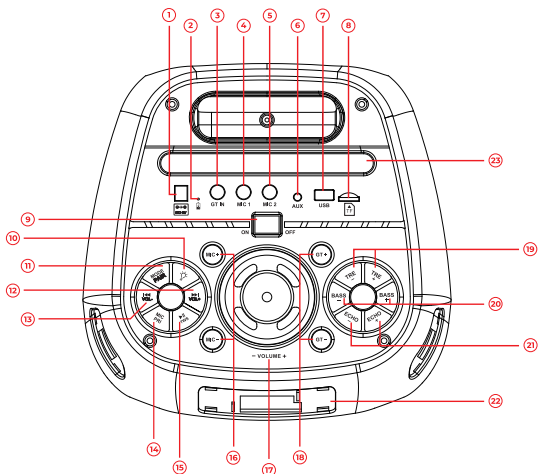

- | | |
|---|--|
| 1. DC Charging Port. | 15. Play/Pause, TWS Function Button. |
| 2. LED Indicator. | 16. Mic Volume Increase /Decrease. |
| 3. GT IN Port. | 17. Master Volume knob . |
| 4. Mic 1 Port. | 18. Guitar Volume Increase /Decrease button. |
| 5. Mic 2 Port. | 19. Treble Increase /Decrease Button. |
| 6. AUX Port. | 20. Bass Increase /Decrease Button. |
| 7. USB Port . | 21. Echo Increase /Decrease Button. |
| 8. mSD Port. | 22. LED Display. |
| 9. Power Switch ON/OFF. | 23. Mobile Holder. |
| 10. RGB Light Button. | |
| 11. Mode Button . | |
| 12. Volume Increase/Next Channel Button. | |
| 13. Volume Decrease /Previous channel Button. | |
| 14. Mic Priority. | |

Remote Description:



1.Power On/Off.

2.Numeric Buttons (0-9).

3.MUTE Button.

4.REC Button.

5.U/TF Button.

6.REP Button.

7.Play or Pause Button.

8.Previous track Button.

9.Next track Button.

10.MODE Button.

11.AUX Button.

12.FM Button.

13.VOL+ Button.

14.VOL- Button.

15.EQ Button.

General Instructions:

BT Connectivity:

- Switch the source to BT mode.
- Turn on BT on your mobile and scan for nearby BT devices.
- Tap on "**ZEB-Thump 804**" to connect.

USB/mSD Mode:

- Insert the **USB/mSD card** into the slot provided on the speaker.
- The speaker will automatically detect the **USB/mSD card** and the supported audio content will be played from it.

Note:

This mode isn't selectable on the speaker or remote control unless a **USB/mSD card** is connected.

FM Radio:

- Switch the speaker to FM mode.
- Long press the Play/Pause button to scan the available FM channels.
- Once the scanning is done, the first scanned channel will start playing.

AUX-IN:

- The speaker can be connected to an audio source using a 3.5 to 3.5mm cable.
- Connect one end of the cable to the AUX-In port on the speaker and the other end to an audio source.
- The audio from the source can be played through the speaker

TWS Function:

- Turn on both "**ZEB-Thump 804**" speakers in BT mode. Press and hold the Play/Pause button for **2 seconds** on any one of the speakers to initiate TWS pairing.

- After a few seconds, both speakers will get connected successfully.
- Now search for a nearby BT device on your mobile phone or other source device and tap on BT name "**ZEB-Thump 804**" to connect. To exit TWS mode, press and hold the Play/Pause button for **3-5 seconds**.

Recording Function:

- To record mic input, first plug in a **USB/mSD card** into the speaker. It will act as a storage device.
- Press the **REC** Button on the remote to start/stop recording.

Charging Instruction:

- Connect the powercord to the speaker & connect the other end to power supply.

Charging Indication:

- Red LED on the Top panel of the speaker glows & charging indication will be displayed on the Speaker LED Display.